

## COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

## SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

 Sell For Cash  Get Credit  Receive a Trade-In Deal

## OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock **New**, **New Surplus**, **Refurbished**, and **Reconditioned** NI Hardware.



*Bridging the gap between the manufacturer and your legacy test system.*

 1-800-915-6216

 [www.apexwaves.com](http://www.apexwaves.com)

 [sales@apexwaves.com](mailto:sales@apexwaves.com)

*All trademarks, brands, and brand names are the property of their respective owners.*

**Request a Quote**

 **CLICK HERE**

**PXIe-1092**

# INSTALLATION GUIDE

# PXIe-1092™ Fan Replacement

This document describes how to remove and install the fan assemblies in a PXIe-1092 chassis.



**Caution** Disconnect all power cables and wait at least 30 seconds prior to replacing fan assemblies.

## Replacing the PXI Module Fan Assembly

Before attempting to replace the rear module fan assembly, verify that there is adequate clearance behind the chassis. Disconnect all power cables from the power supplies on the back of the chassis. Wait at least 30 seconds for the power supplies' internal power to dissipate.


Follow these steps to remove the rear fan assembly:

1. Using a Phillips screwdriver, remove the six #6-32 mounting screws and #8-32 ground screw that attach the fan panel to the chassis. Refer to Figure 1 for more details.
2. Remove the rear chassis feet.
3. With the internal fan harness still connected, carefully pull and rotate fan assembly from rear cavity of chassis. Use caution when removing the fan assembly to avoid damaging the fan wire harness.
4. Disconnect fan harness from the internal chassis receptacle as shown in Figure 2.

Follow these steps to install a new rear fan assembly:

1. Angle the fan assembly to install the fan harness plug into the internal chassis receptacle. Use care to avoid damaging the fan harness or receptacle.
2. Connect the internal fan harness and install fan assembly into the rear cavity of the chassis as shown in Figure 2. Use caution when installing the fan panel assembly to avoid pinching or damaging the wire harness.
3. Replace chassis feet.
4. Using a Phillips screwdriver, tighten the six #6-32 mounting screws and #8-32 ground screw into the rear of the chassis. To meet the shock and vibration specifications listed in the *PXIe-1092 Specifications*, tighten screws to 11.5 lb · in. (1.3 N · m) of torque.


**Figure 1. Replacing the Rear Fan Assembly**

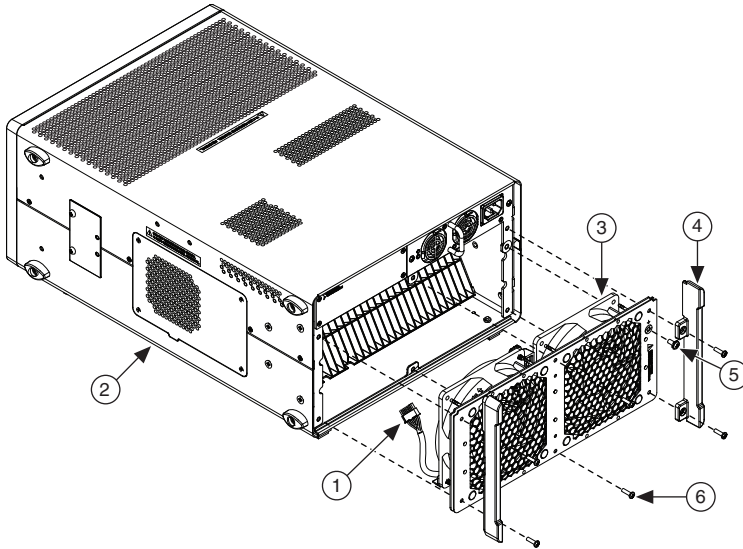

- 1 Fan Harness Plug
- 2 PXIe-1092 Chassis
- 3 PXI Module Fan Assembly

- 4 Rear Chassis Feet (2x)
- 5 Ground Screw
- 6 Mounting Screws (6x)

**Figure 2. Internal Fan Harness**

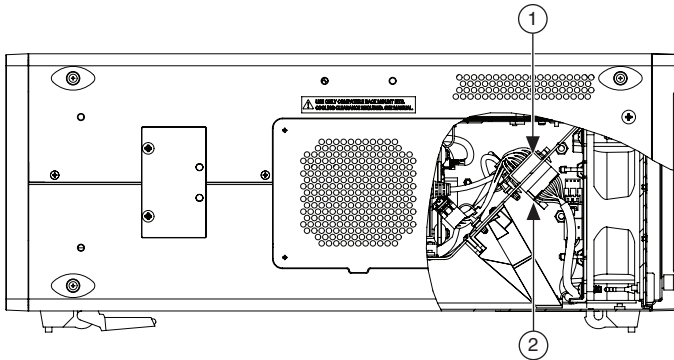

- 1 Fan Receptacle

- 2 Fan Harness Plug

## Replacing the Side Fan Assembly

Before attempting to replace the side fan assembly, verify that there is adequate clearance to the side of the chassis. Disconnect all power cables from the power supplies on the back of the chassis. Wait at least 30 seconds for the power supplies' internal power to dissipate.


Complete the following steps to remove the side fan assembly:

1. Using a Phillips screwdriver, remove the four #4-40 mounting screws that attach the side fan cover.
2. Remove the side fan cover from chassis.
3. Using a Phillips screwdriver, remove the two #2-56 mounting screws that hold the side fan assembly onto the chassis.
4. Locate the side fan assembly harness in the internal chassis cavity and disconnect the fan from the chassis receptacle. Use caution when removing the fan assembly to avoid damaging the internal wire harness.
5. Pull the side fan assembly straight from chassis and remove.

Complete the following steps to install a new side fan assembly.

1. Plug the side fan assembly plug into the internal chassis fan receptacle.
2. Set the side fan assembly into the chassis side fan cavity. Use caution when placing the wire harness into the chassis to avoid damaging the internal or fan wire harness.
3. Using a Phillips screwdriver, hand tighten the two #2-56 side assembly mounting screws to the chassis. To meet the shock and vibration specifications listed in the *PXIe-1092 Specifications*, tighten screws to 5.0 lb · in. (0.6 N · m) of torque. Use the side fan cutout to pull clear extra cable from chassis side panels to prevent pinching.
4. Place all extra cable into chassis side fan cavity.
5. Using a Phillips screwdriver, tighten the four #4-40 side fan cover mounting screws to the chassis. To meet the shock and vibration specifications listed in the *PXIe-1092 Specifications*, tighten screws to 6.7 lb · in. (0.8 N · m) of torque.

**Figure 3. Replacing the Side Fan Assembly**

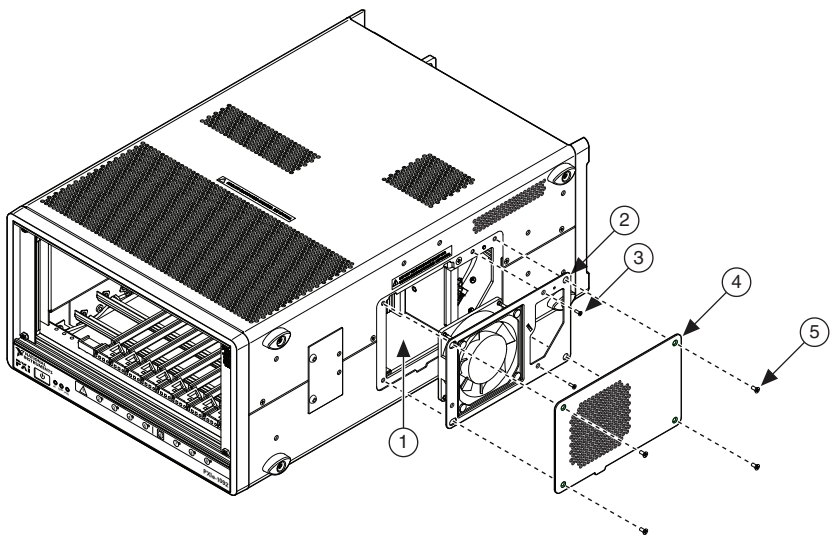

- |   |                                       |
|---|---------------------------------------|
| 1 Chassis Side Fan Cavity               | 4 Side Fan Cover                      |
| 2 Side Fan Assembly                     | 5 Side Fan Cover Mounting Screws (4x) |
| 3 Side Fan Bracket Mounting Screws (2x) |                                       |

# Worldwide Support and Services

---

The NI website is your complete resource for technical support. At [ni.com/support](http://ni.com/support) you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

Visit [ni.com/services](http://ni.com/services) for NI Factory Installation Services, repairs, extended warranty, and other services.

Visit [ni.com/register](http://ni.com/register) to register your NI product. Product registration facilitates technical support and ensures that you receive important information updates from NI.

A Declaration of Conformity (DoC) is our claim of compliance with the Council of the European Communities using the manufacturer's declaration of conformity. This system affords the user protection for electromagnetic compatibility (EMC) and product safety. You can obtain the DoC for your product by visiting [ni.com/certification](http://ni.com/certification). If your product supports calibration, you can obtain the calibration certificate for your product at [ni.com/calibration](http://ni.com/calibration).

NI corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. NI also has offices located around the world. For telephone support in the United States, create your service request at [ni.com/support](http://ni.com/support) or dial 1 866 ASK MYNI (275 6964). For telephone support outside the United States, visit the Worldwide Offices section of [ni.com/niglobal](http://ni.com/niglobal) to access the branch office websites, which provide up-to-date contact information, support phone numbers, email addresses, and current events.

Information is subject to change without notice. Refer to the *NI Trademarks and Logo Guidelines* at [ni.com/trademarks](http://ni.com/trademarks) for more information on NI trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering NI products/technology, refer to the appropriate location: **Help»Patents** in your software, the `patents.txt` file on your media, or the *National Instruments Patents Notice* at [ni.com/patents](http://ni.com/patents). You can find information about end-user license agreements (EULAs) and third-party legal notices in the readme file for your NI product. Refer to the *Export Compliance Information* at [ni.com/legal/export-compliance](http://ni.com/legal/export-compliance) for the NI global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data. NI MAKES NO EXPRESS OR IMPLIED WARRANTIES AS TO THE ACCURACY OF THE INFORMATION CONTAINED HEREIN AND SHALL NOT BE LIABLE FOR ANY ERRORS. U.S. Government Customers: The data contained in this manual was developed at private expense and is subject to the applicable limited rights and restricted data rights as set forth in FAR 52.227-14, DFAR 252.227-7014, and DFAR 252.227-7015.

© 2019 National Instruments. All rights reserved.