COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

Sell For Cash Get Credit Receive a Trade-In Deal

OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.



Bridging the gap between the manufacturer and your legacy test system.

1-800-915-6216



www.apexwaves.com

sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote



FP-3000

OPERATING INSTRUCTIONS



FP-3000

FieldPoint Fieldbus Network Module

Field**Point**

This document provides a quick guide to install and configure the FP-3000 network module. For more detailed information on using the network module, refer to the FP-3000 user manual.

Features

- FOUNDATION Fieldbus H1 interface to control network
- Runs on 11 to 30 VDC power
- Built-in high efficiency power supply powers I/O modules
- -40 to +60 °C operation

Kit Contents and Optional Equipment

Your kit contains the following items:

- FP-3000 network module
- Accessories: protective connector cover, two DIN rail stops, Device Description diskette

You can order the following optional equipment from National Instruments:

- Panel mount accessory, part number 777609-01
- Terminal bases and I/O modules, complete list of terminal bases and I/O modules in the National Instruments online catalog at www.natinst.com
- Cables
- 24 VDC power supply

Installation



Caution To avoid damaging the FP-3000 and the terminal bases, make sure that power is not applied to the FP-3000 while you install or remove terminal bases.


Follow these steps to install the FP-3000:

1. Use a flat-bladed screwdriver to open the DIN rail clip to the unlocked position, as shown in Figure 1.



Figure 1. DIN Rail Clip

- Mount the FP-3000 onto a 35 mm DIN rail or onto a panel mount accessory.
 - Installing onto a DIN rail:
 - a. Hook the lip on the rear of the FP-3000 onto the top of a 35 mm DIN rail and press the FP-3000 down onto the DIN rail, as shown in Figure 2.

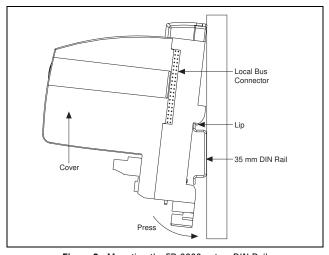

 $\textbf{Figure 2.} \ \ \text{Mounting the FP-3000 onto a DIN Rail}$

- Slide the FP-3000 to the desired position along the DIN rail.
- c. Lock the rail clip.
- Installing onto a panel mount accessory, which you can order separately from National Instruments:
 - a. Snap the panel mount accessory onto the module as shown in Figure 3.

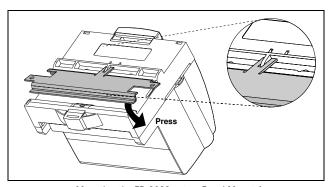


Figure 3. Mounting the FP-3000 onto a Panel Mount Accessory

- b. Lock the rail clip.
- c. Mount the FP-3000 and panel mount accessory onto the desired surface. You can drill pilot holes using the directions in the *FieldPoint Network Module Panel Mount Accessory* installation guide.
- Add terminal bases with their local bus connectors firmly mated to the FP-3000 local bus connector.
- Place the protective cover over the local bus connector of the last terminal base in the bank. Figure 4 shows an installed FP-3000 network module on a DIN rail.

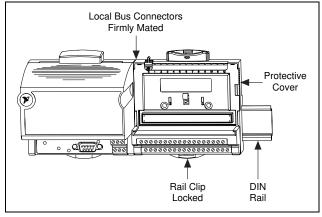


Figure 4. Network Module and Terminal Base Mounted on a DIN Rail

Network Connection

Connect the FP-3000 to a Fieldbus network using the 9-position DSub connector on the FP-3000. The pinout of the DSub connector is shown in Figure 5.

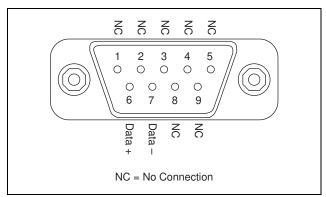


Figure 5. Dsub Connector Pinout

Powering the FP-3000



Caution Connect the FP-3000 to the terminal base before applying power to the FP-3000 to avoid damaging the FP-3000 or a terminal base.

An 11-30 VDC power supply is required by each FP-3000 on your network. The FP-3000 filters and regulates this supplied power and provides power for all the I/O modules in the bank. Therefore, you do not need to provide power separately to each FieldPoint I/O module in the bank. If your field I/O devices need to be powered separately, you can use the terminals provided on each terminal base for such power supply connections.

The power connector is a 6-pin screw terminal connector whose pinout is shown in Figure 6.

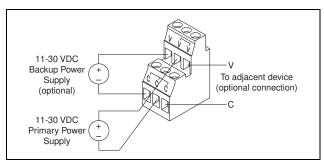


Figure 6. FP-3000 Power Connector Pinout

Connect the primary power supply to the center V and C pair. You can connect an optional backup power supply to the left V and C pair. The right V and C pair provides a convenient means of connecting power to the V and C terminals of a terminal base. Figure 6 shows this optional connection.

Specifications

FP-3000	FOUNDATION Fieldbus H1
Integrity	Checksum
Power supply range	11 to 30 VDC
Maximum terminal bases/bank	9

Maximum banks/fieldbus	
Segment (without repeaters)32	2
Power consumption6	·
co	onsumption)
Operating temperature	40 to +60 °C
Storage temperature	55 to +100 °C
Relative humidity59	% to 90% non-condensing

CE Mark Compliance

This product meets applicable EU directive(s) as follows:

EMC directive

Immunity	EN 50082-1:1994
Emissions	EN 55011:1991 Group I
	Class A at 10 meters

Mechanical Dimensions

Figure 7 shows the mechanical dimensions of the FP-3000. Dimensions are given in inches [millimeters].

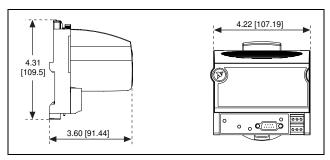


Figure 7. Mechanical Dimensions

322170B-01

Jun99