COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs. We Sell For Cash We Get Credit We Receive a Trade-In Deal

OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.

APEX WAVES

Bridging the gap between the manufacturer and your legacy test system.

1-800-915-6216
www.apexwaves.com
sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote CLICK HERE NI-9482



Board Assembly Part Number(s)

Part Number	Description
155304A-01L	SCREW TERMINAL GENERAL PURPOSE 4-CH SPST RELAY MODULE
155304A-06L	SPRING TERMINAL GENERAL PURPOSE 4-CH SPST RELAY MODULE
155304A-02L	BOARD ONLY SCREW TERMINAL GENERAL PURPOSE 4-CH SPST RELAY MODULE

Manufacturer: National Instruments

Volatile Memory

Туре	Size	User Accessible/ System Accessible ¹	Battery Backup?	Purpose	Method of Clearing		
NONE							
Non-Volatile Memory							
Туре	Size	User Accessible/ System Accessible	Battery Backup?	Purpose	Method of Clearing		
EEPROM	1 KB	No/Yes	No	Module ID	None available to user ²		
Media Stor	age						
Туре	Size	User Accessible/ System Accessible	Battery Backup?	Purpose	Method of Clearing		

NONE

¹ Items are designated **No** for the following reason(s):

a) Hardware changes or a unique software tool from National Instruments are required to modify contents of the memory listed.

b) Hardware-modifying software tools are not distributed to customers for any personal access or customization, also known as non-normal use.

² The designation *None Available to User* indicates that the ability to clear this memory is not available to the user under normal operation. The utilities required to clear the memory are not distributed by National Instruments to customers for normal use.



Terms and Definitions

User Accessible Allows the user to directly write or modify the contents of the memory during normal instrument operation.

System Accessible Does not allow the user to access or modify the memory during normal instrument operation. However, system accessible memory may be accessed or modified by background processes. This can be something that is not deliberate by the user and can be a background driver implementation, such as storing application information in RAM to increase speed of use.

Cycle Power The process of completely removing power from the device and its components. This process includes a complete shutdown of the PC and/or chassis containing the device; a reboot is not sufficient for the completion of this process.

Volatile Memory Requires power to maintain the stored information. When power is removed from this memory, its contents are lost.

Non-Volatile Retains its contents when power is removed. This type of memory typically contains calibration or chip configuration information, such as power up states.