

COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

 Sell For Cash  Get Credit  Receive a Trade-In Deal

OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock **New**, **New Surplus**, **Refurbished**, and **Reconditioned** NI Hardware.



Bridging the gap between the manufacturer and your legacy test system.

 1-800-915-6216

 www.apexwaves.com

 sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote

 **CLICK HERE**

SH68-C68-S

68M-50F STEP/SERVO BULKHEAD CABLE ADAPTER

Thank you for purchasing a 68M-50F step/servo bulkhead cable adapter.

Using the 68M-50F step/servo bulkhead cable adapter, you can connect a 68-pin motion controller to a 50-pin motion accessory, or you can connect a 50-pin ValueMotion controller to a 68-pin motion accessory. You set switches to configure the adapter for stepper or servo operation, as well as to set each axis as either a trigger input or a breakpoint output.

Configuring Your Adapter

Make sure the power is off to the controller and the accessory before setting the switches.

Figure 1 shows the location of the switches on the adapter.

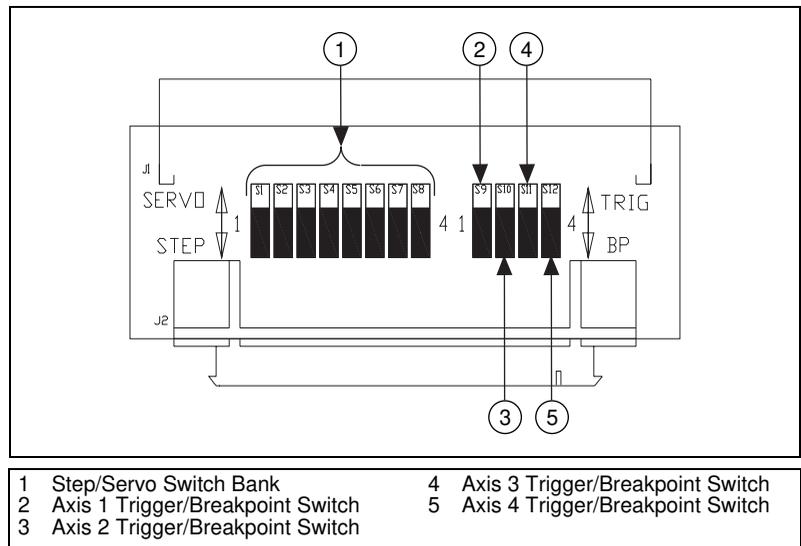


Figure 1. 68M-50F Adapter Switch Locations

Step/Servo Configuration

You must set all of the step/servo switches to match your motor type. Refer to Figure 1 for the location of the step/servo switches. If you are controlling a stepper motor, set *all* of the switches to STEP. If you are controlling a servo motor, set *all* of the switches to SERVO.

 
 
 
Breakpoint/Trigger Configuration

You must set the breakpoint/trigger switches to match the desired operation of your motion controller. Refer to Figure 1 for the location of the breakpoint/trigger switches. Each breakpoint/trigger switch is associated with a single axis and can be set individually for either breakpoint output or trigger input operation. Set the switch to TRIG if the axis is used as a trigger input. Set the switch to BP if the axis is used as a breakpoint output.

Installing Your Adapter

You have several options for installing your adapter, depending on the devices you are connecting to each other and the cable that you are using to make the connection. To install the adapter, make sure the power is off to the controller and the accessory, and set the switches as required for your application. Then, refer to Table 1 to determine how to connect your controller to your accessory using the adapter and the appropriate cable. The adapter is shown as a box with an "A" inside it.

Table 1. Adapter Connection Options

Controller Connector	Cable	Accessory Connector
50-pin	 SH68-68-S	68-pin SCSI-II
50-pin	 SH68-C68-S	68-pin VHDCI
68-pin VHDCI	 SH68-C68-S	50-pin
68-pin SCSI-II	 SH68-68-S	50-pin

