#### **COMPREHENSIVE SERVICES**

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

#### **SELL YOUR SURPLUS**

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

Sell For Cash Get Credit Receive a Trade-In Deal

# **OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP**

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.



**Bridging the gap** between the manufacturer and your legacy test system.

0

1-800-915-6216




www.apexwaves.com

sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote

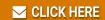

VXI-8345

Contact: 866-275-6964

support@ni.com



## Manufacturer: National Instruments

## **Board Assembly Part Numbers** (Refer to Procedure 1 for identification procedure):

Part Number and Revision	Description
187422A-01 or later	VXI-MXI-3 (VXI-8340, Single Copper Conn.)
187422A-02 or later	VXI-MXI-3 (VXI-8345, Single Fiber Conn.)
187422A-03 or later	VXI-MXI-3 (VXI-8340, Dual Copper Conn.)
187422A-04 or later	VXI-MXI-3 (VXI-8345, Dual Fiber Conn.)

## **Volatile Memory**

Town of Dodg	T	C:	Battery	User <sup>1</sup>	System	Sanitization
Target Data	Type	Size	Backup	Accessible	Accessible	Procedure
Transferred data	SDRAM	32K x 8	No	Yes	Yes	Cycle Power
		(4 ea)				
VXI configuration registers	MANTIS (x2)	512 B	No	Yes	Yes	Cycle power
VXI configuration registers	MITE	16 KB	No	Yes	Yes	Cycle power

## Non-Volatile Memory (incl. Media Storage)

			Battery	User	System	Sanitization
Target Data	Type	Size	Backup	Accessible	Accessible	Procedure
MITE and MANTIS	EEPROM	64 KB	No	Yes	Yes	Procedure 2
Configuration data						
PCI-PCI bridge data	EEPROM	2 KB	No	No	Yes	None
Board Logic	CPLD	Altera	No	No	No	None
		EPM7160S				
Board Logic	CPLD	Altera	No	No	No	None
		EPM7064S				
I/O Decoder	GAL	Lattice	No	No	No	None
		GAL16V8				

<sup>&</sup>lt;sup>1</sup> Refer to *Terms and Definitions* section for clarification of *User* and *System Accessible* 

Contact: 866-275-6964

support@ni.com



#### **Procedures**

## **Procedure 1 – Board Assembly Part Number identification:**

To determine the Board Assembly Part Number and Revision, refer to the large label applied to the back surface of your product (on the non-removable aluminum module assembly cover). The Assembly Part Number should be formatted as "#####a-##L".

#### **Procedure 2 – MITE and MANTIS Data EEPROM:**

To clear the user-accessible data from the MITE and MANTIS Data EEPROM, complete the following steps:

- 1. With jumper S1 in the default location (Boot from User Configuration), power on the computer.
- 2. Right-click on the VXI system in MAX and select the Hardware Configuration utility.
- 3. In the General tab under Quick Configuration select Default Configuration.
- 4. Click Yes in the pop up box if you are sure you want to restore the factory defaults.
- 5. Click OK in the hardware configuration panel to save the settings.
- 6. After saving the configuration, restart the system for changes to take effect.

Contact: 866-275-6964

support@ni.com



#### **Terms and Definitions**

## **Cycle Power:**

The process of completely removing power from the device and its components and allowing for adequate discharge. This process includes a complete shutdown of the PC and/or chassis containing the device; a reboot is not sufficient for the completion of this process.

#### **Volatile Memory:**

Requires power to maintain the stored information. When power is removed from this memory, its contents are lost. This type of memory typically contains application specific data such as capture waveforms.

## **Non-Volatile Memory:**

Power is not required to maintain the stored information. Device retains its contents when power is removed. This type of memory typically contains information necessary to boot, configure, or calibrate the product or may include device power up states.

#### User Accessible:

The component is read and/or write addressable such that a user can store arbitrary information to the component from the host using a publicly distributed NI tool, such as a Driver API, the System Configuration API, or MAX.

#### **System Accessible:**

The component is read and/or write addressable from the host without the need to physically alter the product.

### Clearing:

Per NIST Special Publication 800-88 Revision 1, "clearing" is a logical technique to sanitize data in all User Accessible storage locations for protection against simple non-invasive data recovery techniques using the same interface available to the user; typically applied through the standard read and write commands to the storage device.

#### **Sanitization:**

Per NIST Special Publication 800-88 Revision 1, "sanitization" is a process to render access to "Target Data" on the media infeasible for a given level of effort. In this document, clearing is the degree of sanitization described.