

INSTALLATION GUIDE

4–6 Slot PXI Chassis Handle/Feet Kit

To install the kit, complete the following steps.

1. Remove COA label plate (as required).
2. Install the handle and four rubber feet using eight M4 screws.



Note You can install the handle/feet kit on either side of the chassis.

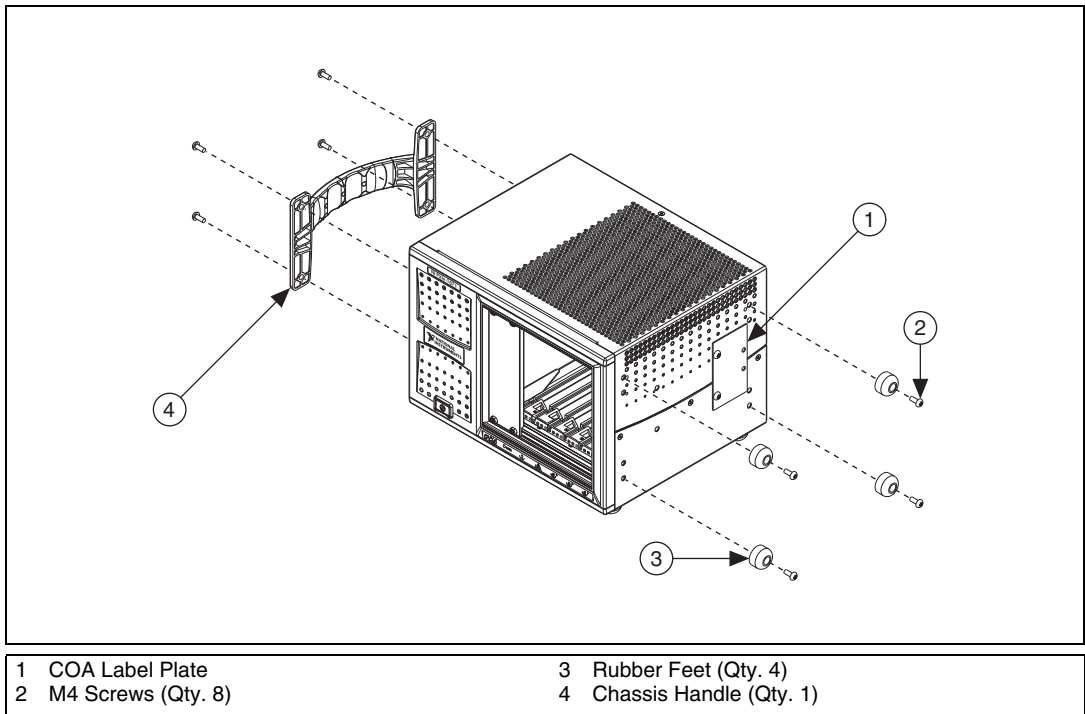


Figure 1. 4–6 Slot PXI Chassis with Optional Handle/Feet Kit

LabVIEW, National Instruments, NI, ni.com, the National Instruments corporate logo, and the Eagle logo are trademarks of National Instruments Corporation. Refer to the *Trademark Information* at ni.com/trademarks for other National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: **Help»Patents** in your software, the `patents.txt` file on your media, or the *National Instruments Patent Notice* at ni.com/patents.