#### **COMPREHENSIVE SERVICES**

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

## **SELL YOUR SURPLUS**

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

Sell For Cash Get Credit Receive a Trade-In Deal

## **OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP**

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.



**Bridging the gap** between the manufacturer and your legacy test system.

0

1-800-915-6216



www.apexwaves.com

sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.


Request a Quote



sbRIO-9207

# OPERATING INSTRUCTIONS AND SPECIFICATIONS NI 9207E

16-Channel, ±20 mA/±10 V, 24-Bit Analog Input Module

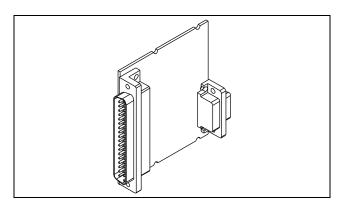



This document describes how to use the National Instruments 9207E and includes dimensions, pin assignments, and specifications for the NI 9207E. Visit ni.com/info and enter rdsoftwareversion to determine which software you need for the modules you are using. For information about installing, configuring, and programming the system, refer to the system documentation. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.



**Caution** National Instruments makes no electromagnetic compatibility (EMC) or CE marking compliance claims for the NI 9207E. The end-product supplier is responsible for conformity to any and all compliance requirements.



**Caution** The NI 9207E must be installed inside a suitable enclosure prior to use. Hazardous voltages may be present.

## NI 9207E Dimensions

The following figure shows the dimensions of the NI 9207E.

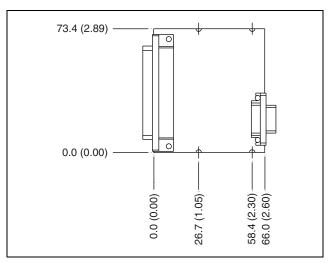


Figure 1. NI 9207E Dimensions in Millimeters (Inches)

## Connecting the NI 9207E

The NI 9207E has a 37-pin DSUB connector that provides connections for 16 analog input channels: 8 voltage and 8 current.

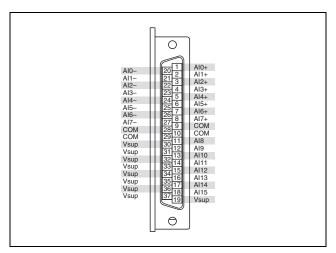


Figure 2. NI 9207E Pin Assignments

Each voltage channel has an AI+ pin and an AI- pin to which you can connect a voltage signal. Each current channel has an AI pin to which you can connect a current signal. The NI 9207E also has nine  $V_{\text{sup}}$  pins, one for connecting an external power supply, and one for each current channel. There are also four common pins, COM, that are internally connected to the isolated ground reference of the module.

The input signals are scanned, amplified, conditioned, and then sampled by a single 24-bit ADC. The module provides overvoltage protection for each channel. Only one channel can be in an overvoltage condition at a time. Refer to the *Specifications* section for information about overvoltage protection. Refer to Figure 3 for an illustration of the input circuitry on the NI 9207E.

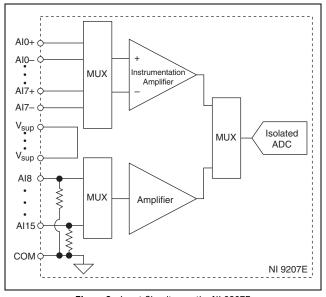


Figure 3. Input Circuitry on the NI 9207E

## **Connecting Voltage Channels**

You can connect differential or single-ended voltage signals to the NI 9207E voltage channels.

## Connecting Differential Voltage Signals to the NI 9207E

You can connect grounded or floating differential signals to the NI 9207E voltage channels. Connect the positive voltage signal to AI+ and the negative voltage signal to AI-. To connect grounded differential signals to the NI 9207E, you must also connect the signal reference to COM, as shown in Figure 4.

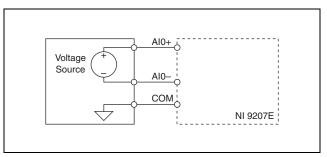


Figure 4. Connecting a Grounded Differential Voltage Signal to the NI 9207E

To connect floating differential signals to the NI 9207E, you must connect the negative lead of the signal to COM through a 1  $M\Omega$  resistor to keep the voltage source within the common-mode voltage range, as shown in Figure 5. If the voltage source is outside of the common-mode range, then the NI 9207E does not read data accurately. For more information about the common-mode voltage range, refer to the *Specifications* section.

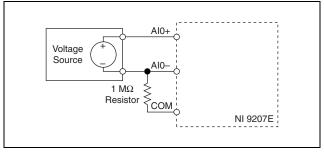


Figure 5. Connecting a Floating Differential Voltage Signal to the NI 9207E

## Connecting Single-Ended Voltage Signals to the NI 9207E

To connect single-ended voltage signals to the NI 9207E, you must also connect the voltage ground signal to COM to keep the common-mode voltage in the specified range, as shown in Figure 6. For more information about the common-mode voltage range, refer to the *Specifications* section.

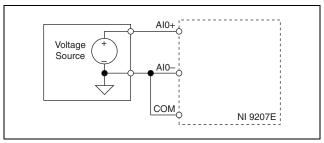


Figure 6. Connecting a Single-Ended Voltage Signal to the NI 9207E

## **Connecting Current Channels**

You can connect an external power supply to the NI 9207E. This power supply provides the current for the devices you connect to the module. Connect the positive lead of the power supply to a  $V_{sup}$  pin and the negative lead of the power supply to COM. Install a 2 A maximum, fast-acting fuse between the external power supply and the  $V_{sup}$  pin. Refer to the *Specifications* sections for more information about the  $V_{sup}$  pins.



**Note** The  $V_{\text{sup}}$  pins are internally connected to each other. You can connect only one external voltage supply to the device.



**Caution** Do *not* remove or insert modules if the external power supply connected to the  $V_{sup}$  and COM pins is powered on.

You can connect single-ended current signals to the NI 9207E, including loop-powered and three-wire current transducers. Connect the output of the current signal to the AI pin of the channel and the voltage supply of the current signal to  $V_{sup}$ . For a three-wire transducer, also connect the common of the device to COM. Refer to Figures 7 and 8 for illustrations of how to connect loop-powered and three-wire current transducers to the NI 9207E.

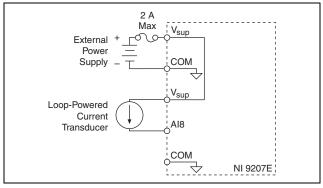


Figure 7. Connecting a Loop-Powered Current Transducer to the NI 9207E

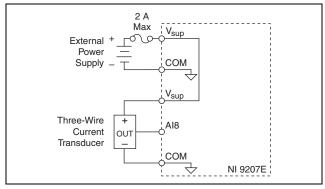


Figure 8. Connecting a Three-Wire Current Transducer to the NI 9207E

## Sleep Mode

This module supports a low-power sleep mode. Support for sleep mode at the system level depends on the chassis that the module is plugged into. Refer to the chassis manual for information about support for sleep mode. If the chassis supports sleep mode, refer to the software help for information about enabling sleep mode. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.

Typically, when a system is in sleep mode, you cannot communicate with the modules. In sleep mode, the system consumes minimal power and may dissipate less heat than it does in normal mode. Refer to the *Specifications* section for more information about power consumption and thermal dissipation.

## **Specifications**

The following specifications are typical for the range -40 to 85 °C internal to any enclosures unless otherwise noted. All voltages are relative to COM unless otherwise noted.

## **Input Characteristics**

Number of channels	16 analog input channels: 8 voltage and 8 current
ADC resolution	.24 bits
Type of ADC	Delta-Sigma
Sampling mode	Scanned
Input range	
Voltage channels	
Minimum	.±10.2 V
Typical	.±10.4 V
Current channels	
Minimum	.±21.5 mA
Typical	.±22.0 mA

$\label{eq:maximum working voltage for analog inputs} \\ \text{(signal voltage + common-mode voltage),} \\ \text{voltage channels only } \\ \text{Each channel must remain} \\ \text{within } \pm 10.2 \text{ V of common} \\$		
.52 ms		
.2 ms		
±30 V max on one channel at a time		
2 A max		
30 V max		
>1 GΩ		
85 Ω		

## Accuracy, voltage channels

Measurement Conditions	Percent of Reading (Gain Error)	Percent of Range* (Offset Error)
Calibrated max (-40 to 85 °C)	±0.52%	±0.04%
* Range equals 10.4 V		

### Accuracy, current channels

Measurement Conditions	Percent of Reading (Gain Error)	Percent of Range* (Offset Error)
Calibrated max (-40 to 85 °C)	±0.87%	±0.05%
* D 1 22 0 4		

Range equals 22.0 mA

## Input noise Voltage channels High-resolution mode ......... 16 $\mu V_{rms}$ High-speed mode ...... 80 µV<sub>rms</sub> Current channels High-resolution mode ......... 50 nA<sub>rms</sub> High-speed mode ......200 nA<sub>rms</sub> Stability Voltage channels Gain drift.....±21 ppm/°C Offset drift..... $\pm 14 \,\mu\text{V/}^{\circ}\text{C}$ Current channels Gain drift.....±43 ppm/°C Offset drift.....±30 nA/°C CMRR ( $f_{in} = 0$ to 60 Hz), voltage channels only ...... 86 dB NMRR (High-resolution mode only) 50 Hz ......66 dB

60 Hz ......68 dB

MTBF	
	MTBF or MIL-HDBK-217F
	specifications.

## **Power Requirements**

Power consumption from chas	ssis
Active mode	295 mW max
Sleep mode	25 µW max
Thermal dissipation (at -40 °C	C)
Active mode	0.75 W max
Sleep mode	0.59 W max

## **Physical Characteristics**

Use a dry, low-velocity stream of air to clean the module. If needed, use a soft-bristle brush for cleaning around components.



**Note** For two-dimensional drawings and three-dimensional models of the C Series module and connectors, visit ni.com/dimensions and search by module number.

Weight......45 g (1.6 oz)

## Safety

## Safety Voltages

Connect only voltages that are within the following limits.

Channel-to-COM ......±30 V max on one channel at a time

Isolation

Channel-to-channel ......None

Channel-to-earth ground

Continuous ...... 60 VDC,

Measurement Category I, (Double insulation)

Measurement Category I is for measurements performed on circuits not directly connected to the electrical distribution system referred to as *MAINS* voltage. MAINS is a hazardous live electrical supply system that powers equipment. This category is for measurements of voltages from specially protected secondary circuits. Such voltage measurements include signal levels, special

equipment, limited-energy parts of equipment, circuits powered by regulated low-voltage sources, and electronics.



**Caution** Do *not* connect the NI 9207E to signals or use for measurements within Measurement Categories II, III, or IV.

#### Safety Standards

This product meets the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use when installed in a suitable enclosure:

- IEC 61010-1, EN 61010-1
- UL 61010-1, CSA 61010-1



**Note** For UL and other safety certifications, refer to the product label or the *Online Product Certification* section.

#### **Online Product Certification**

Refer to the product Declaration of Conformity (DoC) for additional regulatory compliance information. To obtain product certifications and the DoC for this product, visit ni.com/certification, search by module number or product line, and click the appropriate link in the Certification column.

#### **Environmental**

National Instruments C Series modules are intended for indoor use only but may be used outdoors if installed in a suitable enclosure. Refer to the manual for the chassis you are using for more information about meeting these specifications.

Operating temperature (IEC 60068-2-1, IEC 60068-2-2)	.–40 to 85 °C
Storage temperature (IEC 60068-2-1, IEC 60068-2-2)	.–40 to 85 °C
Operating humidity (IEC 60068-2-56)	. 10 to 90% RH, noncondensing
Storage humidity	
(IEC 60068-2-56)	.5 to 95% RH,
	noncondensing
Maximum altitude	. 2,000 m
Pollution Degree	. 2

## **Environmental Management**

National Instruments is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial to the environment and to NI customers.

For additional environmental information, refer to the *NI* and the *Environment* Web page at ni.com/environment. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document.

## Waste Electrical and Electronic Equipment (WEEE)



**EU Customers** At the end of the product life cycle, all products *must* be sent to a WEEE recycling center. For more information about WEEE recycling centers, National Instruments WEEE initiatives, and compliance with WEEE Directive 2002/96/EC on Waste and Electronic Equipment, visit ni.com/environment/weee.

#### 电子信息产品污染控制管理办法 (中国 RoHS)



(全) 中国客户 National Instruments 符合中国电子信息 产品中限制使用某些有害物质指令 (RoHS)。关于 National Instruments 中国 RoHS 合规性信息,请登录 ni.com/environment/rohs\_china。 (For information about China RoHS compliance, go to ni.com/ environment/rohs\_china.)

#### Calibration

You can obtain the calibration certificate and information about calibration services for the NI 9207E at ni.com/calibration. 

## Where to Go for Support

The National Instruments Web site is your complete resource for technical support. At ni.com/support you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

National Instruments corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. National Instruments also has offices located around the world to help address your support needs. For telephone support in the United States, create your service request at ni.com/support and follow the calling instructions or dial 512 795 8248. For telephone support outside the United States, contact your local branch office:

Australia 1800 300 800, Austria 43 662 457990-0, Belgium 32 (0) 2 757 0020, Brazil 55 11 3262 3599, Canada 800 433 3488, China 86 21 5050 9800, Czech Republic 420 224 235 774, Denmark 45 45 76 26 00, Finland 358 (0) 9 725 72511, France 01 57 66 24 24, Germany 49 89 7413130, India 91 80 41190000, Israel 972 3 6393737, Italy 39 02 41309277, Japan 0120-527196,

Korea 82 02 3451 3400, Lebanon 961 (0) 1 33 28 28, Malaysia 1800 887710, Mexico 01 800 010 0793, Netherlands 31 (0) 348 433 466, New Zealand 0800 553 322, Norway 47 (0) 66 90 76 60, Poland 48 22 328 90 10, Portugal 351 210 311 210, Russia 7 495 783 6851, Singapore 1800 226 5886, Slovenia 386 3 425 42 00, South Africa 27 0 11 805 8197, Spain 34 91 640 0085, Sweden 46 (0) 8 587 895 00, Switzerland 41 56 2005151, Taiwan 886 02 2377 2222, Thailand 662 278 6777, Turkey 90 212 279 3031, United Kingdom 44 (0) 1635 523545

National Instruments, NI, ni.com, and LabVIEW are trademarks of National Instruments Corporation. Refer to the Terms of Use section on ni.com/legal for more information about National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: Help-Patents in your software, the patents.txt file on your media, or the National Instruments Patent Notice at ni.com/patents.

© 2009 National Instruments Corp. All rights reserved.