COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

Sell For Cash Get Credit Receive a Trade-In Deal

OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.



Bridging the gap between the manufacturer and your legacy test system.

0

1-800-915-6216



www.apexwaves.com

sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote



PXIe-6355

DEVICE SPECIFICATIONS

NI 6355

X Series Data Acquisition: 80 AI, 1.25 MS/s, 1 MS/s, 16-Bit Resolution, ±10 V, 24 DIO, 2 AO


Français	Deutsch	日本語	한국어	简体中文
		ni.com/manual	Ls	

The following specifications are typical at 25 °C, unless otherwise noted. For more information about the NI 6355, refer to the *X Series User Manual* available at *ni.com/manuals*.

Analog Input

·	
Number of channels	40 differential or 80 single-ended
ADC resolution	16 bits
DNL	No missing codes guaranteed
INL	Refer to the AI Absolute Accuracy section.
Sample rate	
Single channel maximum	1.25 MS/s
Multichannel maximum	1.00 MS/s
Minimum	No minimum
Timing resolution	10 ns
Timing accuracy	50 ppm of sample rate
Input coupling	DC
Input range	±0.1 V, ±0.2 V, ±0.5 V, ±1 V, ±2 V, ±5 V, ±10 V
Maximum working voltage for analog inputs (signal + common mode)	±11 V of AI GND
CMRR (DC to 60 Hz)	100 dB



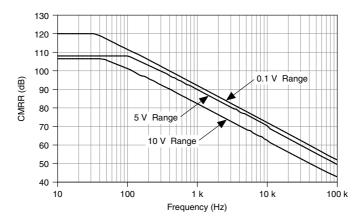


$>$ 10 G Ω in parallel with 100 pF
$>$ 10 G Ω in parallel with 100 pF
820 Ω
820 Ω
±100 pA
-75 dB
-88 dB
1.7 MHz
4,095 samples
4,095 entries
DMA (scatter-gather), programmed I/O
nd sense channels
±25 V for up to two AI pins
±15 V for up to two AI pins
±20 mA max/AI pin

Settling Time for Multichannel Measurements

Range	±60 ppm of Step (±4 LSB for Full-Scale Step)	±15 ppm of Step (±1 LSB for Full-Scale Step)
± 10 V, ±5 V, ±2 V, ±1 V	1 μs	1.5 μs
±0.5 V	1.5 μs	2 μs
±0.2 V, ±0.1 V	2 μs	8 μs

Figure 2. Settling Time versus Time for Different Source Impedances

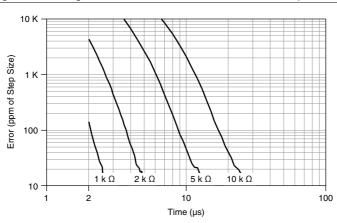

Al Absolute Accuracy

Table 1. Al Absolute Accuracy

Nominal Range Positive Full Scale	Nominal Range Negative Full Scale	Residual Gain Error (ppm of Reading)	Residual Offset Error (ppm of Range)	Offset Tempco (ppm of Range/°C)	Random Noise, σ (μVrms)	Absolute Accuracy at Full Scale ¹ (μV)
10	-10	48	13	21	281	1520
5	-5	55	13	21	137	800
2	-2	55	13	24	56	320

¹ Refer to the AI Absolute Accuracy Example section.

Table 1. Al Absolute Accuracy (Continued)

Nominal Range Positive Full Scale	Nominal Range Negative Full Scale	Residual Gain Error (ppm of Reading)	Residual Offset Error (ppm of Range)	Offset Tempco (ppm of Range/°C)	Random Noise, σ (μVrms)	Absolute Accuracy at Full Scale ¹ (μV)
1	-1	65	17	27	35	180
0.5	-0.5	68	17	34	26	95
0.2	-0.2	95	27	55	21	50
0.1	-0.1	108	45	90	16	32

Gain tempco	13 ppm/°C
Reference tempco	1 ppm/°C
INL error	46 ppm of range



Note Accuracies listed are valid for up to two years from the device external calibration.

Al Absolute Accuracy Equation

AbsoluteAccuracy = Reading · (GainError) + Range · (OffsetError) + NoiseUncertainty

 $GainError = ResidualGainError + GainTempco \cdot (TempChangeFromLastInternalCal) + ReferenceTempco \cdot (TempChangeFromLastExternalCal)$

 $OffsetError = ResidualOffsetError + OffsetTempco \cdot (TempChangeFromLastInternalCal) \\ + INLError$

NoiseUncertainty = $\frac{\text{Random Noise} \cdot 3}{\sqrt{10,000}}$ for a coverage factor of 3 σ and averaging 10,000 points.

Al Absolute Accuracy Example

Absolute accuracy at full scale on the analog input channels is determined using the following assumptions:

- TempChangeFromLastExternalCal = 10 °C
- TempChangeFromLastInternalCal = 1 °C
- number of readings = 10,000
- CoverageFactor = 3σ

For example, on the 10 V range, the absolute accuracy at full scale is as follows:

GainError = 48 ppm + 13 ppm
$$\cdot$$
 1 + 1 ppm \cdot 10 = 71 ppm

¹ Refer to the AI Absolute Accuracy Example section.

OffsetError = $13 \text{ ppm} + 21 \text{ ppm} \cdot 1 + 46 \text{ ppm} = 80 \text{ ppm}$

NoiseUncertainity =
$$\frac{281 \ \mu V \cdot 3}{\sqrt{10,000}}$$
 = 8.4 μ V

AbsoluteAccuracy = 10 V · (GainError) + 10 V · (OffsetError) + NoiseUncertainity = $1,520 \mu V$

Analog Triggers

Number of triggers	1
Source	AI <079>
Functions	Start Trigger, Reference Trigger, Pause Trigger, Sample Clock, Convert Clock, Sample Clock Timebase
Source level	
AI <079>	±Full scale
APFI 0	±10 V
Resolution	16 bits
Modes	Analog edge triggering, analog edge triggering with hysteresis, and analog window triggering
Bandwidth (-3 dB)	
AI <079>	3.4 MHz
APFI 0	3.9 MHz
Accuracy	±1% of range
APFI 0 characteristics	
Input impedance	10 kΩ
Coupling	DC
Protection, power on	±30 V
Protection, power off	±15 V


Analog Output

Number of channels	2
DAC resolution	16 bits

DNL	±1 LSB
Monotonicty	16-bit guaranteed
Maximum update rate	
1 channel	2.86 MS/s
2 channels	2.00 MS/s
Timing accuracy	50 ppm of sample rate
Timing resolution	10 ns
Output range	$\pm 10~V, \pm 5~V, \pm external~reference~on~APFI~0$
Output coupling	DC
Output impedance	0.2 Ω
Output current drive	±5 mA
Overdrive protection	±25 V
Overdrive current	26 mA
Power-on state	±5 mV
Power-on/off glitch	1.5 V peak for 200 ms
Output FIFO size	8,191 samples shared among channels used
Data transfers	DMA (scatter-gather), programmed I/O
AO waveform modes	Non-periodic waveform, periodic waveform regeneration mode from onboard FIFO, periodic waveform regeneration from host buffer including dynamic update
Settling time, full-scale step, 15 ppm (1 LSB)	2 μs
Slew rate	20 V/μs
Glitch energy at midscale transition, $\pm 10~V$ range	10 nV · s

External Reference

APFI 0 characteristics	
Input impedance	10 kΩ
Coupling	DC
Protection, device on	$\pm 30 \text{ V}$
Protection, device off	± 15 V
Range	± 11 V
Slew rate	20 V/μs

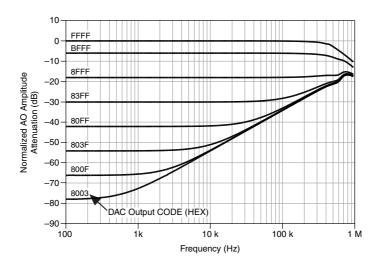

AO Absolute Accuracy

Absolute accuracy at full-scale numbers is valid immediately following self calibration and assumes the device is operating within 10 °C of the last external calibration.

Table 2. AO Absolute Accuracy

Nominal Range Positive Full Scale	Nominal Range Negative Full Scale	Residual Gain Error (ppm of Reading)	Gain Tempco (ppm/°C)	Absolute Accuracy at Full Scale (µV)
10	-10	63	17	1890
5	-5	70	8	935

Reference tempco (ppm/°C)	1
Residual offset error (ppm of range)	33
Offset tempco (ppm of range/°C)	2
INL Error (ppm of range)	64



Note Accuracies listed are valid for up to two years from the device external calibration.

AO Absolute Accuracy Equation

AbsoluteAccuracy = OutputValue · (GainError) + Range · (OffsetError)

GainError = ResidualGainError + GainTempco · (TempChangeFromLastInternalCal) + $Reference Tempco \cdot (TempChange From Last External Cal)$

OffsetError = ResidualOffsetError + OffsetTempco · (TempChangeFromLastInternalCal) + INLError

Digital I/O/PFI

Static Characteristics

Number of channels	24 total, 8 (P0.<07>), 16 (PFI <07>/P1, PFI <815>/P2)
Ground reference	D GND
Direction control	Each terminal individually programmable as input or output
Pull-down resistor	$50~\text{k}\Omega$ typical, $20~\text{k}\Omega$ minimum
Input voltage protection	±20 V on up to two pins



Caution Stresses beyond those listed under the *Input voltage protection* specification may cause permanent damage to the device.

Input FIFO size	255 samples
Output FIFO size	2,047 samples
Resolution	32 bits

Waveform Characteristics (Port 0 Only)

Terminals used	Port 0 (P0.<07>)
Port/sample size	Up to 8 bits
Waveform generation (DO) FIFO	2,047 samples
Waveform acquisition (DI) FIFO	255 samples
DI Sample Clock frequency	0 to 10 MHz, system and bus activity dependent
DO Sample Clock frequency	0 to 10 MHz, system and bus activity dependent
Data transfers	DMA (scatter-gather), programmed I/O
Digital line filter settings	160 ns, 10.24 μs, 5.12 ms, disable

PFI/Port 1/Port 2 Functionality

Functionality	Static digital input, static digital output, timing input, timing output
Timing output sources	Many AI, AO, counter, DI, DO timing signals
Debounce filter settings	90 ns, 5.12 μs, 2.56 ms, custom interval, disable; programmable high and low transitions; selectable per input

Recommended Operation Conditions

Input high voltage (V _{IH})	
Minimum	2.2 V
Maximum	5.25 V
Input low voltage (V _{IL})	
Minimum	0 V
Maximum	0.8 V
Output high current (I _{OH})	
P0.<07>	-24 mA maximum
PFI <015>/P1/P2	-16 mA maximum
Output low current (I _{OL})	
P0.<07>	24 mA maximum
PFI <015>/P1/P2	16 mA maximum

Digital I/O Characteristics

Positive-going threshold (VT+)	2.2 V maximum
Negative-going threshold (VT-)	0.8 V minimum
Delta VT hysteresis (VT+ - VT-)	0.2 V minimum
I_{IL} input low current ($V_{IN} = 0 \text{ V}$)	-10 μA maximum
I_{IH} input high current ($V_{IN} = 5 \text{ V}$)	250 μA maximum

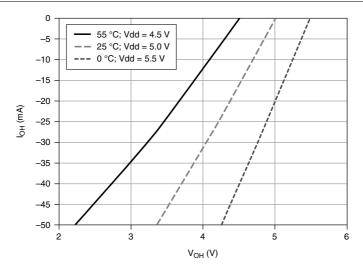
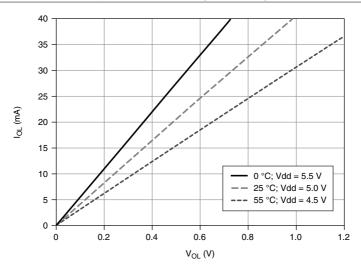


Figure 5. P0.<0..7>: I_{OL} versus V_{OL}




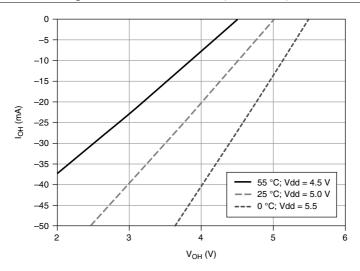


Figure 7. PFI <0..15>/P1/P2: I_{OL} versus V_{OL}

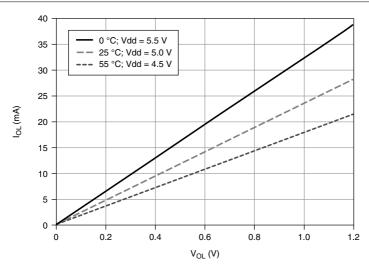

General-Purpose Counters

Number of counter/timers	4
Resolution	32 bits

Counter measurements	Edge counting, pulse, pulse width, semi-period, period, two-edge separation
Position measurements	X1, X2, X4 quadrature encoding with Channel Z reloading; two-pulse encoding
Output applications	Pulse, pulse train with dynamic updates, frequency division, equivalent time sampling
Internal base clocks	100 MHz, 20 MHz, 100 kHz
External base clock frequency	0 MHz to 25 MHz; 0 MHz to 100 MHz on PXIe_DSTAR <a,b></a,b>
Base clock accuracy	50 ppm
Inputs	Gate, Source, HW_Arm, Aux, A, B, Z, Up_Down, Sample Clock
Routing options for inputs	Any PFI, PXIe_DSTAR <a,b>, PXI_TRIG, PXI_STAR, analog trigger, many internal signals</a,b>
FIFO	127 samples per counter
Data transfers	Dedicated scatter-gather DMA controller for each counter/timer, programmed I/O

Frequency Generator

Number of channels	1
Base clocks	20 MHz, 10 MHz, 100 kHz
Divisors	1 to 16
Base clock accuracy	50 ppm

Phase-Locked Loop (PLL)

Number of PLLs 1

Table 3. Reference Clock Locking Frequencies

Reference Signal	PXI Express Locking Input Frequency (MHz)
PXIe_DSTAR <a,b></a,b>	10, 20, 100
PXI_STAR	10, 20
PXIe_CLK100	100

Table 3. Reference Clock Locking Frequencies (Continued)

Reference Signal	PXI Express Locking Input Frequency (MHz)
PXI_TRIG <07>	10, 20
PFI <015>	10, 20

Output of PLL 100 MHz Timebase; other signals derived from 100 MHz Timebase including 20 MHz and 100 kHz Timebases.

External Digital Triggers

Source	Any PFI, PXIe_DSTAR <a,b>, PXI_TRIG, PXI_STAR</a,b>
Polarity	Software-selectable for most signals
Analog input function	Start Trigger, Reference Trigger, Pause Trigger, Sample Clock, Convert Clock, Sample Clock Timebase
Analog output function	Start Trigger, Pause Trigger, Sample Clock, Sample Clock Timebase
Counter/timer functions	Gate, Source, HW_Arm, Aux, A, B, Z, Up_Down, Sample Clock
Digital waveform generation (DO) function	Start Trigger, Pause Trigger, Sample Clock, Sample Clock Timebase
Digital waveform acquisition (DI) function	Start Trigger, Reference Trigger, Pause Trigger, Sample Clock, Sample Clock Timebase

Device-to-Device Trigger Bus

Input source	PXI_TRIG <07>, PXI_STAR, PXIe_DSTAR <a,b></a,b>
Output destination	PXI_TRIG <07>, PXIe_DSTARC
Output selections	10 MHz Clock, frequency generator output, many internal signals
Debounce filter settings	90 ns, 5.12 μs, 2.56 ms, custom interval, disable; programmable high and low transitions; selectable per input

Bus Interface

Form factor	x1 PXI Express peripheral module, specification rev. 1.0 compliant
Slot compatibility	x1 and x4 PXI Express or PXI Express hybrid slots
DMA channels	8: analog input, analog output, digital input, digital output, counter/timer 0, counter/timer 1, counter/timer 2, counter/timer 3

Devices may be installed in PXI Express slots or PXI Express hybrid slots.

Power Requirements



Caution The protection provided by the device can be impaired if the device is used in a manner not described in the *X Series User Manual*.

+3.3 V	1.6 W
+12 V	19.8 W

Current Limits

+5 V terminal (connector 0)	1 A max
P0/PFI/P1/P2 and +5 V terminals combined	1.5 A max

Physical Characteristics

Device dimensions	Standard 3U PXI
Weight	198 g (7.0 oz)
I/O connectors	2 68-pin VHDCI



Caution If you need to clean the module, wipe it with a dry towel.

Calibration (Al and AO)

Recommended warm-up time	15 minutes
Calibration interval	2 years

Maximum Working Voltage

Maximum working voltage refers to the signal voltage plus the common-mode voltage.

Channel to earth 11 V, Measurement Category I	
---	--

Measurement Category I is for measurements performed on circuits not directly connected to the electrical distribution system referred to as MAINS voltage. MAINS is a hazardous live electrical supply system that powers equipment. This category is for measurements of voltages from specially protected secondary circuits. Such voltage measurements include signal levels, special equipment, limited-energy parts of equipment, circuits powered by regulated lowvoltage sources, and electronics.



Caution Do not use for measurements within Categories II, III, or IV.



Note Measurement Categories CAT I and CAT O (Other) are equivalent. These test and measurement circuits are not intended for direct connection to the MAINS building installations of Measurement Categories CAT II, CAT III, or CAT IV.

Shock and Vibration

Operational shock	30 g peak, half-sine, 11 ms pulse (Tested in accordance with IEC-60068-2-27. Test profile developed in accordance with MIL-PRF-28800F.)
Random vibration	
Operating	5 to 500 Hz, 0.3 g _{rms}
Nonoperating	5 to 500 Hz, 2.4 g _{rms} (Tested in accordance with IEC-60068-2-64. Nonoperating test profile exceeds the requirements of MIL-PRF-28800F, Class 3.)

Environmental

0 to 55 °C
-40 to 70 °C
10 to 90% RH, noncondensing
5 to 95% RH, noncondensing
2
2,000 m

Indoor use only.

Safety

This product meets the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use:

- IEC 61010-1. EN 61010-1
- UL 61010-1, CSA 61010-1



Note For UL and other safety certifications, refer to the product label or the *Online* Product Certification section.

Electromagnetic Compatibility

This product meets the requirements of the following EMC standards for electrical equipment for measurement, control, and laboratory use:

- EN 61326-1 (IEC 61326-1): Class B emissions; Basic immunity
- EN 55011 (CISPR 11): Group 1, Class B emissions
- EN 55022 (CISPR 22): Class B emissions
- EN 55024 (CISPR 24): Immunity
- AS/NZS CISPR 11: Group 1, Class B emissions
- AS/NZS CISPR 22: Class B emissions
- FCC 47 CFR Part 15B: Class B emissions
- ICES-001: Class B emissions



Note In the United States (per FCC 47 CFR), Class A equipment is intended for use in commercial, light-industrial, and heavy-industrial locations. In Europe,

Canada, Australia and New Zealand (per CISPR 11) Class A equipment is intended for use only in heavy-industrial locations.



Note Group 1 equipment (per CISPR 11) is any industrial, scientific, or medical equipment that does not intentionally generate radio frequency energy for the treatment of material or inspection/analysis purposes.



Note For EMC declarations and certifications, and additional information, refer to the Online Product Certification section.

CE Compliance (€

This product meets the essential requirements of applicable European Directives, as follows:

- 2006/95/EC; Low-Voltage Directive (safety)
- 2014/30/EU: Electromagnetic Compatibility Directive (EMC)

Online Product Certification

Refer to the product Declaration of Conformity (DoC) for additional regulatory compliance information. To obtain product certifications and the DoC for this product, visit ni.com/ certification, search by model number or product line, and click the appropriate link in the Certification column.

Environmental Management

NI is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial to the environment and to NI customers

For additional environmental information, refer to the Minimize Our Environmental Impact web page at ni.com/environment. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document.

Waste Electrical and Electronic Equipment (WEEE)



EU Customers At the end of the product life cycle, all NI products must be disposed of according to local laws and regulations. For more information about how to recycle NI products in your region, visit ni.com/environment/weee.

电子信息产品污染控制管理办法(中国 RoHS)

(P) (P) 中国客户 National Instruments 符合中国电子信息产品中限制使用某些有害物 质指令(RoHS)。关于 National Instruments 中国 RoHS 合规性信息,请登录

Device Pinout

Figure 8. NI PXIe-6355 Pinout

AI 0 (AI 0+) AI GND AI 9 (AI 1-) AI 9 (AI 1-) AI 9 (AI 1-) AI GND AI 1 (AI 2+) AI GND AI 1 (AI 2+) AI GND AI 1 (AI 3-) AI 3 (AI 3-) AI 3 (AI 3+) AI 1 (AI 1-) AI 5 (AI 5+) AI 60 26 AI 6ND AI 1 4 (AI 6-) AI 7 (AI 7+) AI GND AI 6 22 AO GND AI 7 (AI 7+) AI GND AI GND AI 7 (AI 7-) AI GND AI GND AI 7 (AI 7-) AI GND AI 9 (AI 1-) AI GND AI 1 1 (AI 6-) AI 1 1 (AI 1-) AI GND AI 7 (AI 7-) AI GND AI 1 1 (AI 1-) AI 1 1 (AI 1-) AI 1 3 (AI 3-) AI 1 3 (AI 3-) AI 6 (AI 6+) AI 6 (AI 6+) AI 7 (AI 7-) AI GND AI 1 1 (AI 1-) AI GND AI 1 3 (AI 3-) AI 6 (AI 6-) AI 1 3 (AI 3-) AI 6 (AI 6-) AI 7 (AI 7-) AI GND AI 1 5 (AI 7-) AO 0 APFI 0 PO.4 D GND PO.4 D GND PO.1 PO.1 PO.6 PO.6 PO.6 PO.6 PO.6 PO.7 AB 14 14 PO.6 PO.8 PO.9 PO.9 PO.9 AN 13 D GND PFI 1/P1.1 PFI 0/P1.0 PFI 1/P1.1 PFI 0/P1.0 PFI 1/P1.1 PFI 1/P1.1 PFI 1/P1.1 PFI 1/P1.1 PFI 1/P1.7 AI 9 D GND PFI 15/P1.5 PFI 15/P2.7 PFI 15/P2.7 PFI 15/P2.7 PFI 15/P2.1 AI GND AI 4 10 (AI 2-) AI (AI 1-) AI (AI 2-) AI (AI 3 (AI 3-) AI (AI 4) AI (AI 4-) A					
AI GND AI 9 (AI 1-) AI 9 (AI 1-) AI 9 (AI 1-) AI 9 (AI 1-) AI 12 (AI 2+) AI GND AI 2 (AI 2+) AI 11 (AI 3-) AI 3 (AI 3 (AI 3+) AI 11 (AI 3-) AI 5 (AI 5+) AI 5 (AI 5+) AI GND AI 5 (AI 5+) AI 60 26 AI 13 (AI 5-) AI GND AI 7 (AI 7+) AI GND AI 7 (AI 7+) AI GND AI 60 26 AI 13 (AI 5-) AI GND AI 7 (AI 7+) AI GND AI 7 (AI 7+) AI GND AI 7 (AI 7-) AI 6 (AI 6-) AI 7 (AI 7-) AI 6 (AI 13 (AI 1-) AI 7 (AI 7-) AI 7 (AI 7-) AI 7 (AI 7-) AI 6 (AI 8-) AI 13 (AI 1-1- AI 13 (AI 1-1- AI 13 (AI 1-1- AI 13 (AI 1-1- AI 14 (AI 14-) AI 7 (AI 7-) AI 7 (AI 7-) AI 6 (AI 7-) AI 6 (AI 14 14 15 (AI 7-) AI 7 (AI 7-) AI 6 (AI 14 14 15 (AI 7-) AI 7 (AI 7-) AI 6 (AI 14 14 15 (AI 7-) AI 7 (AI 7-) AI 6 (AI 14 14 15 (AI 14-) AI 7 (AI 7-) AI 7 (AI 7-) AI 6 (AI 14 14 15 (AI					
AI 9 (AI 1-) AI 2 (AI 2+) AI 3 (AI 3-) AI 4 (AI 2-) AI GND AI 5 (AI 5+) AI 5 (AI 5+) AI 60 26 AI 13 (AI 3-) AI 60 26 AI 13 (AI 5-) AI 60 26 AI 7 (AI 7-) AI 60 26 AI 7 (AI 7-) AI 60 26 AI 7 (AI 7-) AI 60 20 AI 7 (AI 7-) AI 60 20 AI 7 13 AI 7 14 AI 7 15 AI 7 1	AI 0 (AI 0+)	68	34	AI 8 (AI 0-)	
Al 2 (Al 2+) Al GND Al 3 (Al 3+) Al 11 (Al 3-) Al 3 (Al 3+) Al 11 (Al 3-) Al 5 (Al 5+) Al 5 (Al 5+) Al GND Al 5 (Al 5+) Al GND Al 5 (Al 5+) Al GND Al 5 (Al 5+) Al 60 26 Al 13 (Al 5-) Al GND Al 7 (Al 7+) Al GND Al 7 (Al 7+) Al GND Bore Bore Bore Bore Bore Bore Bore Bore	AI GND	67	33	Al 1 (Al 1+)	
AI GND AI 11 (AI 3-) AI 2 (AI 4-) AI 5 (AI 5+) AI 60 26 AI 6 (AI 6+) AI 6 (AI 6-) AI 6 (AI 6-) AI 7 (AI 7+) AI GND BORD BORD BORD BORD BORD BORD BORD BOR	Al 9 (Al 1-)	66	32	AI GND	
Al 11 (Al 3-) Al SENSE Al 12 (Al 4-) Al 5 (Al 5+) Al GND Al 5 (Al 5+) Al GND Al 5 (Al 5+) Al GND Al 7 (Al 7+) Al GND BORD BORD BORD BORD BORD BORD BORD BOR	Al 2 (Al 2+)	65	31	AI 10 (AI 2-)	
AI SENSE AI 12 (AI 4—) AI 12 (AI 4—) AI 5 (AI 5+) AI GND AI 60 26 AI 13 (AI 5—) AI GND AI 7 (AI 7+) AI GND BE SELECT AO 0 AO GND BE SELECT AO 1 AO FILO BE SELECT AI GND APFI 0 BE SELECT AI GND BE SELECT AI GND APFI 0 BE SELECT AI GND BE SELECT AI GND APFI 0 BE SELECT AI GND AD CO AD	AI GND	64	30	AI 3 (AI 3+)	
Al 12 (Al 4-) Al 5 (Al 5+) Al GND Al 60 26 Al 13 (Al 5-) Al GND 59 25 Al 6 (Al 6+) Al 7 (Al 7+) 57 23 Al 15 (Al 7-) Al GND 56 22 AO 0 AO GND 55 21 AO 1 AO GND 50 16 P0.4 P0.0 52 18 P0.1 P0.1 P0.1 P0.1 P0.6 P0.2 P0.7 P0.3 P1 17 P0.1 P0.6 P0.2 P1 10/P2.2 P1 10/P2.4	AI 11 (AI 3-)	63	29	AI GND	
AI 5 (AI 5+) AI GND AI GND AI 14 (AI 6-) AI 7 (AI 7+) AI GND AI 7 (AI 7+) AI GND BE STANN AI GND AI GND AI GND BE STANN AI GND AI GND BE STANN AI GND AI GND AI GND AI GND BE STANN AI GND AI GN	AI SENSE	62	28	AI 4 (AI 4+)	
AI GND	AI 12 (AI 4-)	61	27	AI GND	
Al 14 (Al 6-) Al 7 (Al 7+) Al GND AO GND BO S5 21 AO 0 AO GND BO S5 21 AO 1 AO GND BO S5 21 BO GND BO B	AI 5 (AI 5+)	60	26	AI 13 (AI 5-)	
AI 7 (AI 7+) AI GND AO GND BO	AI GND	59	25	AI 6 (AI 6+)	
AI GND	AI 14 (AI 6-)	58	24	AI GND	
AO GND	Al 7 (Al 7+)	57	23	AI 15 (AI 7-)	
AO GND 54 20 APFI 0 D GND 53 19 P0.4 P0.0 52 18 D GND P0.5 51 17 P0.1 D GND 50 16 P0.6 P0.2 49 15 D GND P0.7 48 14 +5 V P0.3 47 13 D GND PFI 11/P2.3 46 12 D GND PFI 10/P2.2 45 11 PFI 0/P1.0 D GND 44 10 PFI 1/P1.1 D GND 44 10 PFI 1/P1.1 PFI 2/P1.2 43 9 D GND PFI 3/P1.3 42 8 +5 V PFI 4/P1.4 41 7 D GND PFI 13/P2.5 40 6 PFI 5/P1.5 PFI 7/P1.7 38 4 D GND PFI 8/P2.0 37 3 PFI 9/P2.1 D GND 36 2 PFI 12/P2.4	AI GND	56	22	AO 0	
D GND	AO GND	55	21	AO 1	
P0.0 52 18 D GND P0.5 51 17 P0.1 P0.6 P0.2 49 15 D GND P0.7 48 14 +5 V P0.3 47 13 D GND PFI 10/P2.2 45 11 PFI 0/P1.0 PFI 2/P1.2 43 9 D GND PFI 3/P1.3 42 8 +5 V PFI 4/P1.4 41 7 D GND PFI 15/P2.7 PFI 5/P1.7 38 4 D GND PFI 6/P1.6 PFI 8/P2.0 37 3 PFI 9/P2.1 D GND PFI 8/P2.4 PFI 8/P2.4	AO GND	54	20	APFI 0	
P0.5 51 17 P0.1 P0.6 P0.2 49 15 D GND P0.3 47 13 D GND PFI 10/P2.2 45 11 PFI 0/P1.0 PFI 3/P1.3 42 8 PFI 4/P1.4 41 7 PFI 3/P2.5 PFI 5/P1.7 PFI 5/P1.7 PFI 5/P1.7 PFI 5/P1.7 PFI 8/P2.0 PFI 8/P2.4 PFI 9/P2.1 D GND PFI 8/P2.0 D GND PFI 9/P2.1 D GND PFI 8/P2.4 PFI 9/P2.4 PFI 9/P2.4 PFI 9/P2.4 PFI 12/P2.4 PFI 12/P2.	D GND	53	19	P0.4	
D GND	P0.0	52	18	D GND	
P0.2	P0.5	51	17	P0.1	
P0.7	D GND	50	16	P0.6	
PO.3 PFI 11/P2.3 PFI 10/P2.2 PFI 10/P2.2 PFI 10/P2.2 PFI 2/P1.2 PFI 3/P1.3 PFI 3/P1.3 PFI 4/P1.4 PFI 3/P2.5 PFI 15/P2.7 PFI 15/P2.7 PFI 7/P1.7 PFI 8/P2.0 PFI 8/P2.0 PFI 12/P2.4 PFI 12/P2.4 PFI 12/P2.4	P0.2	49	15	D GND	
PFI 11/P2.3 46 12 D GND PFI 10/P2.2 45 11 PFI 0/P1.0 D GND 44 10 PFI 1/P1.1 PFI 2/P1.2 43 9 D GND PFI 3/P1.3 42 8 +5 V PFI 4/P1.4 41 7 D GND PFI 13/P2.5 40 6 PFI 5/P1.5 PFI 15/P2.7 39 5 PFI 6/P1.6 PFI 7/P1.7 38 4 D GND PFI 8/P2.0 37 3 PFI 9/P2.1 D GND 36 2 PFI 12/P2.4	P0.7	48	14	+5 V	
PFI 10/P2.2 45 11 PFI 0/P1.0 D GND 44 10 PFI 1/P1.1 PFI 2/P1.2 43 9 D GND PFI 3/P1.3 42 8 +5 V PFI 4/P1.4 41 7 D GND PFI 13/P2.5 40 6 PFI 5/P1.5 PFI 15/P2.7 39 5 PFI 6/P1.6 PFI 7/P1.7 38 4 D GND PFI 8/P2.0 37 3 PFI 9/P2.1 D GND 36 2 PFI 12/P2.4	P0.3	47	13	D GND	
D GND	PFI 11/P2.3	46	12	D GND	
PFI 2/P1.2 43 9 D GND PFI 3/P1.3 42 8 +5 V PFI 4/P1.4 41 7 D GND PFI 13/P2.5 40 6 PFI 5/P1.5 PFI 15/P2.7 39 5 PFI 6/P1.6 PFI 7/P1.7 38 4 D GND PFI 8/P2.0 37 3 PFI 9/P2.1 D GND 36 2 PFI 12/P2.4	PFI 10/P2.2	45	11	PFI 0/P1.0	
PFI 3/P1.3	D GND	44	10	PFI 1/P1.1	
PFI 4/P1.4 41 7 D GND PFI 13/P2.5 40 6 PFI 5/P1.5 PFI 15/P2.7 39 5 PFI 6/P1.6 PFI 7/P1.7 38 4 D GND PFI 8/P2.0 37 3 PFI 9/P2.1 D GND 36 2 PFI 12/P2.4	PFI 2/P1.2	43	9	D GND	
PFI 13/P2.5	PFI 3/P1.3	42	8	+5 V	
PFI 15/P2.7 39 5 PFI 6/P1.6 PFI 7/P1.7 38 4 D GND PFI 8/P2.0 37 3 PFI 9/P2.1 D GND 36 2 PFI 12/P2.4	PFI 4/P1.4	41	7	D GND	
PFI 7/P1.7 38 4 D GND PFI 8/P2.0 37 3 PFI 9/P2.1 D GND 36 2 PFI 12/P2.4	PFI 13/P2.5	40	6	PFI 5/P1.5	
PFI 8/P2.0 37 3 PFI 9/P2.1 D GND 36 2 PFI 12/P2.4	PFI 15/P2.7	39	5	PFI 6/P1.6	
D GND 36 2 PFI 12/P2.4	PFI 7/P1.7	38	4	D GND	
	PFI 8/P2.0	37	3	PFI 9/P2.1	
D GND 35 1 PFI 14/P2.6	D GND	36	2	PFI 12/P2.4	
	D GND	35	1	PFI 14/P2.6	



Al 71 (Al 71+)	1	35	AI 79 (AI 71–)	
AI 78 (AI 70-)	2	36	AI 70 (AI 70+)	
AI 69 (AI 69+)	3	37	AI 77 (AI 69–)	
AI 68 (AI 68+)	4	38	AI 76 (AI 68–)	
AI 75 (AI 67-)	5	39	AI 67 (AI 67+)	
AI 66 (AI 66+)	6	40	AI 74 (AI 66–)	
AI 65 (AI 65+)	7	41	AI 73 (AI 65–)	
AI 72 (AI 64-)	8	42	AI 64 (AI 64+)	
AI GND	9	43	AI GND	
AI 55 (AI 55+)	10	44	AI 63 (AI 55–)	
AI 54 (AI 54+)	11	45	AI 62 (AI 54-)	
AI 61 (AI 53-)	12	46	AI 53 (AI 53+)	
AI 52 (AI 52+)	13	47	AI 60 (AI 52-)	
AI 51 (AI 51+)	14	48	AI 59 (AI 51–)	
AI 58 (AI 50-)	15	49	AI 50 (AI 50+)	
AI 49 (AI 49+)	16	50	AI 57 (AI 49–)	
AI 48 (AI 48+)	17	51	AI 56 (AI 48–)	
AI 47 (AI 39-)	18	52	AI 39 (AI 39+)	
AI 38 (AI 38+)	19	53	AI 46 (AI 38-)	
AI 37 (AI 37+)	20	54	AI 45 (AI 37-)	
AI 44 (AI 36-)	21	55	AI 36 (AI 36+)	
AI GND	22	56	AI SENSE 2	
AI 35 (AI 35+)	23	57	AI 43 (AI 35-)	
AI 34 (AI 34+)	24	58	AI 42 (AI 34-)	
AI 41 (AI 33-)	25	59	AI 33 (AI 33+)	
AI 32 (AI 32+)	26	60	AI 40 (AI 32-)	
AI 23 (AI 23+)	27	61	Al 31 (Al 23–)	
AI 30 (AI 22-)	28	62	Al 22 (Al 22+)	
Al 21 (Al 21+)	29	63	Al 29 (Al 21–)	
AI 20 (AI 20+)	30	64	AI 28 (AI 20-)	
Al 27 (Al 19-)	31	65	AI 19 (AI 19+)	
AI 18 (AI 18+)	32	66	AI 26 (AI 18-)	
AI 17 (AI 17+)	33	67	AI 25 (AI 17-)	
Al 24 (Al 16-)	34	68	AI 16 (AI 16+)	
			J	

Refer to the NI Trademarks and Logo Guidelines at ni.com/trademarks for information on National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: Help»Patents in your software, the patents.txt file on your media, or the National Instruments Patent Notice at ni.com/patents. You can find information about end-user license agreements (EULAs) and third-party legal notices in the readme file for your NI product. Refer to the Export Compliance Information at ni.com/legal/export-compliance for the National Instruments global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data. NI MAKES NO EXPRESS OR IMPLIED WARRANTIES AS TO THE ACCURACY OF THE INFORMATION CONTAINED HEREIN AND SHALL NOT BE LIABLE FOR ANY ERRORS. U.S. Government Customers: The data contained in this manual was developed at private expense and is subject to the applicable limited rights and restricted data rights as set forth in FAR 52.227-14, DFAR 252.227-7014, and DFAR 252.227-7015.

© 2014—2015 National Instruments. All rights reserved.