COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

Sell For Cash Get Credit Receive a Trade-In Deal

OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.



Bridging the gap between the manufacturer and your legacy test system.

0

1-800-915-6216



www.apexwaves.com

sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote



cDAQ-9179

SPECIFICATIONS

NI cDAQ[™]-9174

NI CompactDAQ Four-Slot USB Chassis

These specifications are for the National Instruments CompactDAQ 9174 chassis only. These specifications are typical at 25 °C unless otherwise noted. For the C Series I/O module specifications, refer to the documentation for the C Series I/O module you are using.

Analog Input

Input FIFO size	127 samples per slot
Maximum sample rate ¹	Determined by the C Series I/O module or modules
Timing accuracy ²	50 ppm of sample rate
Timing resolution ³	12.5 ns
Number of channels supported	Determined by the C Series I/O module or modules

Analog Output

Number of channels supported

Hardware-timed task

Onboard regeneration......16



Performance dependent on type of installed C Series I/O module and number of channels in the task.

² Does not include group delay. For more information, refer to the documentation for each C Series I/O module.

³ Does not include group delay. For more information, refer to the documentation for each C Series I/O module.

Non-hardware-timed task	.Determined by the C Series I/O module or modules
Maximum update rate	
Onboard regeneration Non-regeneration	.1.6 MS/s (multi-channel, aggregate) .Determined by the C Series I/O module or modules
Timing accuracy	50 ppm of sample rate
Timing resolution	.12.5 ns
Output FIFO size	
Onboard regeneration	.8,191 samples shared among channels used
Non-regeneration	.127 samples per slot
AO waveform modes	.Non-periodic waveform, periodic waveform regeneration mode from onboard memory, periodic waveform regeneration from host buffer including dynamic update

Digital Waveform Characteristics

Waveform acquisition (DI) FIFO	.127 samples per slot
Waveform generation (DO) FIFO	.2,047 samples
Digital input sample clock frequency	
Streaming to application memory	.System-dependent
Finite	.0 to 10 MHz
Digital output sample clock frequency	
Streaming from application memory	.System-dependent
Regeneration from FIFO	.0 to 10 MHz
Finite	.0 to 10 MHz
Timing accuracy	.50 ppm

General-Purpose Counters/Timers

Number of counters/timers	.4
Resolution	.32 bits
Counter measurements	.Edge counting, pulse, semi-period, period, two-edge separation, pulse width
Position measurements	.X1, X2, X4 quadrature encoding with Channel Z reloading; two-pulse encoding
Output applications	Pulse, pulse train with dynamic updates, frequency division, equivalent time sampling
Internal base clocks	.80 MHz, 20 MHz, 100 kHz
External base clock frequency	.0 to 20 MHz
Base clock accuracy	.50 ppm
Output frequency.	.0 to 20 MHz
Inputs	.Gate, Source, HW_Arm, Aux, A, B, Z, Up_Down
Routing options for inputs	Any module PFI, analog trigger, many internal signals
FIFO	.Dedicated 127-sample FIFO

Frequency Generator

Number of channels.	1
Base clocks	20 MHz, 10 MHz, 100 kHz
Divisors	1 to 16 (integers)
Base clock accuracy	50 ppm
Output	Any module PFI terminal

Module PFI Characteristics

Functionality	Static digital input, static digital output, timing input, and timing output
Timing output sources ⁴	Many analog input, analog output, counter, digital input, and digital output timing signals
Timing input frequency	0 to 20 MHz
Timing output frequency	0 to 20 MHz

Digital Triggers

Source	.Any module PFI terminal
Polarity	.Software-selectable for most signals
Analog input function	.Start Trigger, Reference Trigger, Pause Trigger, Sample Clock, Sample Clock Timebase
Analog output function	.Start Trigger, Pause Trigger, Sample Clock, Sample Clock Timebase
Counter/timer function	.Gate, Source, HW_Arm, Aux, A, B, Z, Up_Down

Module I/O States



Note The chassis may revert the input/output of the modules to their power-on state when the USB cable is removed.

⁴ Actual signals available dependent on type of installed C Series I/O module.

Power Requirements



Caution You must use a National Electric Code (NEC) Class 2 power source with the NI cDAQ-9174 chassis.



Note Some C Series I/O modules have additional power requirements. For more information about C Series I/O module power requirements, refer to the documentation for each C Series I/O module.



Note Sleep mode for C Series I/O modules is not supported in the NI cDAQ-9174.

Input voltage range	9 to 30 V
Maximum required input power ⁵	15 W
Power input connector	2 positions 3.5 mm pitch pluggable screw terminal with screw locks similar to Sauro CTMH020F8-0N001
Power input mating connector	Sauro CTF020V8, Phoenix Contact 1714977, or equivalent
Power consumption from USB,	500 μA maximum

Bus Interface

USB specification	USB 2.0 Hi-Speed
High-performance data streams	7
Data stream types available	Analog input, analog output, digital input,
	digital output, counter/timer input,
	counter/timer output, NI-XNET ⁶



Note If you are connecting the NI cDAQ-9174 chassis to a USB hub, the hub must be externally powered.


⁵ Includes maximum 1 W module load per slot across rated temperature and product variations.

When a session is active, CAN or LIN (NI-XNET) C Series modules use a total of two data streams regardless of the number of NI-XNET modules in the chassis.

Physical Characteristics

If you need to clean the chassis, wipe it with a dry towel.

Figure 1. NI cDAQ-9174 Dimensions

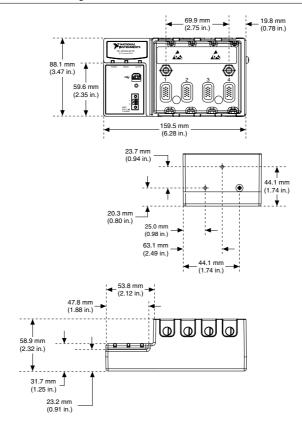

Environmental

Operating temperature ⁷	20 °C to 55 °C (IEC-60068-2-1 and IEC-60068-2-2)
Storage temperature	40 °C to 85 °C (IEC-600068-2-1 and IEC-60068-2-2)
Ingress protection	IP 30
Operating humidity	10 to 90% RH, noncondensing (IEC-60068-2-56)
Storage humidity	5 to 95% RH, noncondensing (IEC-60068-2-56)
Pollution Degree (IEC 60664)	2
Maximum altitude	5,000 m
Indoor use only.	

Shock and Vibration

To meet these specifications, you must panel mount the NI cDAQ-9174 system, use an NI locking USB cable, and affix ferrules to the ends of the terminal lines.

Operational shock	30 g peak, half-sine, 11 ms pulse (Tested in accordance with IEC 60068-2-27. Test profile developed in accordance with MIL-PRF-28800F.)
Random vibration	
Operating	5 to 500 Hz, 0.3 g _{rms}
Non-operating.	5 to 500 Hz, 2.4 g _{rms} (Tested in accordance
	with IEC 60068-2-64. Non-operating test
	profile exceeds the requirements of
	MIL PRF-28800F, Class 3.)

 $^{^7}$ When operating the NI cDAQ-9174 in temperatures below 0 °C, you must use the PS-15 power supply or another power supply rated for below 0 °C.

Safety

This product meets the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use:

- IEC 61010-1, EN 61010-1
- UL 61010-1, CSA 61010-1



Note For UL and other safety certifications, refer to the product label or the *Online Product Certification* section.

Electromagnetic Compatibility

This product meets the requirements of the following EMC standards for electrical equipment for measurement, control, and laboratory use:

- EN 61326-1 (IEC 61326-1): Class A emissions; Basic immunity
- EN 55011 (CISPR 11): Group 1, Class A emissions
- AS/NZS CISPR 11: Group 1, Class A emissions
- FCC 47 CFR Part 15B: Class A emissions
- ICES-001: Class A emissions



Note In the United States (per FCC 47 CFR), Class A equipment is intended for use in commercial, light-industrial, and heavy-industrial locations. In Europe, Canada, Australia, and New Zealand (per CISPR 11) Class A equipment is intended for use only in heavy-industrial locations.



Note Group 1 equipment (per CISPR 11) is any industrial, scientific, or medical equipment that does not intentionally generate radio frequency energy for the treatment of material or inspection/analysis purposes.



Note For EMC declarations and certifications, refer to the *Online Product Certification* section.

CE Compliance

This product meets the essential requirements of applicable European Directives as follows:

- 2006/95/EC; Low-Voltage Directive (safety)
- 2004/108/EC; Electromagnetic Compatibility Directive (EMC)

Online Product Certification

To obtain product certifications and the DoC for this product, visit *ni.com/certification*, search by model number or product line, and click the appropriate link in the Certification column.

Environmental Management

NI is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial not only to the environment but also to NI customers.

For additional environmental information, refer to the *Minimize Our Environmental Impact* web page at *ni.com/environment*. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document.

Waste Electrical and Electronic Equipment (WEEE)



EU Customers At the end of the product life cycle, all products must be sent to a WEEE recycling center. For more information about WEEE recycling centers, National Instruments WEEE initiatives, and compliance with WEEE Directive 2002/96/EC on Waste Electrical and Electronic Equipment, visit ni.com/environment/weee.

电子信息产品污染控制管理办法(中国 RoHS)

中国客户 National Instruments 符合中国电子信息产品中限制使用某些有害物质指令(RoHS)。关于 National Instruments 中国 RoHS 合规性信息,请登录ni.com/environment/rohs_china。(For information about China RoHS compliance, go to ni.com/environment/rohs china.)

