

## COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

## SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

 Sell For Cash    Get Credit    Receive a Trade-In Deal

## OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock **New**, **New Surplus**, **Refurbished**, and **Reconditioned** NI Hardware.



*Bridging the gap between the manufacturer and your legacy test system.*

 1-800-915-6216

 [www.apexwaves.com](http://www.apexwaves.com)

 [sales@apexwaves.com](mailto:sales@apexwaves.com)

All trademarks, brands, and brand names are the property of their respective owners.

**Request a Quote**

 **CLICK HERE**

**PXIe-5665**

## CALIBRATION PROCEDURE

# PXIe-5644

## Reconfigurable 6 GHz RF Vector Signal Transceiver

This document contains the verification and adjustment procedures for the PXIe-5644 vector signal transceiver.

Refer to [ni.com/calibration](http://ni.com/calibration) for more information about calibration solutions.



**Caution** Do not disconnect the cable that connects CAL IN to CAL OUT. Removing the cable from or tampering with the CAL IN or CAL OUT front panel connectors voids the product calibration and specifications are no longer warranted.

## Contents

Required Software.....	2
Related Documentation.....	2
Test Equipment.....	2
Test Conditions.....	10
Initial Setup.....	10
Test System Characterization.....	10
Zeroing the Power Sensor.....	10
Characterizing Power Splitter Balance.....	11
Characterizing Power Splitter Loss.....	15
Self-Calibrating the PXIe-5644.....	19
As-Found and As-Left Limits.....	20
Verification.....	20
Verifying Internal Frequency Reference.....	20
Verifying RF Input Spectral Purity.....	22
Verifying RF Output Spectral Purity.....	25
Verifying Input Absolute Amplitude Accuracy.....	27
Verifying Input Frequency Response.....	30
Verifying Input Average Noise Density.....	34
Verifying Input Nonharmonic Spurs.....	35
Verifying Output Power Level Accuracy.....	36
Verifying Output Frequency Response.....	40
Verifying Output Noise Density.....	43
Verifying Output Second Harmonics.....	45
Verifying Output Nonharmonic Spurs.....	47
Verifying Third-Order Output Intermodulation (IMD3).....	49
Verifying Residual LO Power and Residual Sideband Image.....	51
Verifying RF Input EVM (Functional Test).....	54

Verifying RF Output EVM (Functional Test).....	56
Verifying LO OUT (RF IN 0 and RF OUT 0) (Functional Test).....	57
Updating Calibration Date and Time.....	59
Optional Verification.....	59
Verifying RF Input IMD3 and Second-Order Input Intermodulation (IMD2).....	60
Verifying RF Input and RF Output Return Loss.....	62
Adjustment.....	64
Adjusting RF Internal Frequency Reference.....	64
Adjusting Input Absolute Amplitude Accuracy.....	65
Adjusting Output Power Level Accuracy.....	68
Adjusting LO OUT (RF IN 0 and RF OUT 0).....	70
Reverification.....	72
Worldwide Support and Services.....	72

## Required Software

---

Calibrating the PXIe-5644 requires you to install the following software on the calibration system:

- LabVIEW 2012.1 Base/Full/Pro or later
- PXIe-5644/5645 Instrument Design Libraries 2012.1
- NI-RFSA version 2.7 or later
- NI-RFSG version 1.9 or later
- Modulation Toolkit version 4.3.3 or later
- Spectral Measurements Toolkit version 2.6.3 or later

You can download all required software from [ni.com/downloads](http://ni.com/downloads).

## Related Documentation

---

For additional information, refer to the following documents as you perform the calibration procedure:

- *PXIe-5644 Getting Started Guide*
- *NI RF Vector Signal Transceivers Help*
- *PXIe-5644 Specifications*

Visit [ni.com/manuals](http://ni.com/manuals) for the latest versions of these documents.

## Test Equipment

---

NI recommends that you use particular equipment for the performance verification and adjustment procedures.

If the recommended equipment is not available, select a substitute using the minimum requirements listed in the following table.

**Table 1.** Required Equipment Specifications for PXIe-5644 Calibration

Equipment	Recommended Model	Where Used	Minimum Requirements
Frequency reference	Symmetricon 8040 Rubidium Frequency Standard	Verifications: <ul style="list-style-type: none"> <li>• Internal frequency reference</li> <li>• Nonharmonic spurs</li> <li>• Spectral purity</li> <li>• IMD3</li> <li>• IMD2</li> <li>• Output noise density</li> <li>• Output second harmonics</li> </ul> Adjustments: <ul style="list-style-type: none"> <li>• Absolute amplitude accuracy</li> <li>• Output power level accuracy</li> </ul>	Frequency: 10 MHz  Frequency accuracy: $\leq \pm 1\text{E-}9$  Output mode: sinusoid
Power sensor	Rohde & Schwarz (R&S) NRP-Z91	Test system characterization  Verifications: <ul style="list-style-type: none"> <li>• Absolute amplitude accuracy</li> <li>• Frequency response</li> <li>• Output power level accuracy</li> <li>• LO OUT (RF IN 0 and RF OUT 0)</li> </ul> Adjustments: <ul style="list-style-type: none"> <li>• Absolute amplitude accuracy</li> <li>• Output power level accuracy</li> <li>• LO OUT (RF IN 0 and RF OUT 0)</li> </ul>	Range: -67 dBm to +23 dBm  Frequency range: 65 MHz to 6 GHz  Absolute uncertainty: 0.174 dB  Power linearity: <0.1 dB  VSWR: <1.2:1 up to 6 GHz

**Table 1.** Required Equipment Specifications for PXIe-5644 Calibration (Continued)

Equipment	Recommended Model	Where Used	Minimum Requirements
Vector signal generator	PXIe-5673E	Test system characterization  Verifications: <ul style="list-style-type: none"><li>• Internal frequency reference</li><li>• Absolute amplitude accuracy</li><li>• Frequency response</li><li>• Input nonharmonic spurs</li><li>• Input IMD3</li><li>• Input EVM</li><li>• Input IMD2</li></ul> Adjustments: <ul style="list-style-type: none"><li>• Internal frequency reference</li><li>• Absolute amplitude accuracy</li><li>• LO OUT (RF IN 0 and RF OUT 0)</li></ul>	Frequency range: 65 MHz to 6 GHz  Frequency resolution: <5 Hz  Amplitude range: -70 dBm to 5 dBm  Instantaneous bandwidth: 50 MHz

**Table 1.** Required Equipment Specifications for PXIe-5644 Calibration (Continued)

Equipment	Recommended Model	Where Used	Minimum Requirements
Spectrum analyzer or vector signal analyzer	PXIe-5665	Test system characterization  Verifications: <ul style="list-style-type: none"><li>• Spectral purity</li><li>• Output power level accuracy</li><li>• Output frequency response</li><li>• Output noise density</li><li>• Output second harmonics</li><li>• Output nonharmonic spurs</li><li>• Output IMD3</li><li>• Output EVM</li></ul> Adjustments: <ul style="list-style-type: none"><li>• Output power level accuracy</li></ul>	Frequency range: 65 MHz to 12 GHz  Instantaneous bandwidth: 50 MHz  Phase noise at 20 kHz offset: <-125 dBm/Hz
Preamplifier	PXI-5691	Output noise density verification	Frequency range: 65 MHz to 8 GHz  Noise floor at 6 GHz: <-158 dBm/Hz

**Table 1.** Required Equipment Specifications for PXle-5644 Calibration (Continued)

Equipment	Recommended Model	Where Used	Minimum Requirements
Power splitter	Aeroflex/Weinschel 1593	<p>Test system characterization</p> <p>Verifications:</p> <ul style="list-style-type: none"> <li>• Frequency response</li> <li>• Absolute amplitude accuracy</li> <li>• Output power level accuracy</li> </ul> <p>Adjustments:</p> <ul style="list-style-type: none"> <li>• Absolute amplitude accuracy</li> <li>• Output power level accuracy</li> </ul>	<p>VSWR: <math>\leq 1.25:1</math> up to 18 GHz</p> <p>Amplitude tracking: <math>&lt; 0.25</math> dB</p>
6 dB attenuator (x2)	Anritsu 41KB-6 or Mini-Circuits	<p>Test system characterization</p> <p>Verifications:</p> <ul style="list-style-type: none"> <li>• Frequency response</li> <li>• Absolute amplitude accuracy</li> <li>• Output power level accuracy</li> </ul> <p>Adjustments:</p> <ul style="list-style-type: none"> <li>• Absolute amplitude accuracy</li> <li>• Output power level accuracy</li> </ul>	<p>Frequency range: DC to 6 GHz</p> <p>VSWR: <math>\leq 1.1:1</math></p>
50 $\Omega$ SMA terminator	—	<p>Test system characterization</p> <p>Average noise density verification</p>	<p>Frequency range: DC to 6 GHz</p> <p>VSWR: <math>\leq 1.1:1</math></p>

**Table 1.** Required Equipment Specifications for PXIe-5644 Calibration (Continued)

Equipment	Recommended Model	Where Used	Minimum Requirements
SMA (m)-to-SMA (m) cable	—	All procedures	Frequency range: DC to 6 GHz  Impedance: 50 $\Omega$
SMA (m)-to-N (f) adapter	Huber+Suhner 32_SMA_N-50-1/1-_UE	Test system characterization  Verifications: <ul style="list-style-type: none"> <li>• Frequency response</li> <li>• Absolute amplitude accuracy</li> <li>• Output power level accuracy</li> <li>• LO OUT (RF IN 0 and RF OUT 0)</li> </ul> Adjustments: <ul style="list-style-type: none"> <li>• Absolute amplitude accuracy</li> <li>• Output power level accuracy</li> <li>• LO OUT (RF IN 0 and RF OUT 0)</li> </ul>	Frequency range: DC to 6 GHz  Impedance: 50 $\Omega$  Return loss: $\geq 23$ dB
SMA (f)-to-N (f) adapter	Huber+Suhner 31_N-SMA-50-1/1-_UE	Test system characterization	Frequency range: DC to 6 GHz  Impedance: 50 $\Omega$  Return loss: $\geq 23$ dB



**Table 1.** Required Equipment Specifications for PXIe-5644 Calibration (Continued)

Equipment	Recommended Model	Where Used	Minimum Requirements
3.5 mm (m)-to-3.5 mm (m) adapter	Huber+Suhner 32_PC35-50-0-2/199_NE	Test system characterization  Verifications: <ul style="list-style-type: none"> <li>Frequency response</li> <li>Absolute amplitude accuracy</li> <li>Output power level accuracy</li> </ul> Adjustments: <ul style="list-style-type: none"> <li>Absolute amplitude accuracy</li> <li>Output power level accuracy</li> </ul>	Frequency range: DC to 6 GHz  Impedance: 50 $\Omega$  Return loss: $\geq 30$ dB
3.5 mm (f)-to-3.5 mm (f) adapter	Huber+Suhner 32_PC35-50-0-1/199_UE	Test system characterization	Frequency range: DC to 6 GHz  Impedance: 50 $\Omega$  Return loss: $\geq 30$ dB

The following table lists equipment required to perform optional verification for non-warranted specifications of the PXIe-5644.

**Table 2.** Required Equipment Specifications for Optional PXIe-5644 Verification


Equipment	Recommended Model	Where Used	Minimum Requirements
CW signal generator	PXIe-5652	Input IMD3  Input IMD2	Frequency range: 65 MHz to 6 GHz  Frequency resolution: <5 Hz  Amplitude range: -30 dBm to 0 dBm
Power splitter	Mini-Circuits ZFRSC-123+	Input IMD3  Input IMD2	>20 dB reverse isolation at 6 GHz

**Table 2.** Required Equipment Specifications for Optional PXIe-5644 Verification (Continued)

Equipment	Recommended Model	Where Used	Minimum Requirements
SMA (m)-to-SMA (m) cable (x2)	—	Input IMD3 Input IMD2	Frequency range: DC to 6 GHz
Frequency reference	Symmetricon 8040 Rubidium Frequency Standard	Input IMD3 Input IMD2	Frequency: 10 MHz Frequency accuracy: $\leq \pm 1\text{E-}9$
Two-port vector network analyzer (VNA)	PXIe-5630	Return loss	Frequency range: 65 MHz to 6 GHz

The following figure shows a recommended calibration system configuration for the PXIe-5644.

**Figure 1.** Recommended PXIe-5644 Calibration System

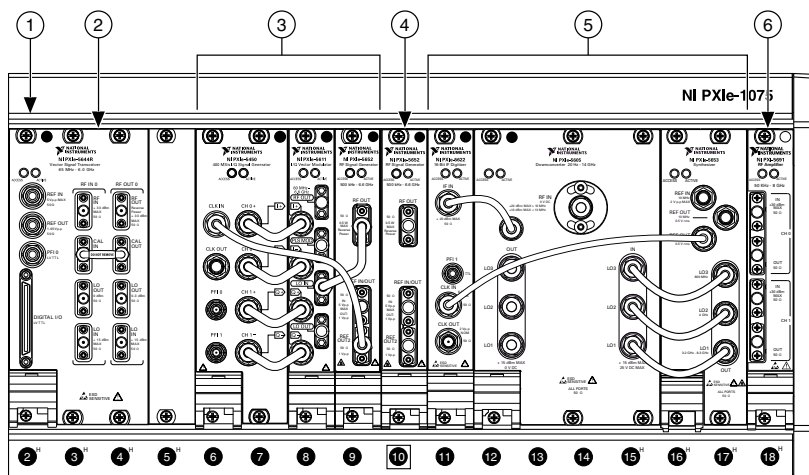

1. PXIe-1075 Chassis
2. Slot 2: PXIe-5644 (Device Under Test)
3. Slot 6: PXIe-5673E Vector Signal Generator (Source 1)
4. Slot 10: PXI-5652 RF Analog Signal Generator and CW Source or PXIe-5652 RF Analog Signal Generator and CW Source (Source 2)
5. Slot 11: PXIe-5665 Vector Signal Analyzer
6. Slot 18: PXI-5691 RF Amplifier

# Test Conditions

---

The following setup and environmental conditions are required to ensure the PXIe-5644 meets published specifications.

- Keep cabling as short as possible. Long cables act as antennas, picking up extra noise that can affect measurements.
- Verify that all connections to the PXIe-5644, including front panel connections and screws, are secure.
- Maintain an ambient temperature of  $23\text{ }^{\circ}\text{C} \pm 5\text{ }^{\circ}\text{C}$ .
- Keep relative humidity between 10% and 90%, noncondensing.
- Allow a warm-up time of at least 30 minutes after the chassis is powered on and PXIe-5644/5645 Instrument Design Libraries is loaded and recognizes the PXIe-5644. The warm-up time ensures that the PXIe-5644 and test instrumentation are at a stable operating temperature.
- In each verification procedure, insert a delay between configuring all devices and acquiring the measurement. This delay may need to be adjusted depending on the instruments used but should always be at least 1,000 ms for the first iteration, 1,000 ms when the power level changes, and 100 ms for each other iteration.
- Ensure that the PXI chassis fan speed is set to HIGH, that the fan filters, if present, are clean, and that the empty slots contain filler panels. For more information about cooling, refer to the *Maintain Forced-Air Cooling Note to Users* document available at [ni.com/manuals](https://ni.com/manuals).

## Initial Setup

---

Refer to the *PXIe-5644 Getting Started Guide* for information about how to install the software and the hardware and how to configure the device in Measurement & Automation Explorer (MAX).

## Test System Characterization

---

The following procedures characterize the test equipment used during verification and adjustment.



**Caution** The connectors on the device under test (DUT) and test equipment are fragile. Perform the steps in these procedures with great care to prevent damaging any DUTs or test equipment.

### Zeroing the Power Sensor

1. Ensure that the power sensor is not connected to any signals.
2. Zero the power sensor using the built-in function, according to the power sensor documentation.

# Characterizing Power Splitter Balance

You must zero the power sensor as described in the [Zeroing the Power Sensor](#) section prior to starting this procedure.

This procedure characterizes the balance between the two output terminals of the splitter, where the second terminal is terminated into an attenuator. The following procedures require the power splitter balance data:


- [Verifying Input Absolute Amplitude Accuracy](#)
- [Verifying Input Frequency Response](#)
- [Adjusting Input Absolute Amplitude Accuracy](#)

The verification and adjustment procedures use different test points for the splitter balance characterization. For characterization used in a verification procedure, use the test points in the [Characterization Test Points for Verification Procedures](#) table. For characterization used in an adjustment procedure, use 65 MHz to 6 GHz in 5 MHz steps for the test points.

1. Connect the SMA (m) connector of the 6 dB attenuator to the RF OUT front panel connector of the vector signal generator.
2. Connect the SMA (f) connector of the 6 dB attenuator to the input port of the power splitter using an SMA (m)-to-SMA (m) cable.
3. Connect the 50  $\Omega$  (m) terminator to one of the power splitter output ports. Refer to this port as *splitter output 1*.
4. Connect the other power splitter output to the SMA (f) connector of the second 6 dB attenuator using a 3.5 mm (m)-to-3.5 mm (m) adapter. Refer to the combined power splitter output and 6 dB attenuator as *splitter output 2*.
5. Connect the power sensor to splitter output 2 using the SMA (f)-to-N (f) adapter.

The following figure illustrates the hardware setup.

**Figure 2. Connection Diagram for Measuring at Splitter Output 2**

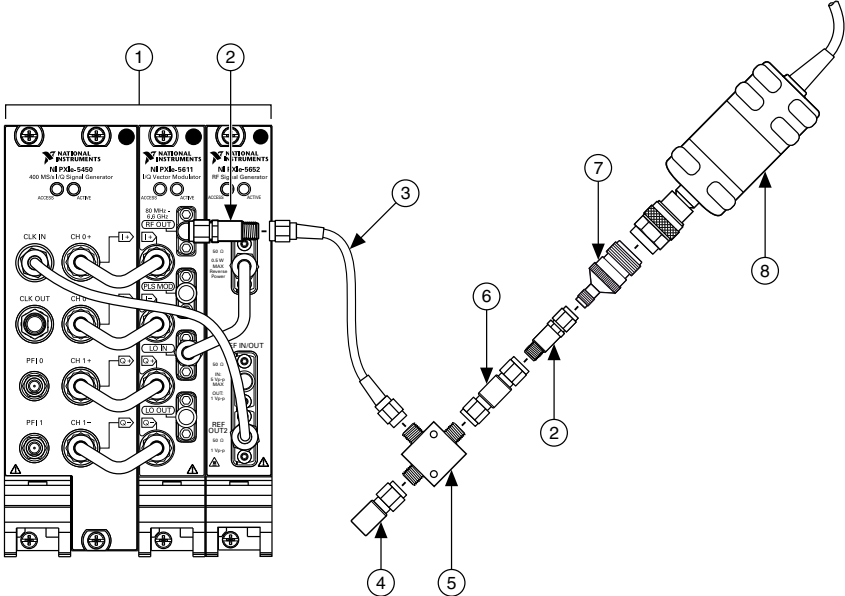

- |                             |                                     |
|-----------------------------|-------------------------------------|
| 1. Vector Signal Generator  | 5. Power Splitter                   |
| 2. 6 dB Attenuator          | 6. 3.5 mm (m)-to-3.5 mm (m) Adapter |
| 3. SMA (m)-to-SMA (m) Cable | 7. SMA (f)-to-N (f) Adapter         |
| 4. 50 Ω Terminator          | 8. Power Sensor                     |

6. Configure the vector signal generator using the following settings:
- Center frequency: For characterization used in a verification procedure, use the first test point in the following table. For characterization used in an adjustment procedure, use 65 MHz. For either procedure type, store as *frequency*.
  - Power level: 0 dBm

**Table 3. Characterization Test Points for Verification Procedures**

Test Points (MHz)	Step Size (MHz)
80 to 100	5
250	—
290 to 310	5
350 to 400	50
410 to 490	5
500	—

**Table 3.** Characterization Test Points for Verification Procedures (Continued)

Test Points (MHz)	Step Size (MHz)
510 to 690	5
700 to 750	50
760 to 840	5
850 to 900	50
910 to 1,090	5
1,160 to 1,240	5
1,400	—
1,510 to 1,690	5
1,800	—
1,960 to 2,040	5
2,200 to 2,600	200
2,610 to 2,790	5
2,800	—
2,960 to 3,040	5
3,200 to 3,600	200
3,760 to 3,840	5
3,910 to 4,090	5
4,200	—
4,460 to 4,540	5
4,600 to 4,800	200
4,910 to 5,090	5
5,200 to 5,400	200
5,460 to 5,540	5
5,600 to 5,800	200
5,910 to 5,990	5
6,000	—

7. Configure the power sensor to correct for *frequency* using the power sensor frequency correction function.
8. Use the power sensor to measure the power at the *frequency* from step 6.


9. Repeat steps 6 through 8 by updating *frequency*. For characterization used in a verification procedure, use the test points in the [Characterization Test Points for Verification Procedures](#) table. For characterization used in an adjustment procedure, use 65 MHz to 6 GHz in 5 MHz steps for the test points.

Record the resulting measurements as *splitter output 2 power*. Each frequency should have a corresponding value.

10. Disconnect the power sensor and 50  $\Omega$  terminator from the power splitter.
11. Connect the power sensor to splitter output 1 using an SMA (m)-to-N (f) adapter.
12. Connect the 50  $\Omega$  terminator to splitter output 2 using an SMA (f)-to-SMA (f) adapter.

The following figure illustrates the hardware setup.

**Figure 3. Connection Diagram for Measuring at Splitter Output 1**

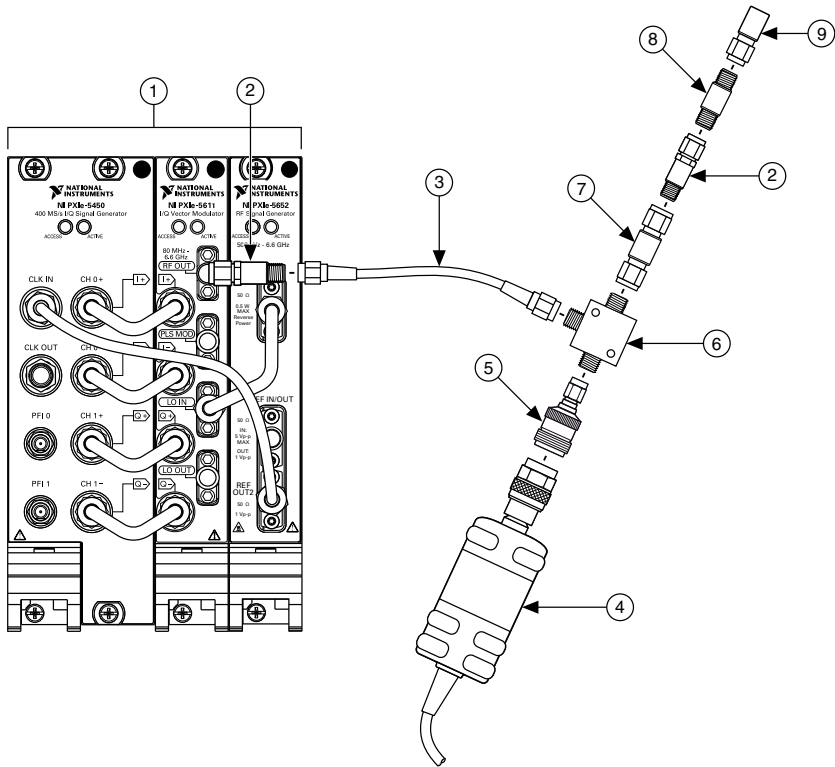

- |                             |                                     |
|-----------------------------|-------------------------------------|
| 1. Vector Signal Generator  | 6. Power Splitter                   |
| 2. 6 dB Attenuator          | 7. 3.5 mm (m)-to-3.5 mm (m) Adapter |
| 3. SMA (m)-to-SMA (m) Cable | 8. 3.5 mm (f)-to-3.5 mm (f) Adapter |
| 4. Power Sensor             | 9. 50 $\Omega$ Terminator           |
| 5. SMA (m)-to-N (f) Adapter |                                     |

13. Configure the vector signal generator using the following settings:
  - Center frequency: For characterization used in a verification procedure, use the first test point in the *Characterization Test Points for Verification Procedures* table. For characterization used in an adjustment procedure, use 65 MHz. For either procedure type, store as *frequency*.
  - Power level: 0 dBm
14. Configure the power sensor to correct for *frequency* using the power sensor frequency correction function.
15. Use the power sensor to measure the power.
16. Repeat steps 13 through 15 by updating *frequency*. For characterization used in a verification procedure, use the test points in the *Characterization Test Points for Verification Procedures* table. For characterization used in an adjustment procedure, use 65 MHz to 6 GHz in 5 MHz steps for the test points.

Record the resulting measurements as *splitter output 1 power*. Each frequency should have a corresponding value.
17. Calculate the splitter balance for each frequency point using the following equation:
$$\text{splitter balance} = \text{splitter output 2 power} - \text{splitter output 1 power}$$

## Characterizing Power Splitter Loss

This procedure characterizes the loss through the power splitter.

You must zero the power sensor as described in the *Zeroing the Power Sensor* section prior to starting this procedure.

The following procedures require the power splitter loss data:

- *Verifying Output Power Level Accuracy*
- *Verifying Output Frequency Response*
- *Adjusting Output Power Level Accuracy*


The verification and adjustment procedures use different test points for the splitter loss characterization. For characterization used in a verification procedure, use the test points in the *Characterization Test Points for Verification Procedures* table. For characterization used in an adjustment procedure, use 65 MHz to 6 GHz in 5 MHz steps for the test points.

1. Connect the SMA (m) connector of the 6 dB attenuator to the RF OUT front panel connector of the vector signal generator.
2. Connect the SMA (f) connector of the 6 dB attenuator to the power sensor using an SMA (m)-to-N (f) adapter.

The following figure illustrates the hardware setup.



**Figure 4. Connection Diagram for Measuring Splitter Input Power**

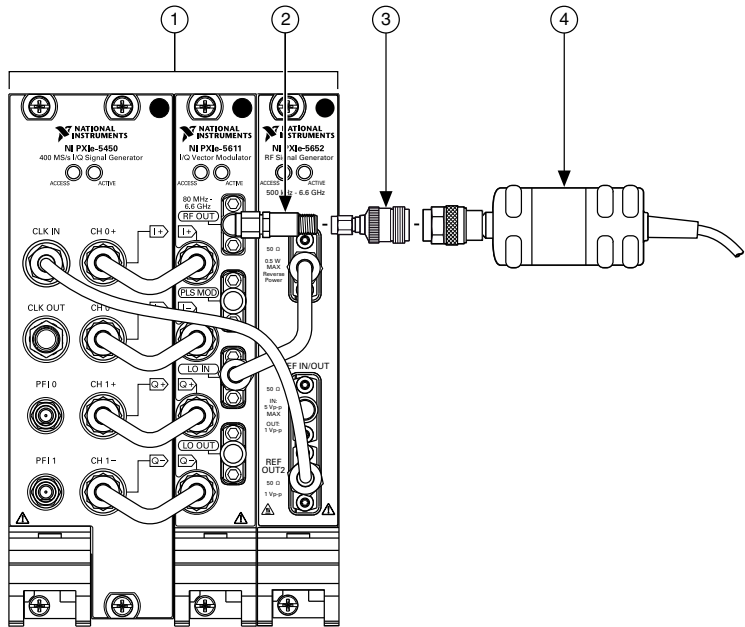

1. Vector Signal Generator
  2. 6 dB Attenuator
  3. SMA (m)-to-N (f) Adapter
  4. Power Sensor
3. Configure the vector signal generator to generate a tone using the following settings:
- Center frequency: For characterization used in a verification procedure, use the first test point in the [Characterization Test Points for Verification Procedures](#) table in the [Characterizing Power Splitter Balance](#) section. For characterization used in an adjustment procedure, use 65 MHz.
  - Power level: Configured output power from transfer function A in the following table.
  - Tone offset: 3.75 MHz

**Table 4. Accuracy Transfer Definitions**

Transfer Function	Supported Output Power Level (dBm)	Configured Output Power (dBm)	Configured Reference Level (dBm)
A	+10 to -20	0	10
B	-20 to -40	-15	-30

4. Configure the power sensor to correct for the center frequency from step 3 using the power sensor frequency correction function.
5. Use the power sensor to measure the output power.

6. Repeat steps 3 through 5 for the remaining frequencies. For characterization used in a verification procedure, use the test points from the [Characterization Test Points for Verification Procedures](#) table in the [Characterizing Power Splitter Balance](#) section. For characterization used in an adjustment procedure, use 65 MHz to 6 GHz in 5 MHz steps for the test points.

Record the resulting measurements as *splitter input power*. Each frequency should have a corresponding value.

7. Disconnect the power sensor from the 6 dB attenuator.
8. Connect the power splitter input port to the SMA (f) port of the 6 dB attenuator using an SMA (m)-to-SMA (m) adapter.
9. Connect the power sensor to one of the splitter output ports using the SMA (m)-to-N (f) adapter.


Refer to this port as *splitter output 1* for the remainder of this procedure and all tests that use the resulting characterization data.

10. Connect the other output of the power splitter to the SMA (f) connector of a second 6 dB attenuator using an SMA (m)-to-SMA (m) cable.
11. Connect the SMA (m) connector of the second 6 dB attenuator to the RF IN front panel port of the spectrum analyzer.

Refer to this port as *splitter output 2* for the remainder of this procedure and all tests that use the resulting characterization data.

The following figure illustrates the hardware setup.

**Figure 5. Connection Diagram for Measuring Splitter Output 1 Power**

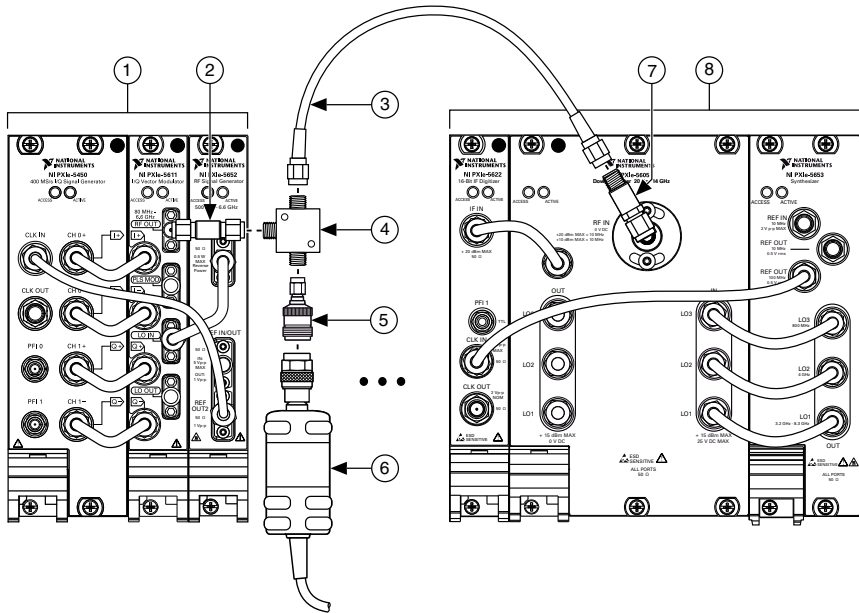

- |                               |                             |
|-------------------------------|-----------------------------|
| 1. Vector Signal Generator    | 5. SMA (m)-to-N (f) Adapter |
| 2. 6 dB Attenuator            | 6. Power Sensor             |
| 3. SMA (m)-to-SMA (m) Adapter | 7. SMA (m)-to-SMA (m) Cable |
| 4. Power Splitter             | 8. Spectrum Analyzer        |



**Note** If you use the PXIe-5665, as recommended, for the spectrum analyzer, disable the preamplifier and preselector options and set the FFT window type to Flat Top.

12. Configure the vector signal generator to generate a tone using the following settings:
  - Center frequency: *Center frequency* from step 3.
  - Power level: *Configured output power* from transfer function A in the *Accuracy Transfer Definitions* table.
13. Configure the spectrum analyzer using the following settings:
  - Center frequency: Center frequency of the vector signal generator + *tone offset* from step 3.
  - Reference level: Configured reference level from transfer function A in the *Accuracy Transfer Definitions* table.
  - Span: 250 kHz
  - Resolution bandwidth: 4 kHz
  - Averaging mode: RMS
  - Number of averages: 10
14. Use the spectrum analyzer to acquire the signal.

15. Measure the peak output power present in the signal from step 14. Store this value as *splitter output 2 power*.
16. Configure the power sensor to correct for the frequency from step 12 using the power sensor frequency correction function.
17. Use the power sensor to measure the output power. Store this value as *splitter output 1 power*.
18. Repeat steps 12 through 17 for the remaining frequencies. For characterization used in a verification procedure, use the test points from the [Characterization Test Points for Verification Procedures](#) table in the [Characterizing Power Splitter Balance](#) section. For characterization used in an adjustment procedure, use 65 MHz to 6 GHz in 5 MHz steps for the test points.
19. Repeat steps 12 through 18 for transfer function B from the *Accuracy Transfer Definitions* table.
20. Calculate a table of splitter loss values for each frequency of each transfer function using the following equation:  
  

$$\text{splitter loss} = \text{splitter output 1 power} - \text{splitter input power}$$
 Store the results in a *Splitter Loss* table.
21. Calculate the accuracy transfer result for each frequency of each transfer function using the following equation:  
  

$$\text{accuracy transfer result} = \text{splitter output 1} - \text{splitter output 2}$$
 Store the results in an *RF Output Transfer Result* table.

## Self-Calibrating the PXIe-5644

---

Allow a 30-minute warm-up time before you begin self-calibration.



**Note** The warm-up time begins after the PXI Express chassis is powered on and the operating system completely loads.

The PXIe-5644 includes precise internal circuits and references used during self-calibration to adjust for any errors caused by short-term fluctuations in the environment. You must call the self-calibration function to validate the specifications in the [Verification](#) section.

1. Perform self-calibration using the installed self-calibration executable or the niVST Self-Calibrate VI. Open one of the following self-calibration tools:
  - Navigate to **Start»All Programs»National Instruments»Vector Signal Transceivers»VST Self-Calibrate** or `<Program Files>\National Instruments\NI VST\Self Calibration` to launch the self-calibration executable.
  - Add the niVST Self-Calibrate VI, located on the **Functions»Instrument I/O»Instrument Drivers»NI VST Calibration** palette, to a block diagram.
2. Run the self-calibration executable or VI.

# As-Found and As-Left Limits

---

The as-found limits are the published specifications for the PXIe-5644. NI uses these limits to determine whether the PXIe-5644 meets the specifications when it is received for calibration. Use the as-found limits during initial verification.

The as-left calibration limits are equal to the published NI specifications for the PXIe-5644, less guard bands for measurement uncertainty, temperature drift, and drift over time. NI uses these limits to reduce the probability that the instrument will be outside the published specification limits at the end of the calibration cycle. Use the as-left limits when performing verification after adjustment.

## Verification

---

The performance verification procedures assume that adequate traceable uncertainties are available for the calibration references.


### Verifying Internal Frequency Reference

This procedure verifies the frequency accuracy of the PXIe-5644 onboard frequency reference using a vector signal generator.

1. Connect the vector signal generator RF OUT front panel connector to the PXIe-5644 RF IN front panel connector.

The following figure illustrates the hardware setup.

**Figure 6. Internal Frequency Reference Verification Cabling Diagram**

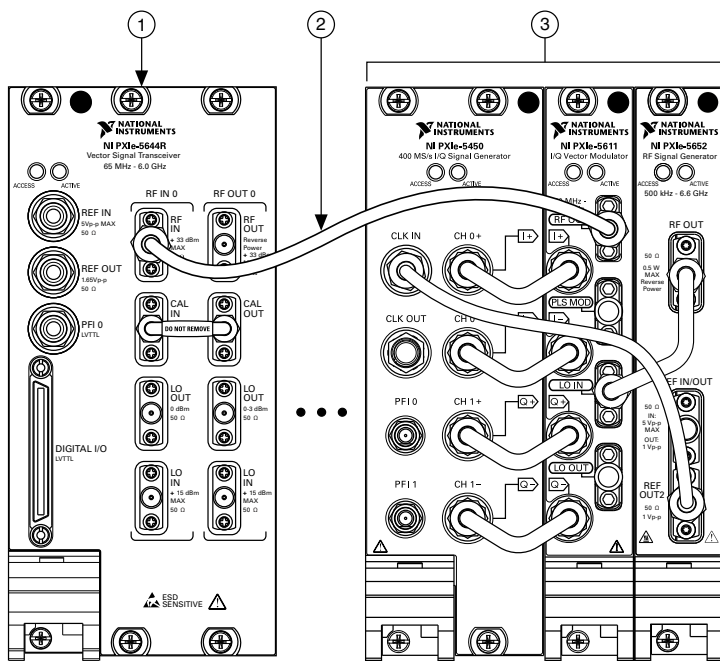

1. PXIe-5644
  2. SMA (m)-to-SMA (m) Cable
  3. Vector Signal Generator
2. Connect an available 10 MHz rubidium frequency reference output to the vector signal generator REF IN front panel connector.
  3. Configure the vector signal generator to generate a 2.22 GHz signal with a 0 dBm average output power, using the following settings:
    - Center frequency: 2.22 GHz
    - Output power: 0 dBm
    - Reference Clock source: External
  4. Configure the PXIe-5644 to acquire and measure the signal generated in step 3, using the following settings:
    - Center frequency: 2.22 GHz
    - Reference level: +10 dBm
    - Resolution bandwidth: 100 Hz
    - Span: 100 kHz
    - FFT window: Hanning
    - Averaging type: RMS
    - Number of averages: 20
    - Reference Clock source: Onboard

5. Measure the frequency of the peak acquired tone.
  6. Calculate the deviation using the following equation:
- 

$$\Delta f = \left| \frac{f_{\text{measuredGHz}} - 2.2\text{GHz}}{2.2\text{GHz}} \right|$$

7. The result in step 6 should be less than the result of the following equation:

*initial accuracy + aging + temperature stability*

where

$$\text{initial accuracy} = \pm 200 * 10^{-9}$$

$$\text{aging} = \pm 1 * 10^{-6} / \text{year} * \text{number of years since last adjustment}$$

$$\text{temperature stability} = \pm 1 * 10^{-6}$$



**Note** You can determine number of years since last adjustment programmatically using the PXIe-5644/5645 Instrument Design Libraries.


## Verifying RF Input Spectral Purity

This procedure verifies the RF input spectral purity of the PXIe-5644.

1. Connect the PXIe-5644 LO OUT (RF IN 0) front panel connector to the RF IN front panel connector of the spectrum analyzer.

The following figure illustrates the hardware setup.

**Figure 7. RF Input Spectral Purity Verification Cabling Diagram**

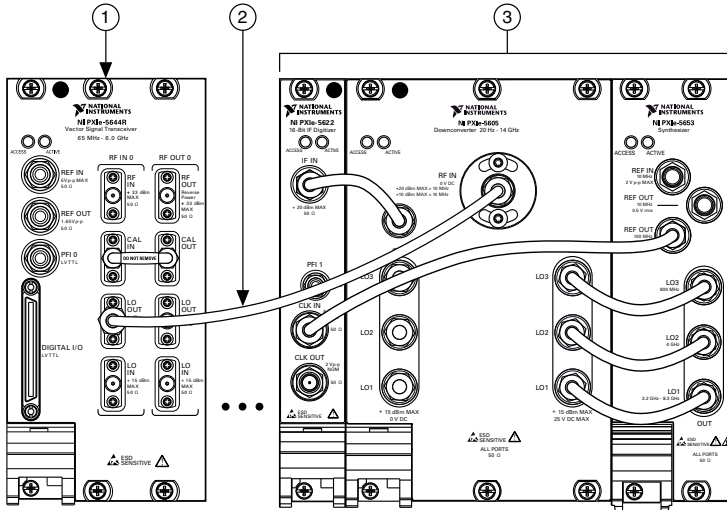

1. PXIe-5644
  2. SMA (m)-to-SMA (m) Cable
  3. Spectrum Analyzer
2. Connect an available 10 MHz rubidium frequency reference output to the PXIe-5644 REF IN front panel connector.
  3. Connect an available 10 MHz rubidium frequency reference output to the spectrum analyzer REF IN front panel connector.
  4. Configure the PXIe-5644 to export the LO using the following settings:
    - Center frequency: 1 GHz
    - LO OUT: Enabled
    - Reference Clock source: REF IN
  5. Configure the spectrum analyzer to acquire a spectrum using the following settings:
    - Center frequency: 1 GHz
    - Reference level: 0 dBm
    - Span: 100 Hz
    - Resolution bandwidth: 10 Hz
    - Reference Clock source: External
    - Averaging type: RMS
    - Number of averages: 20
  6. Measure the peak power at the center frequency.
- The measured value is the power, in dBm, of the generated tone.



7. Configure the spectrum analyzer to acquire a spectrum using the following settings:
  - Center frequency: *Center frequency* from step 4 + 20 kHz
  - Reference level: 0 dBm
  - Span: 100 Hz
  - Resolution bandwidth (RBW): 10 Hz
  - Reference Clock source: External
  - Averaging type: RMS
  - Number of averages: 20
8. Measure the power at a 20 kHz offset. Normalize the result to 1 Hz bin width by subtracting  $10 * \log(\text{RBW})$ , where RBW is the setting specified in step 7.

The result of this step is in dBm/Hz.

9. Calculate the relative difference between the signal and noise using the following equation:

$$\text{SSB Phase Noise at 20 kHz (dBc/Hz)} = \text{step 8 measurement (dBc/Hz)} - \text{step 6 measurement (dBm)}$$

The result of this step is in dBc/Hz.

10. Compare the results of step 9 to the specified limits in the following table.

**Table 5.** SSB Phase Noise at 20 kHz Offset (Low Loop Bandwidth)

Frequency	As-Found Limit (dBc/Hz)	As-Left Limit (dBc/Hz)
<3 GHz	-99	-99
3 GHz to 4 GHz	-91	-91
>4 GHz to 6 GHz	-93	-93

11. Repeat steps 4 through 10 for the following frequencies:
  - 1 GHz
  - 1.9 GHz
  - 2.4 GHz
  - 3 GHz
  - 4.4 GHz
  - 5.8 GHz
12. Repeat steps 4 through 11 for the configurations specified in the following tables.

**Table 6.** SSB Phase Noise at 20 kHz Offset (Medium-Loop Bandwidth)

Frequency	As-Found Limit (dBc/Hz)	As-Left Limit (dBc/Hz)
<3 GHz	-99	-99
3 GHz to 4 GHz	-93	-93
>4 GHz to 6 GHz	-93	-93

**Table 7. SSB Phase Noise at 20 kHz Offset (High-Loop Bandwidth)**

Frequency	As-Found Limit (dBc/Hz)	As-Left Limit (dBc/Hz)
<3 GHz	-94	-94
3 GHz to 4 GHz	-91	-91
>4 GHz to 6 GHz	-87	-87


## Verifying RF Output Spectral Purity

This procedure verifies the RF output spectral purity of the PXIe-5644.

1. Connect the PXIe-5644 RF OUT (RF IN 0) front panel connector to the RF IN front panel connector of the spectrum analyzer.

The following figure illustrates the hardware setup.

**Figure 8. RF Output Spectral Purity Verification Cabling Diagram**

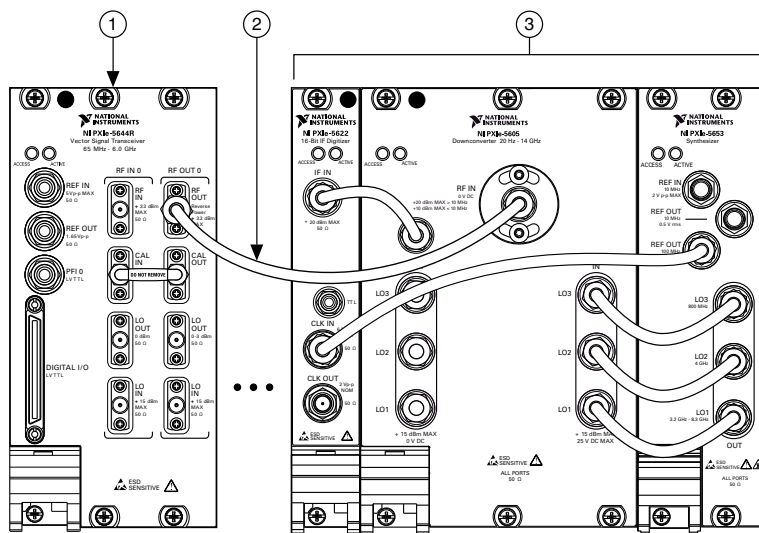

1. PXIe-5644
  2. SMA (m)-to-SMA (m) Cable
  3. Spectrum Analyzer
2. Connect an available 10 MHz rubidium frequency reference output to the PXIe-5644 REF IN front panel connector.
  3. Connect an available 10 MHz rubidium frequency reference output to the spectrum analyzer REF IN front panel connector.
  4. Configure the PXIe-5644 to generate an offset CW tone using the following settings:
    - Center frequency: 1 GHz
    - Output power: 0 dBm

- Tone offset: 3.75 MHz
  - I/Q rate: 10 MS/s
  - Loop bandwidth: Low
  - Fractional mode: Enabled
  - Step size: 200 kHz
  - Reference Clock source: REF IN
5. Configure the spectrum analyzer to acquire a spectrum using the following settings:
    - Center frequency: 1 GHz + 3.75 MHz
    - Reference level: 0 dBm
    - Span: 100 Hz
    - Resolution bandwidth: 10 Hz
    - Reference Clock source: External
    - Averaging type: RMS
    - Number of averages: 20
  6. Measure the peak power at the center frequency.  
The measured power should match the power, in dBm, of the generated tone.
  7. Configure the spectrum analyzer to acquire a spectrum using the following settings:
    - Center frequency: *Center frequency* from step 5 + 20 kHz
    - Reference level: 0 dBm
    - Span: 100 Hz
    - Resolution bandwidth: 10 Hz
    - Reference Clock source: External
    - Averaging type: RMS
    - Number of averages: 20
  8. Measure the power at a 20 kHz offset. Normalize the result to 1 Hz bin width by subtracting  $10 * \log(\text{RBW})$ , where RBW is the setting specified in step 7.  
The result of this step is in dBm/Hz.
  9. Calculate the relative difference between the signal and noise using the following equation:  
  

$$\text{SSB Phase Noise at 20 kHz (dBm/Hz)} = \text{step 8 measurement (dBm/Hz)} - \text{step 6 measurement (dBm)}$$
 The result of this step is in dBm/Hz.
  10. Compare the results of step 9 to the specified limits in the following table.

**Table 8.** SSB Phase Noise at 20 kHz Offset (Low-Loop Bandwidth)

Frequency	As-Found Limit (dBc/Hz)	As-Left Limit (dBc/Hz)
<3 GHz	-99	-99
3 GHz to 4 GHz	-91	-91
>4 GHz to 6 GHz	-93	-93

11. Repeat steps 4 through 10 for the following frequencies:
  - 1 GHz
  - 1.9 GHz
  - 2.4 GHz
  - 3 GHz
  - 4.4 GHz
  - 5.8 GHz
12. Repeat steps 4 through 11 for the configurations specified in the following tables.

**Table 9.** SSB Phase Noise at 20 kHz Offset (Medium-Loop Bandwidth)

Frequency	As-Found Limit (dBc/Hz)	As-Left Limit (dBc/Hz)
<3 GHz	-99	-99
3 GHz to 4 GHz	-93	-93
>4 GHz to 6 GHz	-93	-93

**Table 10.** SSB Phase Noise at 20 kHz Offset (High-Loop Bandwidth)

Frequency	As-Found Limit (dBc/Hz)	As-Left Limit (dBc/Hz)
<3 GHz	-94	-94
3 GHz to 4 GHz	-91	-91
>4 GHz to 6 GHz	-87	-87

## Verifying Input Absolute Amplitude Accuracy

This procedure verifies the absolute amplitude accuracy of the PXIe-5644 input channels.


This procedure requires the same attenuator and splitter positioning as used during the [Test System Characterization](#) procedures, as well as the data collected in the [Characterizing Power Splitter Balance](#) section. You must characterize the power splitter balance before running this procedure. Ensure you use the characterization data derived from test points in the [Characterization Test Points for Verification Procedures](#) table in the [Characterizing Power Splitter Balance](#) section.

You must zero the power sensor as described in the [Zeroing the Power Sensor](#) section prior to starting this procedure.

1. Connect the vector signal generator RF OUT front panel connector to the input terminal of the power splitter using a SMA (m)-to-SMA (m) cable.
2. Connect splitter output 1 directly to the power sensor input connector using the SMA (m)-to-N (f) adapter.
3. Connect splitter output 2 to the SMA (f) end of the 6 dB attenuator using a 3.5 mm (m)-to-3.5 mm (m) adapter.
4. Connect the remaining 6 dB attenuator SMA (m) connector directly to the PXIe-5644 RF IN front panel connector.

The following figure illustrates the complete hardware setup.

**Figure 9.** Input Absolute Amplitude Accuracy Verification Cabling Diagram

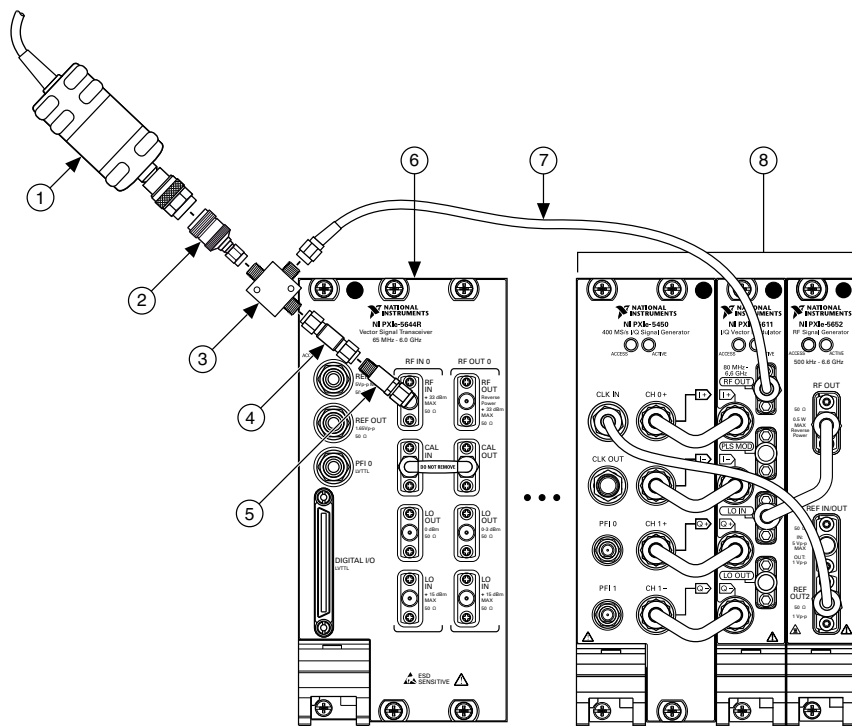

1. Power Sensor
  2. SMA (m)-to-N (f) Adapter
  3. Power Splitter
  4. 3.5 mm (m)-to-3.5 mm (m) Adapter
  5. 6 dB Attenuator
  6. PXIe-5644
  7. SMA (m)-to-SMA (m) Cable
  8. Vector Signal Generator
5. Configure the PXIe-5644 to acquire a signal at 500 MHz, using the following settings:
    - Center frequency: 500 MHz
    - Reference level: 30 dBm



**Note** Steps 6 through 10 create correction factors that transfer the accuracy of the power sensor to the vector signal generator. Record the results from these steps in a lookup table called *Accuracy Transfer Results*.

6. Configure the vector signal generator to generate a 76.25 MHz tone, using the following settings:
  - Center frequency: 76.25 MHz
  - Tone offset: 3.75 MHz
  - I/Q rate: 10 MS/s
  - Output power: *Configured output power* from transfer row A in the following table.

**Table 11. RF Input Accuracy Transfers**

Transfer	Supported Reference Levels (dBm)	Configured Output Power (dBm)	Start Frequency (MHz)	Stop Frequency (MHz)	Frequency Step Size (MHz)
A	30 to -10	0	76.25	101.25	5
			146.25	946.25	50
			996.25	5,996.25	200
B	<-10 to -30	-20	76.25	101.25	5
			146.25	946.25	50
			996.25	5,996.25	200

7. Configure the power sensor to correct for the (*center frequency + tone offset*) from step 6 using the power sensor frequency correction function.
8. Measure the power of the signal present at the reference output of the power splitter using the power sensor.

Record the results from this step as *accuracy transfer result*.

9. Repeat steps 6 through 8 for the remaining frequencies listed in transfer row A in the previous table.
10. Repeat steps 6 through 9 for transfer row B in the previous table. Create a table and include a value for each test point, *transfer* versus *frequency*.
11. Configure the PXIe-5644 to acquire a signal at 80 MHz, using the following settings:
  - Center frequency: 80 MHz
  - Reference level: 30 dBm
  - Span: 10 MHz
  - Resolution bandwidth: 1 kHz
  - Averaging type: RMS
  - Number of averages: 10
  - FFT window: Flat Top
12. Configure the vector signal generator to generate a signal at the *center frequency* specified in step 11 with a 3.75 MHz signal offset, using the following settings:
  - Center frequency: *Center frequency* from step 11
  - Tone offset: 3.75 MHz
  - Power level: *Configured output power* from the transfer row in the previous table that supports the *reference level* from step 11.
  - I/Q rate: 10 MS/s
  - Digital gain: (*reference level* from step 11 - *power level* from step 12) or 0 dB, whichever is less.
13. Calculate the *transfer input power* using the following equation:

*transfer input power* = *accuracy transfer result* + *digital gain* from step 12



**Note** Determine the *accuracy transfer result* by interpolating between the data points in the *Accuracy Transfer Results* table.

14. Calculate the *corrected input power* using the following equation:

$$\text{corrected input power} = \text{transferred input power} + \text{splitter balance}$$



**Note** Determine the *splitter balance* by interpolating between data points derived using test points in the *Characterization Test Points for Verification Procedures* table in the *Characterizing Power Splitter Balance* section.

15. Configure the PXIe-5644 using the settings from step 11, perform an acquisition, and measure the tone present at the offset of 3.75 MHz.
16. Calculate the *absolute amplitude accuracy* using the following equation:
- $$\text{absolute amplitude accuracy} = \text{PXIe-5644 input power} - \text{corrected input power}$$
17. Repeat steps 11 through 16 for the remaining frequencies in the previous table.
18. Repeat steps 11 through 17 for the remaining reference levels from 30 dBm to -30 dBm in 10 dB increments.
19. Compare the *absolute amplitude accuracy* values measured to the verification test limits in the following table.

**Table 12.** Input Absolute Amplitude Accuracy Verification Test Limits

Frequency	As-Found Limit (dB)	As-Left Limit (dB)
65 MHz to <375 MHz	±0.70	±0.55
375 MHz to <2 GHz	±0.65	±0.45
2 GHz to <4 GHz	±0.70	±0.40
4 GHz to 6 GHz	±0.90	±0.55

## Verifying Input Frequency Response

This procedure verifies the frequency response of the PXIe-5644 input channels.

This procedure requires the same attenuator and splitter positioning as used during the *Test System Characterization* procedures, as well as the data collected in the *Characterizing Power Splitter Balance* section. You must characterize the power splitter balance before running this procedure. Ensure you use the characterization data derived from test points in the *Characterization Test Points for Verification Procedures* table in the *Characterizing Power Splitter Balance* section.


You must zero the power sensor as described in the *Zeroing the Power Sensor* section prior to starting this procedure.

1. Connect the vector signal generator RF OUT front panel connector to the input terminal of the power splitter using an SMA (m)-to-SMA (m) cable.
2. Connect splitter output 1 directly to the power sensor input connector using the SMA (m)-to-N (f) adapter.

3. Connect splitter output 2 to the SMA (f) end of the 6 dB attenuator using a 3.5 mm (m)-to-3.5 mm (m) adapter.
4. Connect the remaining 6 dB attenuator SMA (m) connector directly to the PXIe-5644 RF IN front panel connector.

The following figure illustrates the complete hardware setup.

**Figure 10.** Input Frequency Response Verification Cabling Diagram

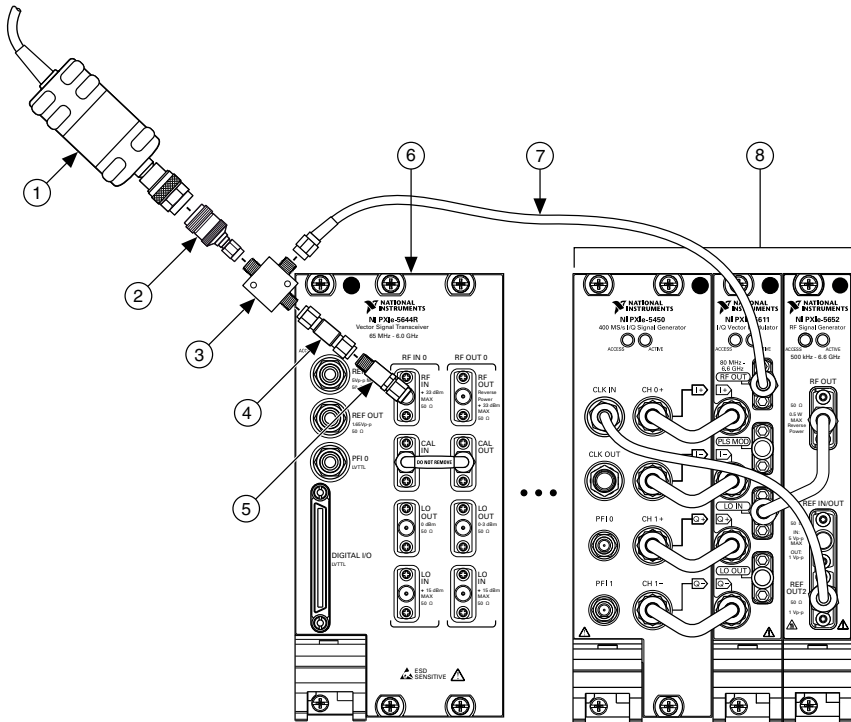

1. Power Sensor
  2. SMA (m)-to-N (f) Adapter
  3. Power Splitter
  4. 3.5 mm (m)-to-3.5 mm (m) Adapter
  5. 6 dB Attenuator
  6. PXIe-5644
  7. SMA (m)-to-SMA (m) Cable
  8. Vector Signal Generator
5. Configure the PXIe-5644 to acquire a signal using the following settings:
    - Center frequency: 500 MHz
    - Reference level: 30 dBm



**Note** Steps 6 through 11 create correction factors that transfer the accuracy of the power sensor to the vector signal generator. Record the results from these steps in a lookup table called *Accuracy Transfer Results*.



6. Configure the vector signal generator to generate a 300 MHz tone, using the following settings:
  - Center frequency: 300 MHz
  - Tone offset:  $-(\text{test bandwidth}/2)$  MHz, where *test bandwidth* is the value specified in the *Input Frequency Response Test Points* table.
  - I/Q rate: 10 MS/s
  - Output power: Configured output power from the transfer A row in the following table.

**Table 13. Frequency Response Accuracy Transfers**

Transfer	Supported Reference Levels (dBm)	Configured Output Power (dBm)
A	30 to -10	0
B	-10 to -30	-20


7. Configure the power sensor to correct for the value of  $(\text{center frequency} + \text{tone offset})$  from step 6 using the power sensor frequency correction function.
8. Measure the power of the signal present at splitter output 1 of the power splitter using the power sensor.
9. Repeat steps 6 through 8 by sweeping the vector signal generator tone offset from  $-(\text{test bandwidth}/2)$  to  $+(\text{test bandwidth}/2)$  in 5 MHz steps, where *test bandwidth* is the value specified in the following table.


**Table 14. Input Frequency Response Test Points**

Test Bandwidth (MHz)	Test Points (MHz)				
20	300				
80	450	550	600	650	800
	950	1,000	1,050	1,200	1,550
	1,600	1,650	2,000	2,650	2,700
	2,750	3,000	3,800	3,950	4,000
	4,050	4,500	4,950	5,000	5,050
	5,500	5,950			

10. Repeat steps 6 through 9 for the remaining frequencies listed in the previous table.
11. Repeat steps 6 through 10 for transfer B in the *Frequency Response Accuracy Transfers* table.
12. Configure the PXIe-5644 to acquire a signal at 300 MHz, using the following settings:
  - Center frequency: 150 MHz
  - Reference level: 30 dBm
  - Span: *Test bandwidth* from the *Input Frequency Response Test Points* table
  - Resolution bandwidth: 1 kHz

- Averaging type: RMS
  - Number of averages: 10
  - FFT window: Flat Top
13. Configure the vector signal generator to generate a signal at the *center frequency* specified in step 12 - (*test bandwidth*/2) MHz, where *test bandwidth* is the value specified in the previous table, using the following settings:
    - Center frequency: *Center frequency* from step 12
    - Tone offset: -(*test bandwidth*/2) MHz
    - Power level: *Configured output power* from the transfer row in the *Accuracy Transfer Definitions* table from the [Characterizing Power Splitter Loss](#) section that supports the *reference level* from step 12.
    - I/Q rate: 10 MS/s
    - Digital gain: (*reference level* from step 10 - *power level* from step 13 or 0 dB, whichever is less).
  14. Calculate the *transfer input power* using the following equation:
 
$$\text{transfer input power} = \text{accuracy transfer result} + \text{digital gain from step 13}$$

 **Note** Find the *accuracy transfer result* by interpolating between the data points in the *Accuracy Transfer Results* table.
  15. Calculate the *corrected input power* using the following equation:
 
$$\text{corrected input power} = \text{transferred input power} + \text{splitter balance}$$

 **Note** Determine the *splitter balance* by interpolating between data points derived using test points in the [Characterization Test Points for Verification Procedures](#) table in the [Characterizing Power Splitter Balance](#) section.
  16. Configure the PXIe-5644 using the settings from step 12, perform an acquisition, and measure the tone present at the (*center frequency* + *tone offset*) from step 13.
  17. Calculate the *absolute amplitude accuracy* using the following equation:
 
$$\text{absolute amplitude accuracy} = \text{PXIe-5644 input power} - \text{corrected input power}$$
  18. Repeat steps 13 through 17 by sweeping the vector signal generator tone offset from -(*test bandwidth*/2) to +(*test bandwidth*/2) in 5 MHz steps, where *test bandwidth* is the value specified in the *Input Frequency Response Test Points* table.
  19. Determine the positive and negative frequency response results for the center frequency from step 12 by completing the following steps.
    - a) Subtract the median *absolute power level accuracy* from the maximum *absolute power level accuracy* to determine the positive (+) *frequency response*.
    - b) Subtract the minimum *absolute power level accuracy* from the median *absolute power level accuracy* to determine the negative (-) *frequency response*.
  20. Repeat steps 12 through 19 for the remaining frequencies in the *Input Frequency Response Test Points* table.
  21. Repeat steps 12 through 20 for the remaining reference levels between 0 dBm and -30 dBm in 10 dB steps.
  22. Compare the  $\pm$  *frequency response* values measured to the verification test limits in the following table.

**Table 15. Input Frequency Response Test Limits**

Frequency	Equalized Bandwidth (MHz)	As-Found Limit (dB)	As-Left Limit (dB)
>109 MHz to 375 MHz	20	±0.5	±0.5
>375 MHz to 6 GHz	80	±0.5	±0.5

## Verifying Input Average Noise Density

This procedure verifies the average noise level of the PXIe-5644.

1. Connect a 50  $\Omega$  terminator to the PXIe-5644 RF IN front panel connector.
2. Configure the PXIe-5644 to acquire a signal at 100 MHz center frequency, using the following settings:
  - Center frequency: 100 MHz
  - Reference level: -50 dBm
  - Span: 1 MHz
  - Resolution bandwidth: 1 kHz
  - Averaging type: RMS
  - Number of averages: 50
  - FFT window: Flat Top
3. Read the power spectral density from the PXIe-5644.
4. Convert the sorted spectrum magnitude values from decibel milliwatts (dBm) to watts (W), calculate the mean, and convert the result back to dBm. The result is the *average noise* based on the configuration in step 2. Convert *average noise* to *average noise density* by normalizing to 1 Hz using the following equation:  

$$\text{average noise density} = \text{average noise} - 10 * \log(\text{resolution bandwidth from step 2})$$
 Record the result.
5. Repeat steps 2 through 4 for the remaining frequencies from 100 MHz to 6 GHz in 590 MHz steps.
6. Change the reference level to -10 dBm and repeat steps 2 through 5.
7. Compare the PXIe-5644 *average noise density* to the verification test limits listed in the following tables.

**Table 16. Average Noise Density Test Limits (-50 dBm Reference Level)**

Frequency	As-Found Limit (dBm/Hz)	As-Left Limit (dBm/Hz)
65 MHz to 4 GHz	-159	-159
>4 GHz to 6 GHz	-156	-156

**Table 17. Average Noise Density Test Limits (-10 dBm Reference Level)**

Frequency	As-Found Limit (dBm/Hz)	As-Left Limit (dBm/Hz)
65 MHz to 4 GHz	-145	-145
>4 GHz to 6 GHz	-144	-144


## Verifying Input Nonharmonic Spurs

This procedure verifies the nonharmonic spurs in the presence of an external signal.

1. Connect the vector signal generator RF OUT connector to the RF IN front panel connector of the PXIe-5644.

The following figure illustrates the hardware setup.

**Figure 11. Input Nonharmonic Spurs Verification Cabling Diagram**

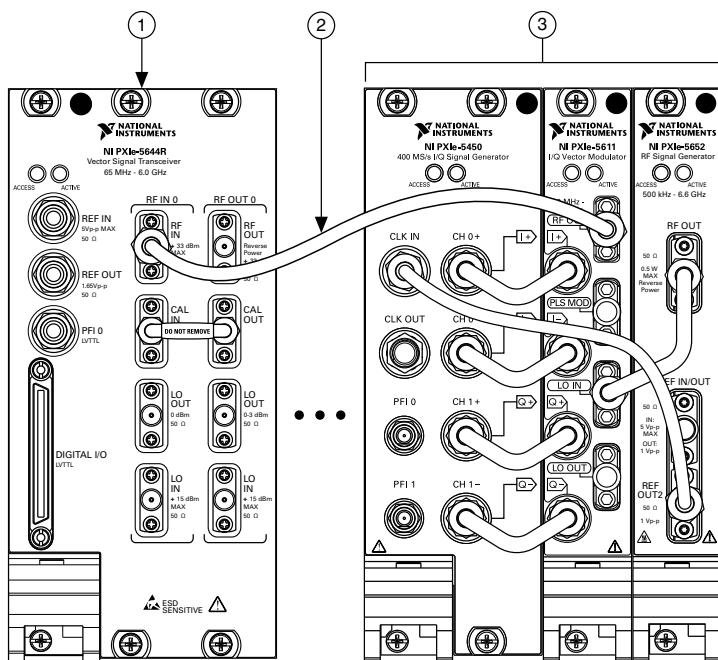

1. PXIe-5644
  2. SMA (m)-to-SMA (m) Cable
  3. Vector Signal Generator
2. Connect an available 10 MHz rubidium frequency reference output to the PXIe-5644 REF IN front panel connector.
  3. Connect an available 10 MHz rubidium frequency reference output to the vector signal generator REF IN front panel connector.

4. Configure the PXIe-5644 to acquire an 80 MHz-wide signal, using the following settings:
  - Center frequency: 144.2 MHz
  - Reference level: 0 dBm
  - Span: 80 MHz
  - Resolution bandwidth: 1 kHz
  - Averaging type: RMS
  - Number of averages: 10
  - FFT window: Flat Top
5. Configure the vector signal generator to generate a single -1 dB<sub>r</sub> tone at the *center frequency* specified in step 4.



**Note** The following steps provide a general method for validating the nonharmonic spurs. For an improved measurement, use a peak-detect method to differentiate spurious content from noise.

6. Acquire an 80 MHz-wide spectrum using the PXIe-5644.
7. Measure the peak power within 100 kHz to 1 MHz offset of the tone on either side of the carrier frequency from the data acquired in step 6.  
  
Record the maximum value for comparison to the >100 kHz offset limits.
8. Measure the peak power at a >1 MHz offset of the tone on either side of the carrier frequency from the data acquired in step 6.  
  
Record the maximum value for comparison to the >1,000 kHz offset limits.
9. Repeat steps 4 through 8 for the remaining test points listed in the following table.

**Table 18.** Input Nonharmonic Spurs Test Points

Frequency (MHz)				
144.2	264.2	504.2	1,008.2	2,016.2
2,502.2	3,024.2	4,008.2	5,016.2	—

10. Compare the results from steps 7 through 9 to the test limits in the following table.

**Table 19.** Input Nonharmonic Spurs Test Limits

Frequency	Offset (kHz)	As-Found Limit (dBc)	As-Left Limit (dBc)
65 MHz to 3 GHz	>100	-60	-60
	>1,000	-75	-75
>3 GHz to 6 GHz	>100	-55	-55
	>1,000	-70	-70

# Verifying Output Power Level Accuracy

This procedure verifies the power level accuracy of the PXIe-5644 RF output channel.

This procedure requires the test setup and data collected in the [Characterizing Power Splitter Loss](#) section. You must characterize the power splitter loss before running this procedure.

Ensure you use the characterization data derived from test points in the [Characterization Test Points for Verification Procedures](#) table in the [Characterizing Power Splitter Balance](#) section.

You must zero the power sensor as described in the [Zeroing the Power Sensor](#) section prior to starting this procedure.

This procedure references the following tables you created when you characterized the power splitter loss:

- *Splitter Loss*
- *RF Output Accuracy Transfer Result*




**Note** If you use the PXIe-5665, as recommended, for the spectrum analyzer, disable the preamplifier and preselector options and set the FFT window type to Flat Top.

1. Connect the PXIe-5644 RF OUT front panel connector to the input terminal of the power splitter using a 3.5 mm (m)-to-3.5 mm (m) adapter.
2. Connect splitter output 1 directly to the power sensor using the SMA (m)-to-N (f) adapter.
3. Connect the remaining power splitter output to one end of the 6 dB attenuator using an SMA (m)-to-SMA (m) cable.
4. Connect the other port of the 6 dB attenuator directly to the spectrum analyzer RF IN front panel connector.

The following figure illustrates the complete hardware setup.

**Figure 12. Output Power Level Accuracy Verification Cabling Diagram**

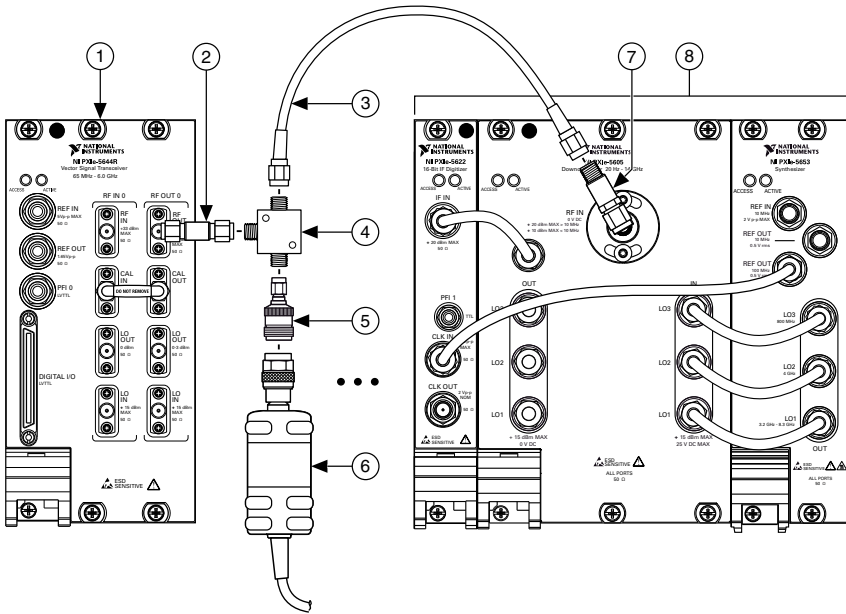

1. PXIe-5644
2. 3.5 mm (m)-to-3.5 mm (m) Adapter
3. SMA (m)-to-SMA (m) Cable
4. Power Splitter
5. SMA (m)-to-N (f) Adapter
6. Power Sensor
7. 6 dB Attenuator
8. Spectrum Analyzer

5. Configure the PXIe-5644 to generate a tone using the following settings:
  - Center frequency: 76.25 MHz
  - Output power: 10 dBm
  - Tone offset: 3.75 MHz
  - I/Q rate: 10 MS/s
6. Configure the spectrum analyzer to acquire a signal at the *center frequency* specified in step 5 using the following settings:
  - Center frequency: (*Center frequency* + *tone offset*) from step 5
  - Reference level: *Configured reference level* from the transfer row in the *RF Output Accuracy Transfer Result* table from the [Characterizing Power Splitter Loss](#) section that supports the *output power* from step 5.
  - Span: *Span* from the following table
  - Resolution bandwidth: *RBW* from the following table
  - Averaging type: RMS
  - Number of averages: *Number of averages* from the following table

**Table 20.** Advanced Spectrum Analyzer Settings

Supported Output Power Levels	Span (kHz)	RBW	Number of Averages
$x > -70$ dBm	250	4 kHz	10
$-70$ dBm $\geq x > -100$ dBm	250	900 Hz	20
$x \leq -100$ dBm	250	900 Hz	100

7. Acquire the signal with the spectrum analyzer and measure the tone power located at the value of (*center frequency + tone offset*) from step 5. This value is the *measured tone power*.

8. Calculate the *transferred output power* using the following equation:

$$\text{transferred output power} = \text{accuracy transfer result} + \text{measured tone power}$$



**Note** Determine the *accuracy transfer result* by interpolating between the data points in the *RF Output Transfer Result* table you created in step 21 of the [Characterizing Power Splitter Loss](#) section. Ensure you use the characterization data derived from test points in the [Characterization Test Points for Verification Procedures](#) table in the [Characterizing Power Splitter Balance](#) section.

9. Calculate the *corrected output power* using the following equation:

$$\text{corrected output power} = \text{transferred output power} + \text{splitter loss}$$



**Note** Determine the *splitter loss* by interpolating between the data points in the *Splitter Loss* table you created in step 20 of the [Characterizing Power Splitter Loss](#) section. Ensure you use the characterization data derived from test points in the [Characterization Test Points for Verification Procedures](#) table in the [Characterizing Power Splitter Balance](#) section. Choose the appropriate value based on the transfer function used from the [Accuracy Transfer Definitions](#) table in the [Characterizing Power Splitter Loss](#) section.

10. Calculate the *absolute power level accuracy* using the following equation:

$$\text{absolute power level accuracy} = \text{device output power} - \text{corrected output power}$$

Where *device output power* is the configured output power of the PXIe-5644 RF output path.

11. Repeat steps 5 through 10 for the remaining frequencies listed in the following table.

**Table 21.** Output Power Level Accuracy Test Points

Start Frequency (MHz)	Stop Frequency (MHz)	Frequency Step Size (MHz)
76.25	101.25	5
125.25	225.25	20
246.25	946.25	50
996.25	5,996.25	200

12. Repeat steps 5 through 11 for the remaining power levels between 10 dBm and -70 dBm in 10 dB steps.



13. Compare the *absolute power level accuracy* values measured to the test limits in the following table.

**Table 22.** Output Power Level Accuracy Test Limits

Frequency	As-Found Limit (dB)	As-Left Limit (dB)
65 MHz to <109 MHz	±0.70	±0.40
109 MHz to <270 MHz	±0.75	±0.45
270 MHz to <375 MHz	±0.70	±0.40
375 MHz to <2 GHz	±0.75	±0.40
2 GHz to <4 GHz	±0.75	±0.45
4 GHz to 6 GHz	±1.00	±0.55



**Note** The as-left limits are not listed in the published specifications for the PXIe-5644. These limits are based on published *PXIe-5644 Specifications*, less guard bands for measurement uncertainty, temperature drift, and drift over time.

## Verifying Output Frequency Response

This procedure verifies the frequency response of the PXIe-5644 outputs.

This procedure requires the test setup and data collected in the [Characterizing Power Splitter Loss](#) section. You must characterize the power splitter loss before running this procedure. Ensure you use the characterization data derived from test points in the [Characterization Test Points for Verification Procedures](#) table in the [Characterizing Power Splitter Balance](#) section.

You must zero the power sensor as described in the [Zeroing the Power Sensor](#) section prior to starting this procedure.




**Note** If you use the PXIe-5665, as recommended, for the spectrum analyzer, disable the preamplifier and preselector options and set the FFT window type to Flat Top.

1. Connect the PXIe-5644 RF OUT front panel connector to the input terminal of the power splitter using a 3.5 mm (m)-to-3.5 mm (m) adapter.
2. Connect splitter output 1 directly to the power sensor using the SMA (m)-to-N (f) adapter.
3. Connect the remaining power splitter output to one end of the 6 dB attenuator using an SMA (m)-to-SMA (m) cable.
4. Connect the other port of the 6 dB attenuator directly to the spectrum analyzer RF IN front panel connector.

The following figure illustrates the complete hardware setup.

**Figure 13. Output Frequency Response Verification Cabling Diagram**

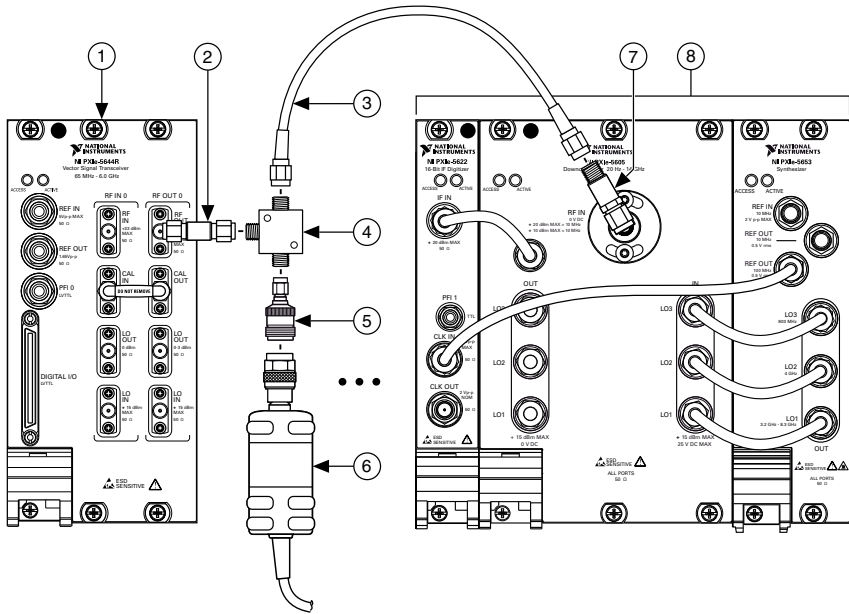

1. PXIe-5644
  2. 3.5 mm (m)-to-3.5 mm (m) Adapter
  3. SMA (m)-to-SMA (m) Cable
  4. Power Splitter
  5. SMA (m)-to-N (f) Adapter
  6. Power Sensor
  7. 6 dB Attenuator
  8. Spectrum Analyzer
5. Configure the PXIe-5644 to generate a signal at 300 MHz with a tone at  $-(test\ bandwidth/2)$  MHz offset, where *test bandwidth* is the value specified in the following table, using the following settings:
- Center frequency: 300 MHz
  - Tone offset:  $-(test\ bandwidth/2)$  MHz
  - I/Q rate: 120 MS/s
  - Output power: 0 dBm

**Table 23. Output Frequency Response Test Points**

Test Bandwidth (MHz)	Test Points (MHz)				
20	300				
80	450	550	600	650	800
	950	1,000	1,050	1,200	1,550
	1,600	1,650	2,000	2,650	2,700
	2,750	3,000	3,800	3,950	4,000
	4,050	4,500	4,950	5,000	5,050
	5,500	5,950			

6. Configure the spectrum analyzer to acquire a signal at the tone frequency of step 5, using the following settings:
  - Center frequency: (*Center frequency + tone offset*) from step 5, in MHz
  - Reference level: Configured reference level (dBm) from the transfer row in the *Accuracy Transfer Definitions* table in the [Characterizing Power Splitter Loss](#) section that supports the *output power* from step 5.
  - Span: *Span* from the following table
  - Resolution bandwidth: *RBW* from the following table
  - Averaging type: RMS
  - Number of averages: *Number of averages* from the following table

**Table 24. Advanced Spectrum Analyzer Settings**

Supported Output Power Levels	Span (kHz)	RBW	Number of Averages
$x > -70$ dBm	250	4 kHz	10
$-70$ dBm $\geq x > -100$ dBm	250	900 Hz	20
$x \leq -100$ dBm	250	900 Hz	100

7. Acquire the signal with the spectrum analyzer and measure the tone power located at the value of (*center frequency + tone offset*) from step 5. This value is the *measured tone power*.
8. Calculate the *transferred output power* using the following equation:

$$\text{transferred output power} = \text{accuracy transfer result} + \text{measured tone power}$$



**Note** Find the *accuracy transfer result* by interpolating between the data points in the *RF Output Transfer Result* table you created in step 21 of the [Characterizing Power Splitter Loss](#) section. Ensure you use the characterization data derived from test points in the [Characterization Test Points for Verification Procedures](#) table in the [Characterizing Power Splitter Balance](#) section.

9. Calculate the *corrected output power* using the following equation:

*corrected output power = transferred output power + splitter loss*



**Note** Find the *splitter loss* by interpolating between the data points in the *Splitter Loss* table you created in step 20 of the [Characterizing Power Splitter Loss](#) section. Ensure you use the characterization data derived from test points in the [Characterization Test Points for Verification Procedures](#) table in the [Characterizing Power Splitter Balance](#) section. Choose the appropriate value based on the transfer function used from the [Accuracy Transfer Definitions](#) table in the [Characterizing Power Splitter Loss](#) section.

10. Calculate the *absolute power level accuracy* using the following equation:

$$\text{absolute power level accuracy} = \text{device output power} - \text{corrected output power}$$

Where *device output power* is the configured output power of the PXIe-5644 RF output path.

11. Repeat steps 5 through 10 by sweeping the tone offset from  $-(\text{test bandwidth}/2)$  to  $+(\text{test bandwidth}/2)$  in 5 MHz steps, where *test bandwidth* is the value specified in the *Output Frequency Response Test Points* table.
12. Determine the positive and negative frequency response results for the *center frequency* from step 5 by completing the following steps.
- a) positive (+) *frequency response* = maximum *absolute power level accuracy* - median *absolute power level accuracy*
  - b) negative (-) *frequency response* = median *absolute power level accuracy* - minimum *absolute power level accuracy*
13. Repeat steps 5 through 12 for the remaining center frequencies listed in the *Output Frequency Response Test Points* table.
14. Repeat steps 5 through 13 for power levels 0 dBm to -30 dBm in 10 dB steps.
15. Compare the  $\pm$  *frequency response* values measured to the test limits in the following table.

**Table 25.** Output Frequency Response Test Limits

Frequency	Equalized Bandwidth (MHz)	As-Found Limit (dB)	As-Left Limit (dB)
>109 MHz to 375 MHz	20	$\pm 0.5$	$\pm 0.5$
>375 MHz to 6 GHz	80	$\pm 0.5$	$\pm 0.5$

## Verifying Output Noise Density

This procedure verifies the generated noise density of the PXIe-5644 outputs.




**Note** This measurement requires a measuring instrument with an average noise density better than -158 dBm/Hz. You may need an external preamplifier if your spectrum analyzer does not have an internal gain mode that can meet this requirement. If you are using an external preamplifier, begin with step 1, otherwise begin with step 3.

1. Connect the PXIe-5644 RF OUT front panel connector to the input connector of the external preamplifier.

2. Connect the preamplifier output to the RF IN front panel connector of the spectrum analyzer.

The following figure illustrates the hardware setup.

**Figure 14. Output Noise Density Verification Cabling Diagram**

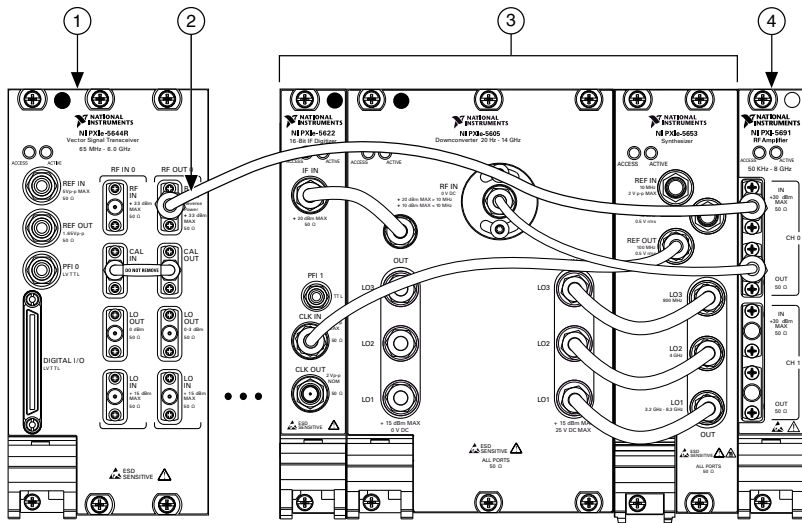

1. PXIe-5644
  2. SMA (m)-to-SMA (m) Cable
  3. Spectrum Analyzer
  4. Preamplifier
3. Connect an available 10 MHz rubidium frequency reference output to the PXIe-5644 REF IN front panel connector.
  4. Connect an available 10 MHz rubidium frequency reference output to the spectrum analyzer REF IN front panel connector.
  5. Generate a 1 MHz tone arbitrary waveform using the following settings:
    - Center frequency: 110 MHz
    - I/Q rate: 120 MS/s
    - Tone offset frequency: 1 MHz
    - Tone full scale: -40 dBFS
    - Power level: 10 dBm
    - Reference Clock source: REF IN
  6. Measure the output noise floor 4 MHz offset from the generated tone using the spectrum analyzer and the following settings:
    - Center frequency: *Center frequency* from step 5 + 5 MHz
    - Reference level: -10 dBm
    - Frequency span: 1 MHz
    - Number of averages: 200
    - Reference Clock source: External

- Attenuation: 0 dB
- Resolution bandwidth: 500 Hz

- Convert the sorted spectrum magnitude values from decibel milliwatts (dBm) to watts (W), calculate the mean, and convert the result to decibel milliwatts. This value is the *average noise*. Convert *average noise* to *average noise density* by normalizing to 1 Hz using the following equation:

$$\text{average noise density} = \text{average noise} - 10 * \log (\text{resolution bandwidth from step 6})$$

Record the result.

- Repeat steps 5 through 7 for the remaining RF frequencies between 110 MHz and 6 GHz in 589 MHz steps.
- Repeat steps 5 through 8 for the 0 dBm output power level for frequencies between 510 MHz and 6 GHz in 589 MHz steps.
- Compare the results of this procedure to the specified limits in the following tables.

**Table 26.** Output Noise Density Test Limits (10 dBm Power Level)

Frequency	As-Found Limit (dBm/Hz)	As-Left Limit (dBm/Hz)
65 MHz to 500 MHz	-136	-136
>500 MHz to 2.5 GHz	-141	-141
>2.5 GHz to 3.5 GHz	-139	-139
>3.5 GHz to 6 GHz	-136	-136

**Table 27.** Output Noise Density Test Limits (0 dBm Power Level)

Frequency	As-Found Limit (dBm/Hz)	As-Left Limit (dBm/Hz)
>500 MHz to 2.5 GHz	-150	-150
>2.5 GHz to 3.5 GHz	-149	-149
>3.5 GHz to 6 GHz	-147	-147


## Verifying Output Second Harmonics

This procedure verifies the generated harmonics of the PXIe-5644 outputs.

- Connect the PXIe-5644 RF OUT front panel connector to the spectrum analyzer RF IN front panel connector.

The following figure illustrates the hardware setup.

**Figure 15. Output Second Harmonics Verification Cabling Diagram**

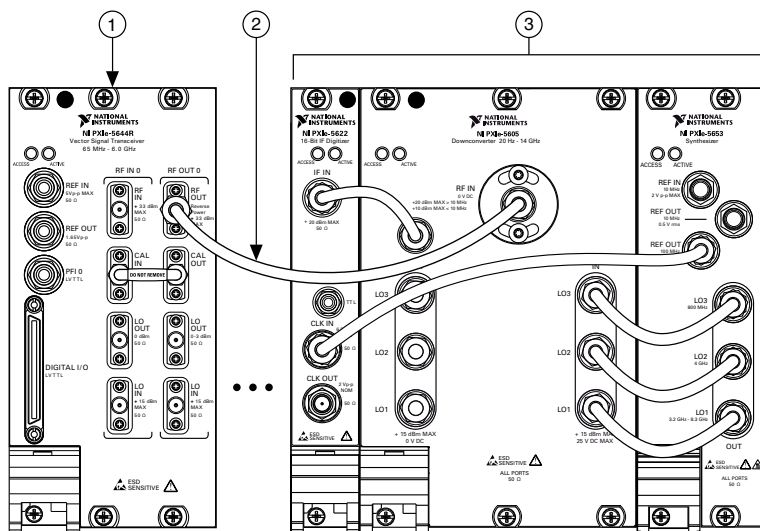

1. PXIe-5644
  2. SMA (m)-to-SMA (m) Cable
  3. Spectrum Analyzer
2. Connect an available 10 MHz rubidium frequency reference output to the PXIe-5644 REF IN front panel connector.
  3. Connect an available 10 MHz rubidium frequency reference output to the spectrum analyzer REF IN front panel connector.
  4. Configure the PXIe-5644 to generate a signal using the following settings:
    - Frequency: 100 MHz
    - Power level: 7 dBm
    - I/Q rate: 10 MS/s
    - Tone offset: 1 MHz
    - Tone digital gain: -1 dBFS
    - Reference Clock source: REF IN
    - Reference Clock frequency: 10 MHz
  5. Use the spectrum analyzer to measure the fundamental tone power using the following settings:
    - Center frequency: (*frequency + tone offset*) from step 4
    - Reference level: +20 dBm
    - Frequency span: 100 kHz
    - Resolution bandwidth: 1 kHz
    - Reference Clock source: REF IN
    - Reference Clock frequency: 10 MHz

6. Use the spectrum analyzer to measure the second harmonic power level using the following settings:
  - Center frequency:  $2 * \text{center frequency}$  from step 5
  - Reference level: 0 dBm
  - Frequency span: 100 kHz
  - Resolution bandwidth: 1 kHz
  - Reference Clock source: REF IN
  - Reference Clock frequency: 10 MHz
7. Calculate the distortion level in dBc by subtracting the fundamental power from the second harmonic power.
8. Repeat steps 4 through 7 for the remaining frequencies from 100 MHz to 6 GHz in 590 MHz steps.
9. Compare the values calculated in step 7 and 8 to the corresponding limits in the following table.

**Table 28.** Second Harmonics Test Limits

Frequency	As-Found Limit (dBc)	As-Left Limit (dBc)
65 MHz to 3.5 GHz	-27	-27
>3.5 GHz to 4.5 GHz	-26.3	-26.3
>4.5 GHz to 6 GHz	-28.9	-28.9

# Verifying Output Nonharmonic Spurs


This procedure verifies the nonharmonic spurs generated by the PXIe-5644 RF output.

1. Connect the PXIe-5644 RF OUT front panel connector to the RF IN connector of the spectrum analyzer.

The following figure illustrates the hardware setup.



**Figure 16. Output Nonharmonic Spurs Verification Cabling Diagram**

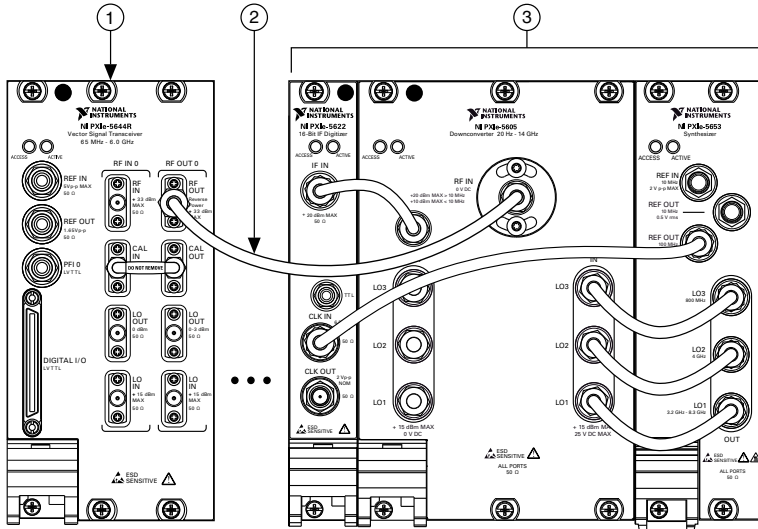

1. PXIe-5644
  2. SMA (m)-to-SMA (m) Cable
  3. Spectrum Analyzer
2. Connect an available 10 MHz rubidium frequency reference output to the PXIe-5644 REF IN front panel connector.
  3. Connect an available 10 MHz rubidium frequency reference output to the spectrum analyzer REF IN front panel connector.
  4. Configure the PXIe-5644 to generate a CW tone using the following settings:
    - Center frequency: 144.2 MHz
    - Power level: 0 dBm
    - I/Q rate: 10 MS/s
    - Digital gain: -1 dB
    - Reference Clock source: REF IN
    - Reference Clock frequency: 10 MHz
  5. Configure the spectrum analyzer to acquire a spectrum using the following settings:
    - Center frequency: *Center frequency* from step 4
    - Reference level: 0 dBm
    - Span: 80 MHz
    - Resolution bandwidth: 1 kHz
    - Averaging type: RMS
    - Number of averages: 20
    - Reference Clock source: REF IN
    - Reference Clock frequency: 10 MHz

6. Measure the peak power within 100 kHz to 1 MHz offset of the tone on either side of the carrier frequency from the data acquired in step 5.

Record the maximum value for comparison to the >100 kHz offset limits.

7. Measure the peak power at >1 MHz offset of the tone on either side of the carrier frequency from the data acquired in step 5. Record the maximum value.

Record the maximum value for comparison to the >1,000 kHz offset limits.

8. Repeat steps 4 through 7 for the remaining test points listed in the following table.

**Table 29. Output Nonharmonics Test Points**

Frequency (MHz)				
144.2	264.2	504.2	1,008.2	2,016.2
2,520.2	3,024.2	4,008.2	5,016.2	

9. Compare the results from steps 6 through 8 to the test limits in the following table.

**Table 30. Output Nonharmonics Test Limits**

Frequency	Offset (kHz)	As-Found Limit (dBc)	As-Left Limit (dBc)
65 MHz to 3 GHz	>100	-62	-62
	>1,000	-75	-75
>4 GHz to 6 GHz	>100	-57	-57
	>1,000	-70	-70


## Verifying Third-Order Output Intermodulation (IMD3)

This procedure verifies the nonlinear performance of the output channel at several output levels.

1. Connect the PXIe-5644 RF OUT front panel connector to the spectrum analyzer RF IN front panel connector.

The following figure illustrates the hardware setup.

**Figure 17. Output IMD3 Verification Cabling Diagram**

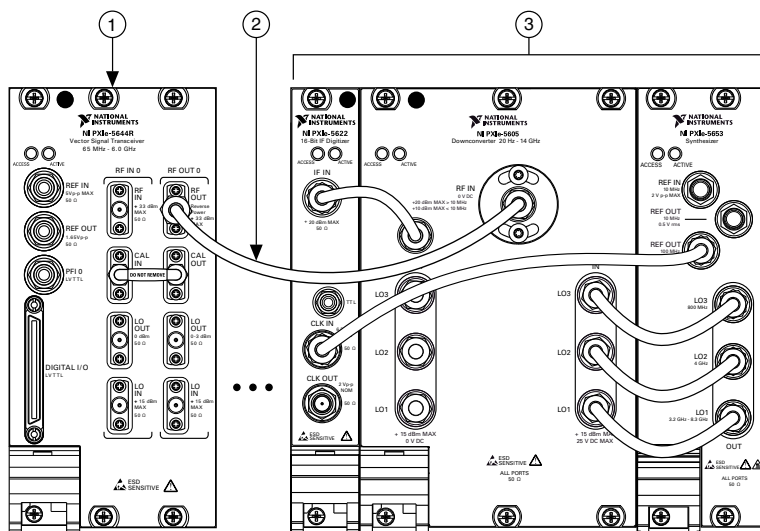

1. PXIe-5644
  2. SMA (m)-to-SMA (m) Cable
  3. Spectrum Analyzer
2. Connect an available 10 MHz rubidium frequency reference output to the PXIe-5644 REF IN front panel connector.
  3. Connect an available 10 MHz rubidium frequency reference output to the spectrum analyzer REF IN front panel connector.
  4. Configure the PXIe-5644 to generate two single sideband tones simultaneously at 2 MHz ( $f_1$ ) and 2.5 MHz ( $f_2$ ) offset from the carrier, using the following settings:
    - Center frequency: 100 MHz
    - Power level (dBm): 0 dBm
    - I/Q rate: 10 MS/s
    - Reference Clock source: REF IN
    - Relative tone power (dB): -6 dB
  5. Use the spectrum analyzer to measure the generated signal using the following settings:
    - Center frequency:  $(Center\ frequency + (f_1 + f_2)/2)$  from step 4
    - Reference level: *Power level* from step 4 + 10 dB
    - Span: 5 MHz
    - Resolution bandwidth: 100 Hz
    - Averaging type: RMS
    - Number of averages: 10

6. Measure and record the peak power of the following tones and distortion locations:
  - Center frequency +  $f_1$ , record as *fundamental tone*<sub>1</sub>
  - Center frequency +  $f_2$ , record as *fundamental tone*<sub>2</sub>
  - Center frequency +  $2f_2 - f_1$ , record as *IMD tone*<sub>1</sub>
  - Center frequency +  $2f_1 - f_2$ , record as *IMD tone*<sub>2</sub>
7. Calculate the output IMD using the following equation:  
*output IMD* = maximum (*IMD tone*) - minimum (*fundamental tone*)
8. Repeat steps 4 through 7 for the remaining frequencies from 100 MHz to 6 GHz in 590 MHz steps.
9. Repeat steps 4 through 8 for the tone output power level -36 dBm.
10. Compare the output IMD values calculated in steps 7 through 9 to the corresponding limits in the following tables.

**Table 31. IMD3 (dBc) -6 dBm Tones**

Frequency	As-Found Limit (dBc)	As-Left Limit (dBc)
65 MHz to 1.5 GHz	-50	-50
>1.5 GHz to 3.5 GHz	-54	-54
>3.5 GHz to 5 GHz	-50	-50
>5 GHz to 6 GHz	-47	-47

**Table 32. IMD3 (dBc) -36 dBm Tones**

Frequency	As-Found Limit (dBc)	As-Left Limit (dBc)
65 MHz to 200 MHz	-52	-52
>200 MHz to 6 GHz	-52	-52


## Verifying Residual LO Power and Residual Sideband Image

This procedure verifies the residual LO power and residual sideband image suppression of the PXIe-5644.

1. Connect the PXIe-5644 RF IN front panel connector to the PXIe-5644 RF OUT front panel connector.

The following figure illustrates the complete hardware setup.

**Figure 18. Residual LO Power and Residual Sideband Image Verification Cabling Diagram**

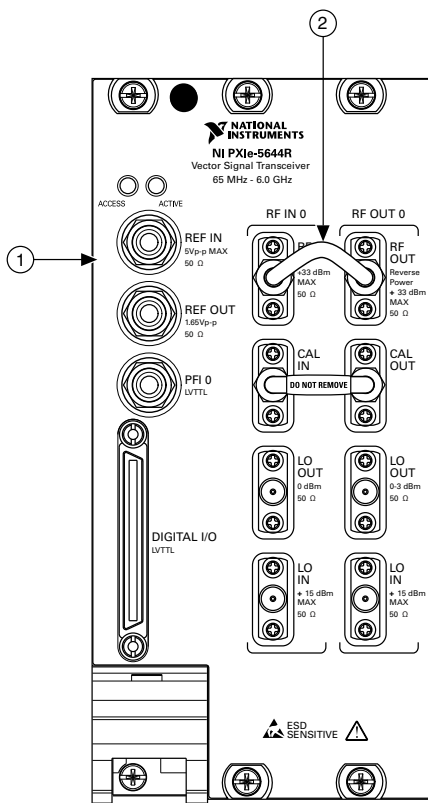

1. PXIe-5644
  2. SMA (m)-to-SMA (m) Cable
2. Configure the PXIe-5644 to acquire a spectrum at 80 MHz using the following settings:
    - Center frequency: 80 MHz
    - Reference level: 0 dBm
    - Span: 20 MHz
    - Resolution bandwidth: 1 kHz
    - Averaging type: RMS
    - Number of averages: 10
    - Window type: Flat Top
  3. Configure the PXIe-5644 to generate a single sideband tone at an offset from the center frequency listed in step 2 using the following settings:
    - Center frequency: 80 MHz + *LO offset*
    - LO offset: 200 kHz

- Power level: *Reference level* from step 2 or 0 dBm, whichever is less.
  - I/Q rate: 120 MS/s
  - Tone offset:  $-(span \text{ from step 2})/2$
4. Acquire the signal using the PXIe-5644.
  5. Measure the following tones:
    - Generated tone power. Record as *fundamental tone*.
    - *Center frequency* from step 2. Record as *RF input residual LO*.
    - *Center frequency* from step 3. Record as *RF output residual LO*.
    - Image of tone relative to *center frequency* from step 2. Record as *RF input image*.
    - Image of tone relative to *center frequency* from step 3. Record as *RF output image*.
  6. Repeat steps 2 through 5 for the remaining tone offsets from  $-span/2$  to  $+span/2$  in 5 MHz steps, where *span* is the value listed in the following table.

**Table 33. Measurement Span Over Center Frequency**

Frequency	Measurement Span
$\leq 109$ MHz	20 MHz
$> 109$ MHz to 375 MHz	40 MHz
$> 375$ MHz to $< 6$ GHz	80 MHz



**Note** Skip the case where the tone offset is equal to zero.

7. Calculate the *RF input residual sideband image suppression* using the following equation:  

$$RF \text{ input residual sideband image} = \text{maximum } (RF \text{ input image}) - \text{fundamental tone}$$
8. Calculate the *RF output residual sideband image suppression* using the following equation:  

$$RF \text{ output residual sideband image} = \text{maximum } (RF \text{ output image}) - \text{fundamental tone}$$
9. Calculate the *RF input residual LO power* using the following equation:  

$$RF \text{ input residual LO power} = \text{maximum } (RF \text{ input residual LO}) - \text{reference level from step 2.}$$
10. Calculate the *RF output residual LO power* using the following equation:  

$$RF \text{ output residual LO power} = \text{maximum } (RF \text{ output residual LO}) - \text{reference level from step 2}$$
11. Repeat steps 2 through 10 for the remaining center frequencies from 80 MHz to 6 GHz in 296 MHz steps.
12. Repeat steps 2 through 11 for the remaining reference levels from 0 dBm to -30 dBm in 10 dB steps.
13. Compare the results from this procedure to the limits listed in the following tables.

**Table 34. Residual LO Power Test Limits**

Frequency	RF Input		RF Output	
	As-Found Limit (dBc)	As-Left Limit (dBc)	As-Found Limit (dBc)	As-Left Limit (dBc)
≤109 MHz	-62	-67	-50	-55
>109 MHz to 375 MHz	-58	-61	-45	-50
>375 MHz to 2 GHz	-58	-61	-55	-60
>2 GHz to 3 GHz	-55	-58	-50	-53
>3 GHz to 5 GHz	-45	-48	-55	-58
>5 GHz to 6 GHz	-45	-48	-50	-55



**Note** The as-left limits are not listed in the published specifications for the PXIe-5644. As-left limits are based on the published *PXIe-5644 Specifications*, less guard bands for measurement uncertainty, temperature drift, and drift over time.

**Table 35. Residual Sideband Image Test Limits**

Frequency	RF Input		RF Output	
	As-Found Limit (dBc)	As-Left Limit (dBc)	As-Found Limit (dBc)	As-Left Limit (dBc)
≤109 MHz	-40	-50	-40	-45
>109 MHz to 375 MHz	-40	-45	—	—
>375 MHz to 500 MHz	-40	-45	-60	-65
>500 MHz to 2 GHz	-65	-70	-60	-65
>2 GHz to 3 GHz	-65	-70	-50	-55
>3 GHz to 4 GHz	-55	-60	-50	-55
>4 GHz to 5 GHz	-55	-60	-40	-50
>5 GHz to 6 GHz	-60	-65	-40	-50

## Verifying RF Input EVM (Functional Test)

This procedure verifies the demodulation performance of the PXIe-5644.

1. Connect the PXIe-5644 RF IN front panel connector to the RF OUT front panel connector of the vector signal generator using an SMA (m)-to-SMA (m) cable.

The following figure illustrates the complete hardware setup.





5. Download the waveform from step 4 to the vector signal generator and generate the modulated signal.
6. Acquire the signal with the PXIe-5644 and demodulate it with the Modulation Toolkit using the settings from step 4.
7. Measure and record the RMS EVM in dB.
8. Repeat steps 2 through 7 for frequencies from 400 MHz to 6 GHz in 200 MHz steps.
9. Compare the results from this procedure to the specified limits:
  - As-found: -40 dB
  - As-left: -40 dB


## Verifying RF Output EVM (Functional Test)

This procedure verifies the modulation performance of the PXIe-5644.

1. Connect the RF OUT front panel connector of the PXIe-5644 to the RF IN front panel connector of the vector signal analyzer.

The following figure illustrates the complete hardware setup.

**Figure 20. RF Output EVM Verification Cabling Diagram**

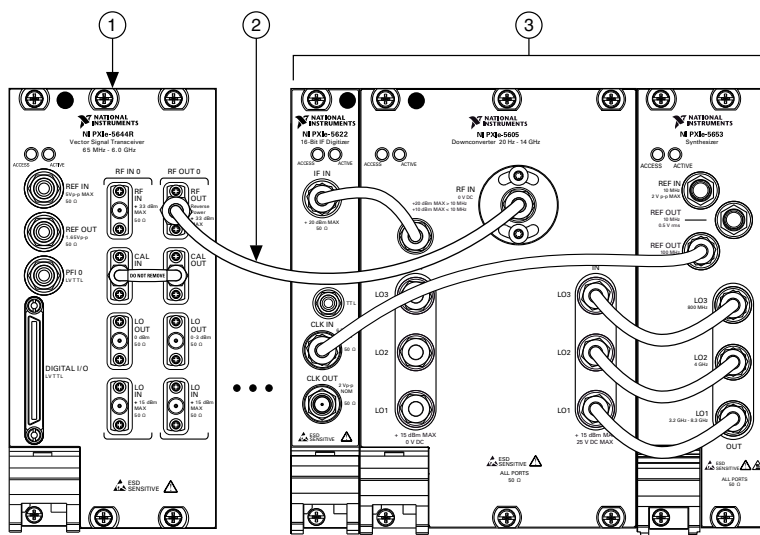

1. PXIe-5644
  2. SMA (m)-to-SMA (m) Cable
  3. Spectrum Analyzer
2. Configure the vector signal analyzer to acquire a complex modulated signal at 400 MHz using the following settings:
    - Center frequency: 400 MHz
    - Reference level: -10 dBm

- I/Q rate: 50 MS/s
  - Record length: 300  $\mu$ s
3. Configure the PXIe-5644 to generate a complex modulated signal at the *center frequency* specified in step 2 using the following settings:
    - Power level: -10 dBm
    - I/Q rate: 120 MS/s
  4. Configure the modulated waveform signal with the Modulation Toolkit using the following settings:
    - QAM: 64
    - Symbol rate: 16 MSymbols/s
    - Samples per symbol: 4
    - Pulse shape filtering: Root raise cosine, 0.25 alpha
    - PN sequence order: 14
  5. Download the waveform from step 4 to the PXIe-5644 and generate the modulated signal.
  6. Acquire the signal with the vector signal analyzer and demodulate it with the Modulation Toolkit using the settings from step 4.
  7. Measure and record the RMS EVM in dB.
  8. Repeat steps 2 through 7 for frequencies from 400 MHz to 6 GHz in 200 MHz steps.
  9. Compare the results from this procedure to the specified limits:
    - As-found: -40 dB
    - As-left: -40 dB

## Verifying LO OUT (RF IN 0 and RF OUT 0) (Functional Test)


This procedure verifies the power level of the local oscillator (LO) for the input and output channels of the PXIe-5644.

You must zero the power sensor as described in the [Zeroing the Power Sensor](#) section prior to starting this procedure.

1. Connect the PXIe-5644 LO OUT (RF IN 0) front panel connector to the power sensor using the SMA (m)-to-N (f) adapter.

The following figure illustrates the complete hardware setup.

**Figure 21. LO OUT (RF IN 0) Verification Cabling Diagram**

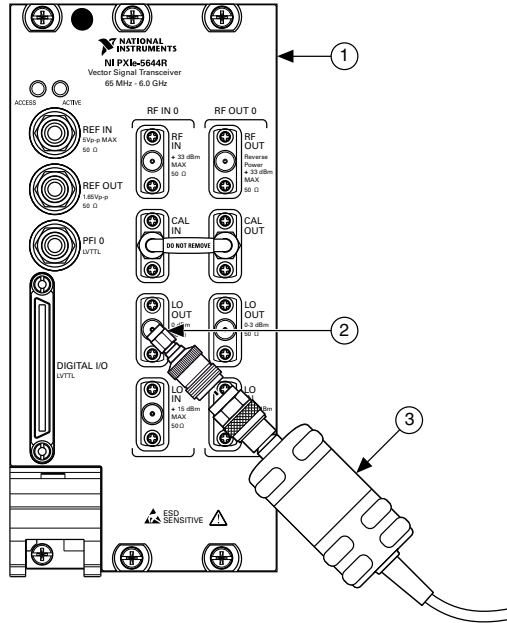

1. PXIe-5644
  2. SMA (m)-to-N (f) Adapter
  3. Power Sensor
2. Configure the PXIe-5644 RF IN channel to export the local oscillator, using the following settings:
    - Center frequency: 100 MHz
    - LO OUT enabled: Enabled
  3. Configure the power sensor to correct for the *center frequency* from step 2 using the power sensor frequency correction function.
  4. Use the power sensor to measure the signal power at the LO OUT (RF IN 0) connector.
  5. Compare the measured LO OUT (RF IN 0) output power to the limits listed in the following table.

**Table 36. LO OUT Power Test Limits**

Frequency	LO OUT Power		As-Found Limit (dB)	As-Left Limit (dB)
	LO OUT (RF IN 0) (dBm)	LO OUT (RF OUT 0) (dBm)		
65 MHz to <3.6 GHz	0	0	± 2.0	± 2.0
≥3.6 GHz to 6 GHz <sup>1</sup>	0	3.0	± 2.0	± 2.0
The limits in this table are <i>typical</i> values. Typical values describe useful product performance beyond specifications that are not covered by warranty and do not include guardbands for measurement uncertainty or drift.				

- Repeat steps 2 through 5 for the remaining frequencies between 100 MHz and 1 GHz, in 100 MHz steps.
- Repeat steps 2 through 5 for the remaining frequencies between 1.5 GHz and 6 GHz, in 500 MHz steps.
- Move the power sensor from the LO OUT (RF IN 0) connector to the LO OUT (RF OUT 0) connector, then repeat steps 1 through 7 for the LO OUT (RF OUT 0) connector.

## Updating Calibration Date and Time

This procedure updates the date and time of the last calibration of the PXIe-5644.

Prior to updating the calibration date and time on the PXIe-5644, you must successfully complete all required verifications or successfully complete reverification following adjustment.



**Note** You do not need to complete the optional verification procedures to update the calibration date and time.

- Call the Update External Calibration Last Date and Time VI.
- Call the Update External Calibration Temp VI.

## Optional Verification

Use the following procedures to verify nonwarranted specifications for the PXIe-5644.

<sup>1</sup> The expected output power of the LO OUT (RF OUT 0) is 3 dBm at frequencies ≥ 3.6 GHz


# Verifying RF Input IMD3 and Second-Order Input Intermodulation (IMD2)

This procedure verifies the IMD3 and IMD2 distortion products of the PXIe-5644.

1. Connect the RF OUT ports of the vector signal generator and CW generator to the input ports of the power combiner.
2. Connect the output of the power combiner to the PXIe-5644 RF IN front panel connector.

The following figure illustrates the complete hardware setup.

**Figure 22. RF Input IMD3 and IMD2 Verification Cabling Diagram**

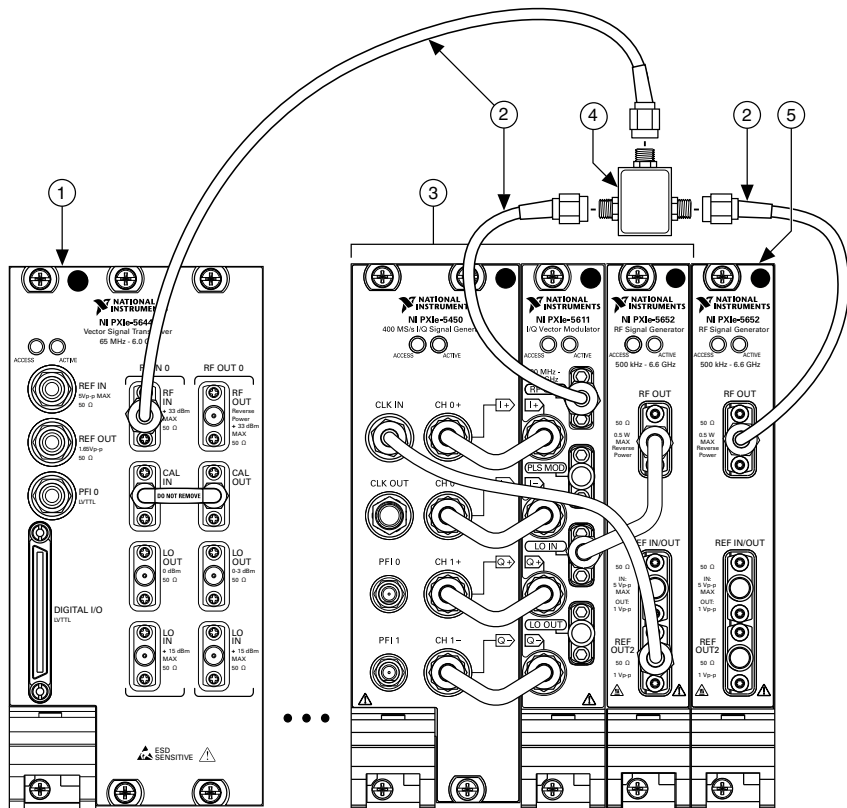

1. PXIe-5644
  2. SMA (m)-to-SMA (m) Cable
  3. Vector Signal Generator
  4. Power Combiner
  5. CW Signal Generator
3. Connect an available 10 MHz rubidium frequency reference output to the PXIe-5644 REF IN front panel connector.
  4. Connect an available 10 MHz rubidium frequency reference output to the vector signal generator REF IN front panel connector.

5. Connect an available 10 MHz rubidium frequency reference output to the CW generator REF IN front panel connector.
6. Configure the PXIe-5644 for a center frequency of 65 MHz, using the following settings:
  - Center frequency: 65 MHz
  - Reference level: *Configured reference level* from the *IIP3 Test Limits* table that corresponds to the *center frequency*
  - Span: 20 MHz
  - Resolution bandwidth: 1 kHz
  - Averaging mode: RMS
  - Number of averages: 10
  - Window type: Flat Top
  - Reference Clock source: REF IN
  - Reference Clock frequency: 10 MHz



**Note** Steps 7 and 8 configure the vector signal generator at a 2 MHz ( $f_1$ ) and the CW generator at a 2.7 MHz ( $f_2$ ) offset from the center frequency. The spacing of the two tones is the same for all iterations of this procedure.

7. Configure the vector signal generator for a frequency offset of  $f_1$  from the *center frequency* in step 6, using the following settings:
  - Center frequency: *Center frequency* from step 6 +  $f_1$
  - Power level: *Reference level* from step 6
  - Reference Clock source: REF IN
  - Reference Clock frequency: 10 MHz
8. Configure the CW generator for a frequency offset of  $f_2$  from the *center frequency* in step 6, using the following settings:
  - Center frequency: *Center frequency* from step 6 +  $f_2$
  - Power level: *Reference level* from step 6
  - Reference Clock source: REF IN
  - Reference Clock frequency: 10 MHz
9. Acquire a spectrum of the combined signal from steps 7 and 8 using the PXIe-5644.
10. Measure the power at expected distortion frequencies using the following settings:
  - *Center frequency* from step 6 +  $f_1$ , record as *fundamental tone*<sub>1</sub>
  - *Center frequency* from step 6 +  $f_2$ , record as *fundamental tone*<sub>2</sub>
  - Center frequency +  $(2f_1 - f_2)$ , record as *IMD3 tone*
  - Center frequency +  $(2f_2 - f_1)$ , record as *IMD3 tone*
  - Center frequency +  $(f_2 - f_1)$ , record as *IMD2 tone*
  - Center frequency +  $(f_2 + f_1)$ , record as *IMD2 tone*
11. Calculate *input IMD3* and *input IP3* using the following equations.  
*input IMD3* = maximum (*IMD3 tone power*) - minimum (*fundamental tone*)  
*input IP3* = maximum (*IMD3 tone power*) + (*IMD3*) / 2  
 Record the *input IP3* value.
12. Calculate *input IMD2* and *input IP2* using the following equations.

*input IMD2* = maximum (*IMD2 Tone*) - minimum (*fundamental tone*)

$input\ IP2 = 2 * \text{maximum (IMD3 tone power)} + IMD2$

Record the *input IP2* value.

13. Repeat steps 6 through 12 for the remaining frequencies from 65 MHz to 6 GHz in 90 MHz steps.
14. Compare the calculated *input IP3* and *input IP2* with the specified limits in the following tables.

**Table 37. IIP3 Test Limits**

Frequency	Configured Reference Level (dBm)	As-Found Limit (dBm)	As-Left Limit (dBm)
65 MHz to 1.5 GHz	-5	19	19
>1.5 GHz to 4 GHz	-5	20	20
>4 GHz to 6 GHz	-2	20	20

**Table 38. IIP2 Test Limits**

Frequency	Configured Reference Level (dBm)	As-Found Limit (dBm)	As-Left Limit (dBm)
65 MHz to 1.5 GHz	-5	69	69
>1.5 GHz to 4 GHz	-5	58	58
>4 GHz to 6 GHz	-2	52	52

## Verifying RF Input and RF Output Return Loss

This procedure verifies the return loss, also referred to as the voltage standing wave ratio (VSWR), of the PXIe-5644 RF input and output.

1. Calibrate the VNA for an S11 (return loss) measurement using the following settings:
  - Calibration: Short, open, load (SOL)
  - Sweep: 65 MHz to 6 GHz
  - Points: 801
  - IF bandwidth: 3 kHz
  - Power: 5 dBm
  - Connection: Male SMA
2. Connect the PXIe-5644 RF IN front panel connector to the calibrated PORT 1 of the VNA using an SMA (m)-to-SMA (m) cable.
3. Configure the PXIe-5644 receiver for 350 MHz with a -10 dBm reference level.
4. Perform an S11 measurement sweep using the following settings:
  - Center frequency: 350 MHz
  - Reference level: 0 dBm
5. Record the minimum absolute return loss value between the start and stop frequency listed for the specified carrier frequency in step 3. Compare the results with the appropriate limits listed in the following table.

**Table 39. RF Input Return Loss Test Limits**

Frequency	As-Found Limit (dB)	As-Left Limit (dB)
$109\text{ MHz} \leq f < 2.4\text{ GHz}$	13	13
$2.4\text{ GHz} \leq f < 4\text{ GHz}$	11	11
$4\text{ GHz} \leq f < 6\text{ GHz}$	10	10



**Note** The as-found and as-left limits are not listed in the published specifications for the PXIe-5644. As-left limits are based on the published *PXIe-5644 Specifications*, less guard bands for measurement uncertainty, temperature drift, and drift over time.

- Repeat steps 3 through 5 for the remaining configurations listed in the following table.

**Table 40. Return Loss Test Points**

Configured Frequency (MHz)	Measurement Start Frequency (MHz)	Measurement Stop Frequency (MHz)
350	109	<600
800	600	<1,000
1,200	1,000	<1,600
2,000	1,600	<2,700
3,000	2,700	<4,000
4,500	4,000	<5,000
5,500	5,000	6,000

- Connect the PXIe-5644 RF OUT front panel connector to the calibrated PORT 1 of the VNA using an SMA (m)-to-SMA (m) cable.
- Configure the PXIe-5644 to generate a -30 dBm CW tone at 350 MHz.
- Perform an S11 measurement sweep. Record the minimum absolute return loss value between the start and stop frequency listed for the specified carrier frequency in step 3. Compare the results with the appropriate limits listed in the following table.

**Table 41. RF Output Return Loss Test Limits**

Frequency	As-Found Limit (dB)	As-Left Limit (dB)
$109\text{ MHz} \leq f < 2\text{ GHz}$	16	16
$2\text{ GHz} \leq f < 5\text{ GHz}$	13	13
$5\text{ GHz} \leq f < 6\text{ GHz}$	9	9



**Note** The as-found and as-left limits are not listed in the published specifications for the PXIe-5644. As-left limits are based on the published



PXIe-5644 Specifications, less guard bands for measurement uncertainty, temperature drift, and drift over time.

- Repeat steps 8 and 9 for the remaining configured frequencies listed in the *Return Loss Test Points* table.

## Adjustment

This section describes the steps needed to adjust the PXIe-5644 to meet published specifications.


### Adjusting RF Internal Frequency Reference

This procedure measures the accuracy of the internal frequency reference, which you use to realign the internal frequency reference to a value within warranted specifications.

- Connect the vector signal generator RF OUT front panel connector to the PXIe-5644 RF IN front panel connector.

The following figure illustrates the complete hardware setup.

**Figure 23.** Internal Frequency Reference Adjustment Cabling Diagram

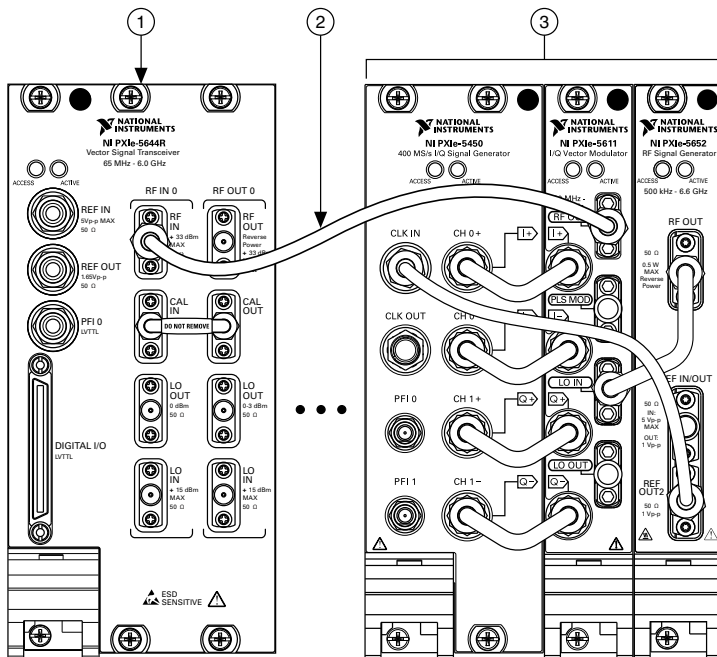

- PXIe-5644
- SMA (m)-to-SMA (m) Cable
- Vector Signal Generator

2. Connect an available 10 MHz rubidium frequency reference output to the vector signal generator REF IN front panel connector.
3. Configure the vector signal generator to generate a 2.22 GHz signal with a 0 dBm average output power, using the following settings:
  - Center frequency: 2.22 GHz
  - Output power: 0 dBm
  - Reference Clock source: External
4. Call the niVST Initialize External Calibration VI.
5. Call the niVST Reference Clock Cal VI. Wire the frequency of the vector signal generator to the **actual frequency** input.
6. Call the niVST Close External Calibration VI. Set the **write calibration to hardware?** input to TRUE to store the results to the EEPROM on the PXIe-5644.

## Adjusting Input Absolute Amplitude Accuracy

This procedure measures the response of the RF IN signal path of the PXIe-5644. The response receives external signals at the RF IN front panel connector at a higher accuracy and optimized dynamic range.


This procedure requires the test setup and data collected in the [Characterizing Power Splitter Balance](#) section. You must characterize the power splitter balance before running this procedure. Ensure you use the characterization data derived from test points 65 MHz to 6 GHz, in 5 MHz steps

You must zero the power sensor as described in the [Zeroing the Power Sensor](#) section prior to starting this procedure.

1. Connect the vector signal generator RF OUT front panel connector to the input terminal of the power splitter using a SMA (m)-to-SMA (m) cable.
2. Connect splitter output 1 directly to the power sensor input connector using an SMA (m)-to-N (f) adapter.
3. Connect the splitter output 2 to the SMA (f) end of the 6 dB attenuator using a 3.5 mm (m)-to-3.5 mm (m) adapter.
4. Connect the remaining 6 dB attenuator SMA (m) connector directly to the PXIe-5644 RF IN front panel connector.

The following figure illustrates the hardware setup.

**Figure 24. Absolute Amplitude Accuracy Adjustment Cabling Diagram**

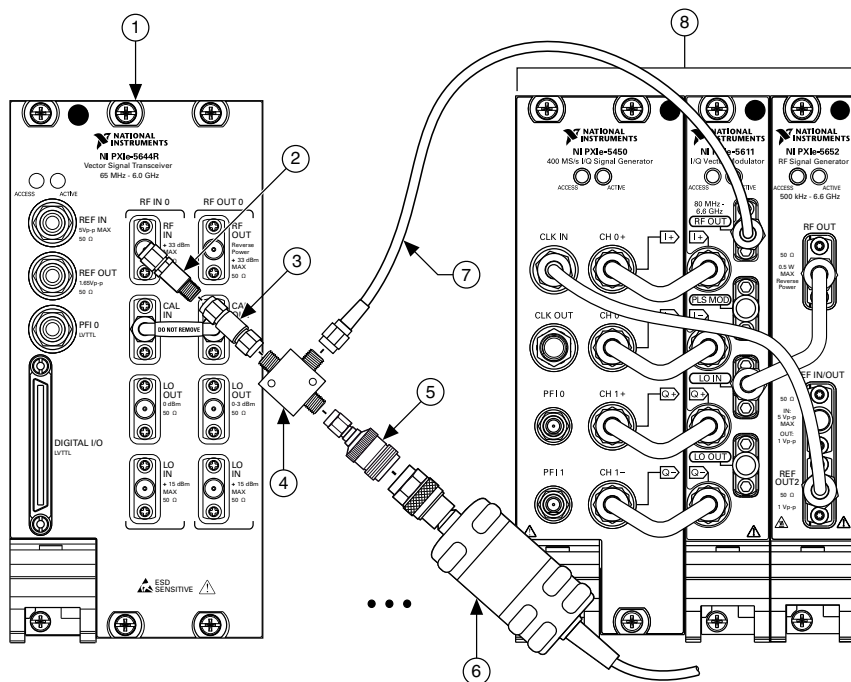

- |                                     |                             |
|-------------------------------------|-----------------------------|
| 1. PXIe-5644                        | 5. SMA (m)-to-N (f) Adapter |
| 2. 6 dB Attenuator                  | 6. Power Sensor             |
| 3. 3.5 mm (m)-to-3.5 mm (m) Adapter | 7. SMA (m)-to-SMA (m) Cable |
| 4. Power Splitter                   | 8. Vector Signal Generator  |

- Connect an available 10 MHz rubidium frequency reference output to the PXIe-5644 REF IN front panel connector.
- Connect an available 10 MHz rubidium frequency reference output to the vector signal generator REF IN front panel connector.
- Configure the PXIe-5644 to acquire a signal at 500 MHz using the following settings:
  - Center frequency: 500 MHz
  - Reference level: 30 dBm



**Note** Steps 8 through 12 create correction factors that transfer the accuracy of the power sensor to the generator. Record the results from these steps in a lookup table called *Accuracy Transfer Results*.

- Configure the vector signal generator to generate a tone using the following settings:
  - Center frequency: 65 MHz
  - Tone offset: 3.75 MHz
  - Power level: *Configured output power* from transfer row A of the following table
  - Reference Clock source: REF IN

**Table 42. Absolute Amplitude Accuracy Adjustment Transfer Table**

Transfer	Supported Output Power Levels	Configured Output Power (dBm)	Start Frequency (MHz)	Stop Frequency (GHz)	Frequency Step Size (MHz)
A	>-20 dBm to 0 dBm	0	65	6	5
B	≤-20 dBm	-20	65	6	5

9. Configure the power sensor to correct for the *center frequency* listed in step 7 using the power sensor frequency correction function.
10. Measure the power of the signal present at splitter output 1 of the power splitter using the power sensor.
11. Repeat steps 8 through 10 for the remaining frequencies listed in transfer row A of the previous table.
12. Repeat steps 8 through 11 for transfer row B of the previous table. Record the results from this step as *accuracy transfer result*. Create a table and include a value for each test point, *transfer* versus *frequency*.
13. Call the niVST Initialize External Calibration VI.
14. Call the niVST RF Input Gain Cal Initialize VI. Wire a Ref In constant to the **reference clock source** input.
15. Call the niVST RF Input Gain Cal Configure VI.
16. Configure the vector signal generator to generate a tone using the following settings:
  - Center frequency: **frequency to generate** output from step 15 - 3.75 MHz
  - Tone offset: 3.75 MHz
  - Power level: *Configured output power* from the transfer row of the previous table that supports the result of the following expression:  
(*power to generate* from step 15 + 10 dB) or 0 dBm, whichever is less
  - I/Q rate: 10 MS/s
  - Digital gain: ((*power to generate* from step 15 + 10 dB) - *power level* from step 16) or 0 dB, whichever is less.
  - Reference Clock source: REF IN
17. Calculate the *transfer input power* using the following equation:  

$$\text{transfer input power} = \text{accuracy transfer result} + \text{digital gain from step 16}$$



**Note** Determine the *accuracy transfer result* by interpolating between the data points in the accuracy transfer results row based on step 16.

18. Calculate the *corrected input power* using the following equation:

$$\text{corrected input power} = \text{transferred input power} + \text{splitter balance}$$



**Note** Determine the *splitter balance* by interpolating between data points from the [Characterizing Power Splitter Balance](#) section. Ensure you use the characterization data derived from test points 65 MHz to 6 GHz, in 5 MHz steps.

19. Call the niVST RF Input Gain Cal Adjust VI.
  - a) Wire the *corrected input power* from step 18 to the **actual power** input.
  - b) Wire the value of (*center frequency* of the vector signal generator from step 16 + 3.75 MHz) to the **actual frequency** input.
20. Repeat steps 15 through 19 until the **RF input gain calibration complete** output of the niVST RF Input Gain Cal Adjust VI returns a value of TRUE.
21. Call the niVST Close External Calibration VI. Set the **write calibration to hardware?** input to TRUE to store the results to the EEPROM on the PXIe-5644.

## Adjusting Output Power Level Accuracy

This procedure measures the response of the RF OUT signal path of the PXIe-5644. The response generates accuracy signals at the RF OUT front panel connector.

This procedure requires the test setup and data collected in the [Characterizing Power Splitter Loss](#) section. You must characterize the power splitter loss before running this procedure. Ensure you use the characterization data derived from test points 65 MHz to 6 GHz, in 5 MHz steps.

You must zero the power sensor as described in the [Zeroing the Power Sensor](#) section prior to starting this procedure.


1. Connect the PXIe-5644 RF OUT front panel connector to the input terminal of the power splitter using a 3.5mm (m)-to-3.5mm (m) adapter.
2. Connect splitter output 1 directly to the power sensor using the SMA (m)-to-N (f) adapter.
3. Connect the remaining power splitter output to one end of the 6 dB attenuator using an SMA (m)-to-SMA (m) cable.
4. Connect the other port of the 6 dB attenuator directly to the spectrum analyzer RF IN front panel connector.

The following figure illustrates the complete hardware setup.



**Note** If you use the PXIe-5665, as recommended, for the spectrum analyzer, disable the preamplifier and preselector options and set the FFT window type to Flat Top.

**Figure 25. Output Power Level Accuracy Adjustment Cabling Diagram**

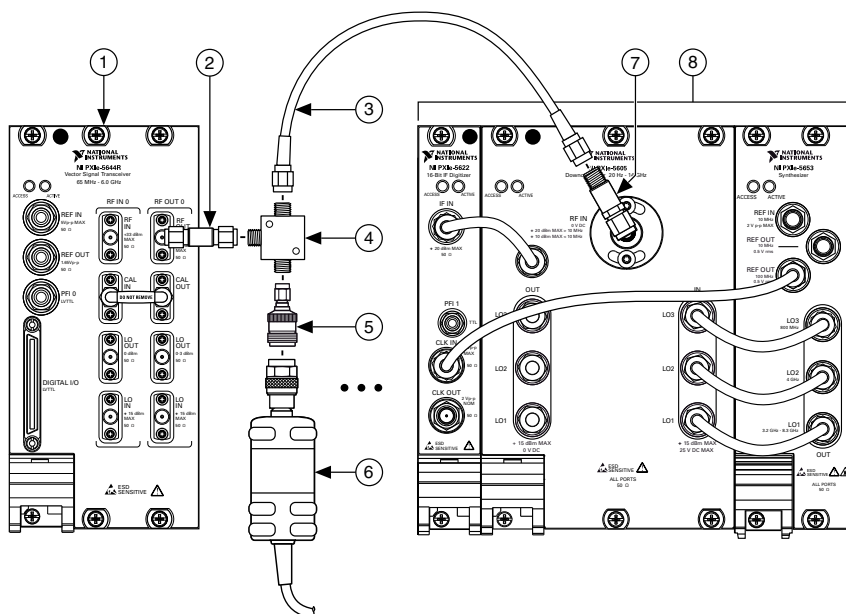

1. PXIe-5644
  2. 3.5 mm (m)-to-3.5 mm (m) Adapter
  3. SMA (m)-to-SMA (m) Cable
  4. Power Splitter
  5. SMA (m)-to-N (f) Adapter
  6. Power Sensor
  7. 6 dB Attenuator
  8. Spectrum Analyzer
5. Connect an available 10 MHz rubidium frequency reference output to the PXIe-5644 REF IN front panel connector.
  6. Connect an available 10 MHz rubidium frequency reference output to the vector signal analyzer REF IN front panel connector.
  7. Call the niVST Initialize External Calibration VI.
  8. Call the niVST RF Output Gain Cal Initialize VI. Wire a RefIn constant to the **reference clock source** input.
  9. Call the niVST RF Output Gain Cal Configure VI.
  10. Configure the spectrum analyzer to acquire a signal with the following settings:
    - Center frequency: **frequency to measure** output of the niVST RF Output Gain Cal Configure VI
    - Reference level: *Configured reference level* specified in the *Accuracy Transfer Definitions* table from the [Characterizing Power Splitter Loss](#) section that supports the result of the following expression:  
**expected power** output from step 9 - 12 dB
    - Span: *Span* from the following table that corresponds to the *reference level* from this step
    - Resolution bandwidth: *RBW* from the following table that corresponds to the *reference level* from this step

- Averaging mode: RMS
- Number of averages: *Number of averages* from the following table that corresponds to the reference level from this step

**Table 43.** Advanced Spectrum Analyzer Settings

Supported Output Power Levels	Span (kHz)	RBW	Number of Averages
$x > -70 \text{ dBm}$	250	4 kHz	10
$-70 \text{ dBm} \geq x > -100 \text{ dBm}$	250	900 Hz	20
$x \leq -100 \text{ dBm}$	250	900 Hz	100

11. Acquire the signal with the spectrum analyzer and measure the peak tone power.
12. Calculate the *transferred output power* using the following equation:

$$\text{transferred output power} = \text{accuracy transfer result} + \text{measured tone power}$$



**Note** Determine the *accuracy transfer result* by interpolating between the data points in the *RF Output Accuracy Transfer Results* table you created in step 21 of the [Characterizing Power Splitter Loss](#) section. Ensure you use the characterization data derived from test points 65 MHz to 6 GHz, in 5 MHz steps. Choose the value that corresponds to the transfer used.

13. Calculate the *corrected output power* using the following equation:

$$\text{corrected output power} = \text{transferred output power} + \text{splitter loss}$$



**Note** Determine the *splitter loss* by interpolating between the data points in the *Splitter Loss* table you created in step 20 of the [Characterizing Power Splitter Loss](#) section. Ensure you use the characterization data derived from test points 65 MHz to 6 GHz, in 5 MHz steps. Choose the value that corresponds to the transfer used.

14. Call the niVST RF Output Gain Cal Adjust VI. Wire the *corrected output power* from step 13 to the **measured power** input.
15. Repeat steps 9 through 14 until the **RF output gain calibration complete** output of the niVST RF Output Gain Cal Adjust VI returns a value of TRUE.
16. Call the niVST Close External Calibration VI. Set the **write calibration to hardware?** input to TRUE to store the results to the EEPROM on the PXIe-5644.

## Adjusting LO OUT (RF IN 0 and RF OUT 0)


This procedure measures the PXIe-5644 LO Power Sensor response. The internal power sensor ensures that the internal LO power level is correct at the mixing stages for the RF IN and RF OUT channels.

You must zero the power sensor as described in the [Zeroing the Power Sensor](#) section prior to starting this procedure.

1. Connect the power sensor to the PXIe-5644 RF IN 0 LO OUT front panel with the SMA (m)-to-N (f) adapter.
2. Connect the vector signal generator RF OUT front panel connector to the PXIe-5644 RF IN 0 LO IN front panel connector with an SMA (m)-to-SMA (m) cable.

The following figure illustrates the complete hardware setup.

**Figure 26. LO OUT Adjustment Cabling Diagram**

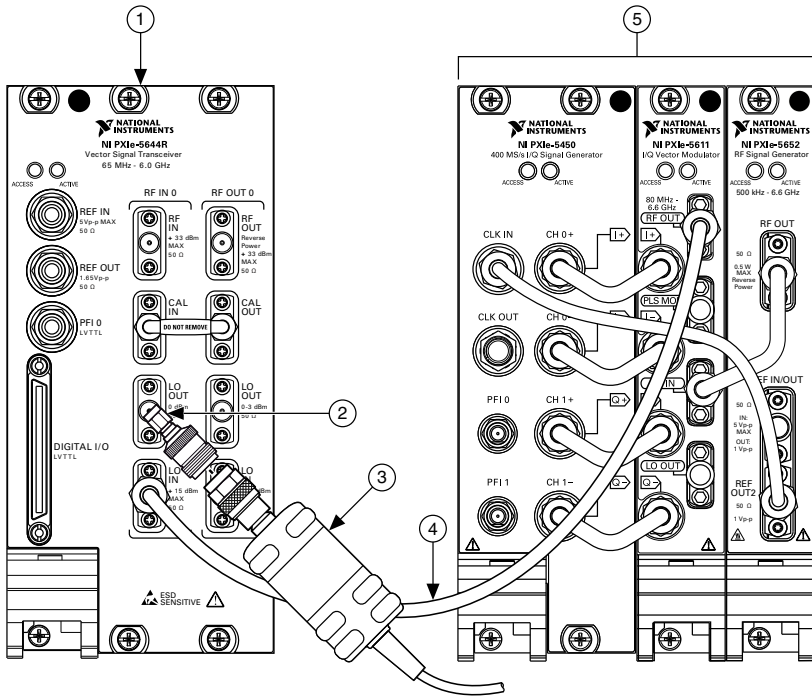

1. PXIe-5644
2. SMA (m)-to-N (f) Adapter
3. Power Sensor
4. SMA (m)-to-SMA (m) Cable
5. Vector Signal Generator

3. Call the niVST Initialize External Calibration VI.
4. Call the niVST LO Cal Initialize VI. Wire an RF In constant to the **port type** input.
5. Call the niVST LO Cal Configure VI.
6. Configure the vector signal generator to generate a tone with the following settings:
  - Center frequency: **frequency to generate** output specified by the niVST LO Cal Configure VI.
  - Power level: **power to generate** output specified by the niVST LO Cal Configure VI.
  - Reference Clock source: Onboard
7. Configure the power meter to correct for the **frequency to generate** output specified by the niVST LO Cal Configure VI.
8. Measure the power of the signal present at the RF IN 0 LO OUT front panel connector using the power sensor.
9. Call the niVST LO Cal Adjust VI. Wire the measured value from step 8 to the **measured LO Out power** input.



10. Repeat steps 5 through 9 until the **LO calibration complete** output of the niVST LO Cal Adjust VI returns a value of TRUE.
11. Call the niVST Close External Calibration VI. Set the **write calibration to hardware?** input to TRUE to store the results to the EEPROM on the PXIe-5644.
12. Repeat steps 1 to 11 for RF OUT 0 LO OUT to adjust the LO power sensor of the PXIe-5644 RF OUT channel.

## Reverification

---

Repeat the [Verification](#) section to determine the as-left status of the PXIe-5644.



**Note** If any test fails reverification after performing an adjustment, verify that you have met the test conditions before returning your PXIe-5644 to NI. Refer to the [Worldwide Support and Services](#) section for information about support resources or service requests.

## Worldwide Support and Services

---

The NI website is your complete resource for technical support. At [ni.com/support](https://ni.com/support), you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

Visit [ni.com/services](https://ni.com/services) for NI Factory Installation Services, repairs, extended warranty, and other services.

Visit [ni.com/register](https://ni.com/register) to register your NI product. Product registration facilitates technical support and ensures that you receive important information updates from NI.

A Declaration of Conformity (DoC) is our claim of compliance with the Council of the European Communities using the manufacturer's declaration of conformity. This system affords the user protection for electromagnetic compatibility (EMC) and product safety. You can obtain the DoC for your product by visiting [ni.com/certification](https://ni.com/certification). If your product supports calibration, you can obtain the calibration certificate for your product at [ni.com/calibration](https://ni.com/calibration).

NI corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. NI also has offices located around the world. For telephone support in the United States, create your service request at [ni.com/support](https://ni.com/support) or dial 1 866 ASK MYNI (275 6964). For telephone support outside the United States, visit the *Worldwide Offices* section of [ni.com/global](https://ni.com/global) to access the branch office websites, which provide up-to-date contact information, support phone numbers, email addresses, and current events.

Information is subject to change without notice. Refer to the *NI Trademarks and Logo Guidelines* at [ni.com/trademarks](http://ni.com/trademarks) for information on NI trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering NI products/technology, refer to the appropriate location: **Help»Patents** in your software, the `patents.txt` file on your media, or the *National Instruments Patent Notice* at [ni.com/patents](http://ni.com/patents). You can find information about end-user license agreements (EULAs) and third-party legal notices in the readme file for your NI product. Refer to the *Export Compliance Information* at [ni.com/legal/export-compliance](http://ni.com/legal/export-compliance) for the NI global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data. NI MAKES NO EXPRESS OR IMPLIED WARRANTIES AS TO THE ACCURACY OF THE INFORMATION CONTAINED HEREIN AND SHALL NOT BE LIABLE FOR ANY ERRORS. U.S. Government Customers: The data contained in this manual was developed at private expense and is subject to the applicable limited rights and restricted data rights as set forth in FAR 52.227-14, DFAR 252.227-7014, and DFAR 252.227-7015.

© 2012—2017 National Instruments. All rights reserved.

373811E-01 August 8, 2017