

## COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

## SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

 Sell For Cash    Get Credit    Receive a Trade-In Deal

## OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock **New, New Surplus, Refurbished, and Reconditioned** NI Hardware.



*Bridging the gap between the manufacturer and your legacy test system.*

 1-800-915-6216

 [www.apexwaves.com](http://www.apexwaves.com)

 [sales@apexwaves.com](mailto:sales@apexwaves.com)

*All trademarks, brands, and brand names are the property of their respective owners.*

**Request a Quote**

 **CLICK HERE**

**BNC-2121**

## USER GUIDE

# BNC-2121 Connector Accessory for 660X Devices

The BNC-2121 connector accessory is a terminal block that connects signals to a 660X counter device and can be used to test features of a 660X device. Use this guide to install and connect signals to a BNC-2121 connector accessory for testing or for performing counter applications.

For specific information about using a 660X device, refer to the *660X User Manual*.

## What You Need to Get Started


---

You need the following items to install and use the BNC-2121 connector accessory.

- BNC-2121 connector accessory
- BNC-2121 Connector Accessory for 660X Devices User Guide*
- 660X device
- 660X User Manual*
- 68-position cable, such as the SH68-68-D1 or R6868
- BNC cables
- Wire no larger than 24 AWG
- Wire strippers

# Connecting the BNC-2121 to a 660X Device

You can use a BNC-2121 with any installed 660X device. Connect one end of a 68-position cable to a 660X device and the other end to the I/O connector on the BNC-2121, as shown in Figure 1.

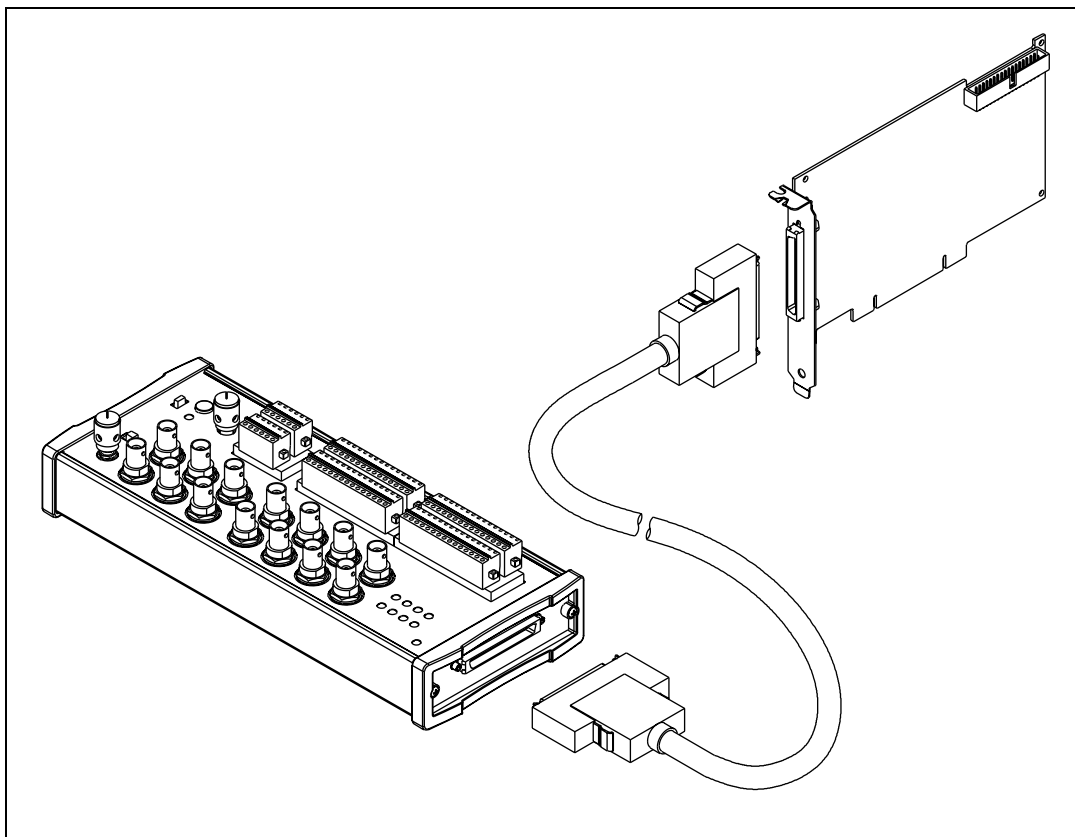


**Figure 1.** Connecting a BNC-2121 to a 660X Device



**Note** If the power LED indicator does not light up, check the cable connections to make sure the cable is connected securely.

# Connecting Signals to the BNC-2121

Connect signals using the spring terminals or BNC connectors shown in Figure 2. For pinout diagrams and more specific information about connecting signals, refer to the *660X User Manual*.

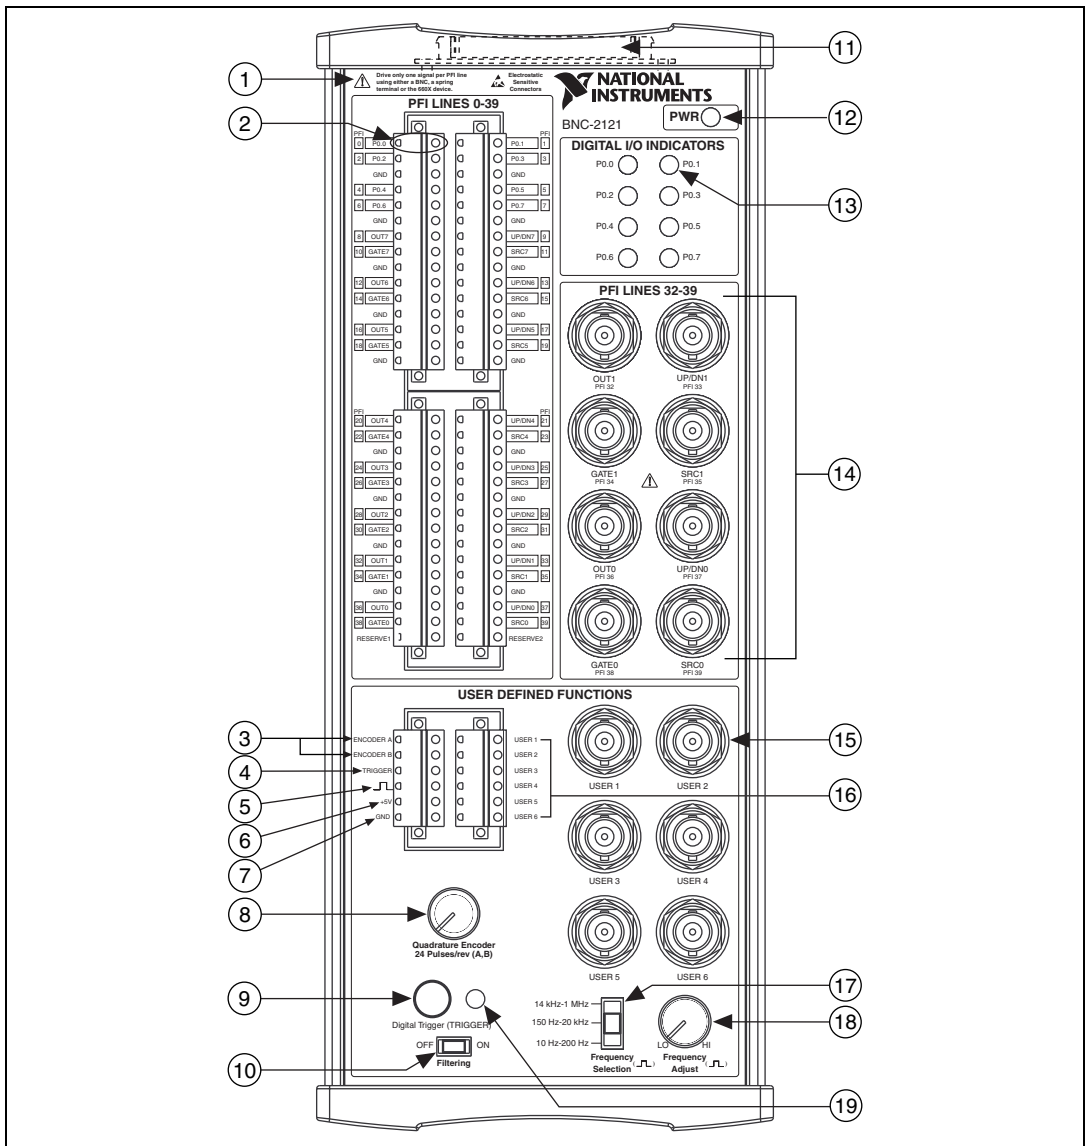

- |   |  |    |                                     |    |  |
|---|--|----|-------------------------------------|----|--|
| 1 | Warning Label                              | 7  | GND Terminal                        | 15 | User-Defined BNC Connector                       |
| 2 | PFI Line Spring Terminal                   | 8  | Quadrature Encoder Knob             | 16 | Spring Terminals for User-Defined BNC Connectors |
| 3 | Quadrature Encoder Output Spring Terminals | 9  | Digital Trigger Button              | 17 | Frequency Selection Switch                       |
| 4 | Digital Trigger Output Spring Terminal     | 10 | Digital Trigger Filtering Switch    | 18 | Frequency Adjust Knob                            |
| 5 | Frequency Output Spring Terminal (⌋)       | 11 | 68-Position I/O Connector           | 19 | Digital Trigger Line LED State Indicator         |
| 6 | +5 V Output Spring Terminal                | 12 | Power LED Indicator                 |    |  |
|   |  | 13 | Digital Line LED State Indicator    |    |  |
|   |  | 14 | BNC Connectors for Counters 0 and 1 |    |  |

Figure 2. BNC-2121 Front Panel

# Overview of Connecting to the BNC-2121

The BNC-2121 has two main areas of connectivity: the PFI lines and the user-defined functions.

The PFI lines include bidirectional spring terminals, PFI <0..39>, and bidirectional BNC connectors, PFI <32..39>. Both connection types provide access to the respective PFI lines on the 660X device. The digital I/O indicators reflect the state of the dedicated digital I/O P.<0..7> spring terminals.

The user-defined function connections include the following:




- Six output spring terminals—Encoder A, Encoder B, Trigger, Square Wave (  ), +5 V, and GND
- Controls for the outputs listed above—Quadrature Encoder, Digital Trigger, Frequency Selection, and Frequency Adjust

Table 1 lists the controls and the outputs associated with them.

**Table 1.** User-Defined Function Controls and the Corresponding Outputs

Controls	Spring Terminal Outputs
Quadrature Encoder Knob	Encoder A
Quadrature Encoder Knob	Encoder B
Digital Trigger Button	Trigger
Frequency Selection	
Frequency Adjust	

- Six bidirectional, user-defined spring terminals—USER <1..6>
- Six user-defined BNC connectors—USER <1..6>



**Note** The user-defined spring terminals are internally mapped one-to-one to corresponding BNC connectors. For example, the USER 1 spring terminal is internally wired to the USER 1 BNC connector. When you want BNC connections for counters other than 0 or 1, use the user-defined connections.

## Connecting to the Spring Terminals

Use the BNC-2121 connector accessory to access the PFI lines on a 660X device.

To make the connection, complete the following steps.

1. Using wire strippers, strip the wire insulation no more than 7 mm.
2. Connect a wire to a spring terminal on the BNC-2121 by depressing the orange tab and inserting the stripped end of the wire fully into the terminal.



**Tip** For the best performance, use twisted-pair wire. Connect one wire of the wire pair from the signal on the peripheral device and the other end of the same twisted wire to the signal on the BNC-2121. Connect the other wire of the wire pair to the ground of the peripheral device and the other end to the ground (GND) spring terminal closest to the signal.



**Caution** Make sure that no bare wire extends past the spring terminal. Exposed wire increases the risk of a short circuit or a failure.

3. If you need to ground a signal, a ground (GND) spring terminal is available between every two PFI lines. For details about grounding a signal, refer to the *660X User Manual*.

The user-defined functions area of the BNC-2121 has six user-defined spring terminals, USER <1..6>, and six corresponding BNC connectors, USER <1..6>. Use these spring terminals for either input or output. For example, if you want to connect a BNC cable to GATE of a counter other than Counter 0 or 1, connect a wire from the GATE spring terminal on the 660X device to a user-defined spring terminal (USER 1) on the BNC-2121, and the signal is available through the corresponding BNC connector (USER 1).

The six other spring terminals (ENCODER A, ENCODER B, TRIGGER,  $\square$ , +5 V, and GND) are used as signal outputs only. Follow steps 1 and 2 in this section to connect the output wires to the appropriate spring terminals. Use the corresponding controls for each spring terminal, given in Table 1, to regulate a signal.

## Connecting to the BNC Connectors

Use the eight BNC connectors to access PFI <32..39> on a 660X device. Each line corresponds to SOURCE, GATE, OUT, and UP/DOWN of counter 0 or 1.

To make the connection, complete the following steps.

1. Insert one end of the BNC cable in one of the PFI <32..39> BNC connectors.
2. Connect the other end of the BNC cable to the output device.

In addition to the BNC connectors associated with the PFI lines of the 660X device, the BNC-2121 has six user-defined BNC connectors, USER <1..6>, that are associated with six corresponding user-defined spring terminals USER <1..6>. You can use these BNC connectors for either input or output.

## Testing User-Defined Functions

---

You can use the BNC-2121 to test the following features on the 660X device.

### Producing a +5 V Pulse

Use the digital trigger to test an application that counts or measures pulses. Press the **Digital Trigger** button to produce a +5 V pulse for as long as the button is pressed, causing the LED to light up. When you release the button, the trigger line goes low. You can access the digital trigger by connecting a wire to the **Trigger** spring terminal. The digital trigger also can simulate a channel Z pulse for quadrature encoder functions.

The lowpass filter on the BNC-2121 is designed to remove glitches on the trigger output. If you want to use unconditional trigger output to test the debouncing filter on a 660X device, flip the **Filtering** switch to the OFF position, connect the trigger output to a PFI line, and programmatically enable the debouncing filter on the 660X device. For all other applications, flip the **Filtering** switch to the ON position.

### Measuring Position

The BNC-2121 can produce 24 pulses per encoder revolution. You can test this feature using the following programs.

- C interface—TIOquadEncoderPosMeasure.c located in Program Files/National Instruments/Measurement Studio/CVI/Samples/DAQ/Ctr
- LabVIEW—Measure Position VI located in Program Files/National Instruments/LabVIEW/Examples/DAQ/Counter/NI-TIO.llb

To measure position using counter 0 of a 660X device, make the following connections.

1. Connect a wire from channel A to SOURCE of counter 0 (default PFI 39).
2. Connect a wire from channel B to UP/DOWN of counter 0 (default PFI 37).



**Note** If you want to simulate a Z channel, connect a wire from the **Trigger** spring terminal to GATE of counter 0 (default PFI 38).

## Creating a Square Wave

The BNC-2121 has a function generator that produces TTL-compatible square waveforms.

To create a square wave, complete the following steps.

1. Access the square wave output by connecting signals to the  $\square$  spring terminal.
2. Use the **Frequency Selection** switch to select a frequency range of 10 Hz–200 Hz, 150 Hz–20 kHz, or 14 kHz–1 MHz.
3. Adjust the frequency within the range you selected by turning the **Frequency Adjust** knob.

## Viewing the State of the DIO Lines

The eight Digital I/O indicators indicate the state of PFI <0..7> on a 660X device. When the LED is lit, the channel is in the high state. When the LED is off, the channel is in the low state.

## Using the BNC-2121 to Perform Counter Applications

---

This section explains how to connect signals to the BNC-2121 to test, demonstrate, and perform counter applications with a 660X device. To find the correct application to perform, refer to the *660X User Manual*.

Counter program examples mentioned in this section are in the following locations.

- NI-DAQ—Measurement Studio\CVI\Samples\DAQ\Ctr
- LabVIEW—Program Files\National Instruments\LabVIEW\Examples\DAQ\Counter\NI.TIO.11b



## Simple Event Counting

To perform simple event counting, connect a wire from the  $\perp$  spring terminal to SOURCE of the selected counter. The 660X device counts the number of pulses that occur on SOURCE.

Alternatively, you can connect a wire from the **Trigger** spring terminal to provide pulses on SOURCE.

## Gated Event Counting

To perform gated event counting, complete the following steps.

1. Connect a wire from the  $\perp$  spring terminal to SOURCE of the selected counter.
2. Connect a wire from the **Trigger** spring terminal to GATE of the selected counter.
3. Press and hold the **Digital Trigger** button to drive GATE into a high state. The counter counts the pulses on SOURCE as long as GATE is high.
4. Release the **Digital Trigger** button to drive GATE into a low state. The counting halts and retains its value until you press the **Digital Trigger** button again and counting continues.

## Single Period Measurement

To take a single period measurement, complete the following steps.

1. In the C interface or in LabVIEW, select an internal timebase as SOURCE of the selected counter.
2. Connect a wire from the  $\perp$  spring terminal to GATE of the selected counter. The counter counts the rising edges on SOURCE between two active GATE edges. The period is this count multiplied by the period of SOURCE.

## Single Pulse-Width Measurement

To take a single pulse-width measurement, complete the following steps.

1. In the C interface or in LabVIEW, select an internal timebase as SOURCE of the selected counter.
2. Connect a wire from the **Trigger** spring terminal to GATE of the selected counter.
3. Press the **Digital Trigger** button to drive GATE into a high state. The counter counts the rising edges on SOURCE while GATE is active.
4. Release the **Digital Trigger** button to drive GATE into a low state. The counter value is latched for a software read.

## Two-Signal Edge-Separation Measurement

To take a two-signal edge-separation measurement, complete the following steps.

1. Connect a wire from the  $\square$  spring terminal to UP/DOWN of the selected counter.
2. In the C interface or in LabVIEW, select an internal timebase as SOURCE of the selected counter. As soon as UP/DOWN goes active, the counter counts the edges on SOURCE.
3. Connect a wire from the **Trigger** spring terminal to GATE of the selected counter.
4. Press the **Digital Trigger** button to drive GATE into an active state. As soon as GATE goes active, the counter value is latched for a software read.



**Note** UP/DOWN and AUX\_LINE share the same PFI line on all counters.

## Single Pulse Generation

To generate a single pulse, complete the following steps.

1. In the C interface or in LabVIEW, select an internal timebase as SOURCE of the selected counter.
2. Specify the pulse delay and pulse width in the C interface or LabVIEW.
3. To see the signal, connect an oscilloscope or analog input device to OUT of the selected counter.

## Single-Triggered Pulse Generation

To generate a single-triggered pulse, complete the following steps.

1. In the C interface or in LabVIEW, select an internal timebase as SOURCE of the selected counter.
2. Specify the pulse delay and pulse width in the C interface or LabVIEW.
3. Connect a wire from the **Trigger** spring terminal to GATE of the selected counter.
4. Press the **Digital Trigger** button to generate a single pulse. One pulse is generated on OUT of the counter when the trigger is received.
5. To see the signal, connect an oscilloscope or analog input device to OUT of the selected counter.

## Retriggerable Single Pulse Generation

To generate a retriggerable single pulse, complete the following steps.

1. In the C interface or in LabVIEW, select an internal timebase as SOURCE of the selected counter.
2. Specify the pulse delay and pulse width in the C interface or LabVIEW.
3. Connect a wire from the **Trigger** spring terminal to GATE of the selected counter.
4. Press the **Digital Trigger** button to generate a pulse. Any time you want an additional pulse, press the **Digital Trigger** button to generate a pulse on OUT of the counter.



**Note** A pulse is generated on every active GATE edge.

5. To see the signal, connect an oscilloscope or analog input device to OUT of the selected counter.

## Continuous Pulse-Train Generation

To generate a continuous pulse-train, complete the following steps.

1. In the C interface or in LabVIEW, select an internal timebase as SOURCE of the selected counter.
2. In the C interface or in LabVIEW, specify the frequency and duty cycle of the pulse train.
3. To see the signal, connect an oscilloscope or analog input device to OUT of the selected counter.

## Frequency Shift-Keying

To perform frequency shift-keying, complete the following steps.

1. In the C interface or in LabVIEW, select an internal timebase as SOURCE of the selected counter.
2. Connect a wire from the **Trigger** spring terminal to GATE of the selected counter.
3. Press the **Digital Trigger** button to drive GATE into a high state.
4. Release the **Digital Trigger** button to drive GATE into a low state.
5. To see the signal, connect an oscilloscope or analog input device to OUT of the selected counter.

## Buffered Event Counting

To perform buffered event counting, complete the following steps.

1. In the C interface or in LabVIEW, select an internal timebase as SOURCE of the selected counter.
2. Connect a wire from the  $\square$  spring terminal to GATE of the selected counter. Each time GATE goes high, the value of the counter is latched to a buffer.

## Buffered Period Measurement

To perform buffered period measurement, complete the following steps.

1. In the C interface or in LabVIEW, select an internal timebase as SOURCE of the selected counter.
2. Connect a wire from the  $\square$  spring terminal to GATE of the selected counter.



**Note** To ensure valid measurement data, discard the first value because the counter may be armed between active edges. The counter is latched at each active GATE edge (rising or falling) and the counter resets to zero.

## Buffered Semi-Period Measurement

To perform buffered semi-period measurement, complete the following steps.

1. In the C interface or in LabVIEW, select an internal timebase as SOURCE of the selected counter.
2. Connect a wire from the  $\square$  spring terminal to GATE of the selected counter.

Each time GATE goes high, the value of the counter is latched to a buffer. Because buffered semi-period measurement measures each phase of the pulse train, you can detect changes in duty cycle.



**Note** To ensure valid measurement data, discard the first value because the counter may be armed between active edges. The counter is latched at each active GATE edge (rising or falling) and the counter resets to zero.

## Buffered Pulse-Width Measurement

To perform buffered pulse-width measurement, complete the following steps.

1. In the C interface or in LabVIEW, select an internal timebase as SOURCE of the selected counter.
2. Connect a wire from the  $\square$  spring terminal to GATE of the selected counter.

Each time GATE goes high, the value of the counter is latched to a buffer.



**Note** For buffered pulse-width measurement, the counter value obtained between the rising and falling edges of GATE is latched at the completion of each pulse-width interval of GATE.

## Buffered Two-Signal Edge-Separation Measurement

To perform a buffered two-signal edge-separation measurement, complete the following steps.

1. In the C interface or in LabVIEW, select an internal timebase as SOURCE of the selected counter.
2. Connect a wire from the  $\square$  spring terminal to UP/DOWN of the selected counter.
3. Connect a wire from the **Trigger** spring terminal to GATE of the selected counter. The counter counts the rising edges on SOURCE between the active edge of UP/DOWN and the active edge of GATE. The counter value latches at each active edge of GATE.
4. Press the **Digital Trigger** button to drive GATE into a high state. Press the **Digital Trigger** button several times to obtain multiple GATE edges.

## Buffered Periodic Event Counting

To perform buffered periodic event counting, complete the following steps.

1. Connect a wire from the  $\square$  spring terminal to SOURCE of the selected counter.
2. Connect a wire from the **Trigger** spring terminal to GATE of the selected counter. The counter increments on each active SOURCE edge and latches at each active GATE edge.

## Miscellaneous Functions

Use these functions with any of the counter applications described in this document.

### Measuring Frequency

To measure a frequency using counter pair 0 and 1, complete the following steps.

1. In the C interface or in LabVIEW, select GATE as the output of the other counter. This selection allows OUT of counter 1 to be the GATE signal for counter 0.
2. Connect a wire from the  $\perp$  spring terminal to SOURCE of counter 0, which is PFI 39. The counter counts the number of edges received during the interval defined by OUT of counter 1.

The frequency measured is the number of counts divided by the duration of GATE in seconds. Another counter pair also can be similarly used.

### Simultaneously Starting Counters

You can configure two or more counters to arm from the same start trigger using a software or hardware command. To simultaneously arm two or more counters to perform single pulse generation, complete the following steps.

1. Configure two or more counters to generate a pulse after receiving a start trigger. In software, select a PFI line, such as PFI 0, to receive the start trigger.
2. To see the pulse on the outputs, connect an oscilloscope or analog input device to OUT of the selected counters.
3. Connect a wire from the **Trigger** spring terminal to the selected PFI line and use it to produce the start trigger.



**Note** You can use this method for any counter application.

# Specifications

---

This section lists the specifications of the BNC-2121. These specifications are typical at 25 °C unless otherwise noted.

## PFI <0..39>

Spring terminals.....	40 positions, wire no larger than 24 AWG
BNC connectors.....	8 for PFI <32..39>

## User-Defined

Field connections.....	6 BNC connectors
Spring terminals.....	6 positions, wire no larger than 24 AWG

## Quadrature Encoder

Spring terminals.....	2
Channel A/Channel B output channels.....	Channel A leads Channel B when the encoder knob is turned 90° clockwise
Pulse width.....	1 $\mu$ s
Resolution.....	24 pulses per revolution

## Digital Trigger

Number of signals.....	1 (TRG signal for triggering)
Spring terminals.....	1 position
Lowpass filter.....	$f_0 = 15$ Hz

## Function Generator

Square wave.....	TTL compatible
Frequency range.....	10 Hz–1 MHz; $\pm 10\%$ deviation over entire frequency range
Rise time.....	250 ns

Fall time ..... 50 ns

Spring terminal ..... 1 position

Output voltage..... Refer to Figure 3

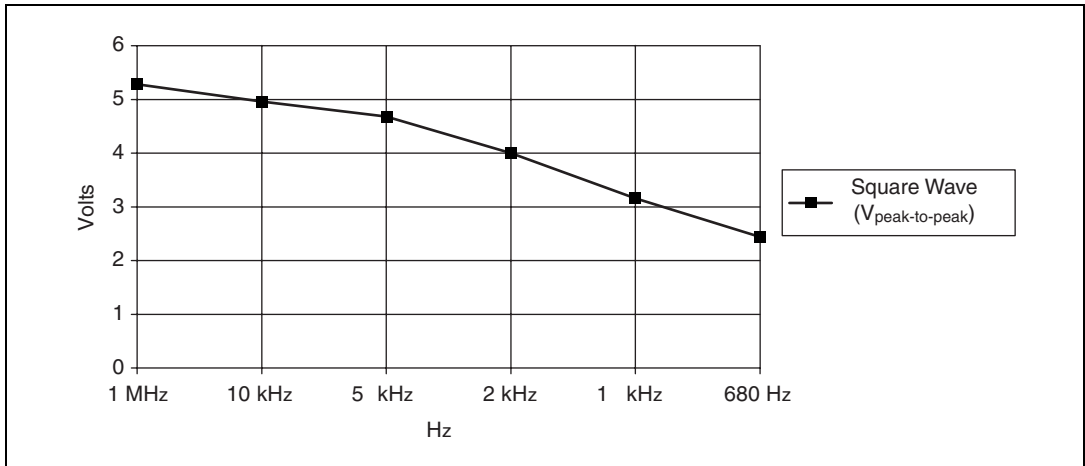


Figure 3. Typical Maximum Voltages versus Load Impedances

## Digital Input/Output

LED state indicators ..... 8 (1 per digital line on PFI <0..7>)

## Power Requirement

5 VDC ( $\pm 5\%$ ) ..... 200 mA, sourced from  
660X device, which provides 1 A

Power available at 5 V  
spring terminal ( $\pm 5\%$ ) ..... 600 mA, sourced from  
660X device, which provides 1 A

## Physical

Dimensions ..... 27.2 by 11.2 by 5.21 cm  
(10.69 by 4.41 by 2.05 in.)

I/O connector ..... 68-pin male SCSI-II type

BNC connectors ..... 14

Spring terminal plugs ..... 72



## Environment

Operating temperature .....	0 to 50 °C
Storage temperature .....	-20 to 70 °C
Relative humidity .....	10 to 90% noncondensing

## Safety

This product is designed to meet the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use:

- IEC 61010-1, EN 61010-1
- UL 3111-1, UL 61010B-1
- CAN/CSA C22.2 No. 1010.1



**Note** For UL and other safety certifications, refer to the product label or to [ni.com](http://ni.com).

## Electromagnetic Compatibility

CE, C-Tick, and FCC Part 15 (Class A) Compliant

Emissions .....	EN 55011 Class A at 10 m FCC Part 15A above 1 GHz
Immunity .....	EN 61326:1997 + A2:2001, Table 1



**Note** For EMC compliance, you *must* operate this device with shielded cabling.

## CE Compliance

This product meets the essential requirements of applicable European Directives, as amended for CE Marking, as follows:

Low-Voltage Directive (safety) .....	73/23/EEC
Electromagnetic Compatibility Directive (EMC) .....	89/336/EEC



**Note** Refer to the Declaration of Conformity (DoC) for this product for any additional regulatory compliance information. To obtain the DoC for this product, click **Declarations of Conformity Information** at [ni.com/hardref.nsf/](http://ni.com/hardref.nsf/).

# Technical Support Resources

---

## NI Web Support

National Instruments Web support is your first stop for help in solving installation, configuration, and application problems and questions. Online problem-solving and diagnostic resources include frequently asked questions, knowledge bases, product-specific troubleshooting wizards, manuals, drivers, software updates, and more. Web support is available through the Technical Support section of [ni.com](http://ni.com).

## Worldwide Support

National Instruments has offices located around the world to help address your support needs. You can access our branch office Web sites from the Worldwide Offices section of [ni.com](http://ni.com). Branch office Web sites provide up-to-date contact information, support phone numbers, email addresses, and current events.

If you have searched the technical support resources on our Web site and still cannot find the answers you need, contact your local office or National Instruments corporate. For telephone support in the United States, dial 512 795 8248. For telephone support outside the United States, contact your local branch office:

Australia 1800 300 800, Austria 43 0 662 45 79 90 0, Belgium 32 0 2 757 00 20,  
Brazil 55 11 3262 3599, Canada (Calgary) 403 274 9391,  
Canada (Montreal) 514 288 5722, Canada (Ottawa) 613 233 5949,  
Canada (Québec) 514 694 8521, Canada (Toronto) 905 785 0085,  
Canada (Vancouver) 514 685 7530, China 86 21 6555 7838,  
Czech Republic 420 2 2423 5774, Denmark 45 45 76 26 00,  
Finland 385 0 9 725 725 11, France 33 0 1 48 14 24 24,  
Germany 49 0 89 741 31 30, Greece 30 2 10 42 96 427, India 91 80 51190000,  
Israel 972 0 3 6393737, Italy 39 02 413091, Japan 81 3 5472 2970,  
Korea 82 02 3451 3400, Malaysia 603 9131 0918, Mexico 001 800 010 0793,  
Netherlands 31 0 348 433 466, New Zealand 1800 300 800,  
Norway 47 0 66 90 76 60, Poland 48 0 22 3390 150, Portugal 351 210 311 210,  
Russia 7 095 238 7139, Singapore 65 6226 5886, Slovenia 386 3 425 4200,  
South Africa 27 0 11 805 8197, Spain 34 91 640 0085, Sweden 46 0 8 587 895 00,  
Switzerland 41 56 200 51 51, Taiwan 886 2 2528 7227, Thailand 662 992 7519,  
United Kingdom 44 0 1635 523545

CVI™, LabVIEW™, Measurement Studio™, National Instruments™, NI™, ni.com™, and NI-DAQ™ are trademarks of National Instruments Corporation. Product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products, refer to the appropriate location: **Help»Patents** in your software, the `patents.txt` file on your CD, or `ni.com/patents`.

© 2001–2003 National Instruments Corp. All rights reserved.



322640C-01

Jun03