

## COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

## SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

 Sell For Cash    Get Credit    Receive a Trade-In Deal

## OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock **New**, **New Surplus**, **Refurbished**, and **Reconditioned** NI Hardware.



*Bridging the gap between the manufacturer and your legacy test system.*

 1-800-915-6216

 [www.apexwaves.com](http://www.apexwaves.com)

 [sales@apexwaves.com](mailto:sales@apexwaves.com)

All trademarks, brands, and brand names are the property of their respective owners.

**Request a Quote**

 **CLICK HERE**

**PCI-7324**

# Motion Control

---

## 7324/7314 Hardware User Manual

## **Worldwide Technical Support and Product Information**

ni.com

## **National Instruments Corporate Headquarters**

11500 North Mopac Expressway Austin, Texas 78759-3504 USA Tel: 512 794 0100

## **Worldwide Offices**

Australia 03 9879 5166, Austria 0662 45 79 90 0, Belgium 02 757 00 20, Brazil 011 284 5011,  
Canada (Calgary) 403 274 9391, Canada (Ontario) 905 785 0085, Canada (Québec) 514 694 8521,  
China 0755 3904939, Denmark 45 76 26 00, Finland 09 725 725 11, France 01 48 14 24 24,  
Germany 089 741 31 30, Greece 30 1 42 96 427, Hong Kong 2645 3186, India 91805275406,  
Israel 03 6120092, Italy 02 413091, Japan 03 5472 2970, Korea 02 596 7456, Mexico (D.F.) 5 280 7625,  
Mexico (Monterrey) 8 357 7695, Netherlands 0348 433466, New Zealand 09 914 0488, Norway 32 27 73 00,  
Poland 0 22 528 94 06, Portugal 351 1 726 9011, Singapore 2265886, Spain 91 640 0085,  
Sweden 08 587 895 00, Switzerland 056 200 51 51, Taiwan 02 2528 7227, United Kingdom 01635 523545

For further support information, see the [Technical Support Resources](#) appendix. To comment on the documentation, send e-mail to [techpubs@ni.com](mailto:techpubs@ni.com).

© Copyright 1999, 2000 National Instruments Corporation. All rights reserved.

# Important Information

---

## Warranty

The 7324/7314 stepper motion control boards are warranted against defects in materials and workmanship for a period of one year from the date of shipment, as evidenced by receipts or other documentation. National Instruments will, at its option, repair or replace equipment that proves to be defective during the warranty period. This warranty includes parts and labor.

The media on which you receive National Instruments software are warranted not to fail to execute programming instructions, due to defects in materials and workmanship, for a period of 90 days from date of shipment, as evidenced by receipts or other documentation. National Instruments will, at its option, repair or replace software media that do not execute programming instructions if National Instruments receives notice of such defects during the warranty period. National Instruments does not warrant that the operation of the software shall be uninterrupted or error free.

A Return Material Authorization (RMA) number must be obtained from the factory and clearly marked on the outside of the package before any equipment will be accepted for warranty work. National Instruments will pay the shipping costs of returning to the owner parts which are covered by warranty.

National Instruments believes that the information in this document is accurate. The document has been carefully reviewed for technical accuracy. In the event that technical or typographical errors exist, National Instruments reserves the right to make changes to subsequent editions of this document without prior notice to holders of this edition. The reader should consult National Instruments if errors are suspected. In no event shall National Instruments be liable for any damages arising out of or related to this document or the information contained in it.

EXCEPT AS SPECIFIED HEREIN, NATIONAL INSTRUMENTS MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND SPECIFICALLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. CUSTOMER'S RIGHT TO RECOVER DAMAGES CAUSED BY FAULT OR NEGLIGENCE ON THE PART OF NATIONAL INSTRUMENTS SHALL BE LIMITED TO THE AMOUNT THEREFORE PAID BY THE CUSTOMER. NATIONAL INSTRUMENTS WILL NOT BE LIABLE FOR DAMAGES RESULTING FROM LOSS OF DATA, PROFITS, USE OF PRODUCTS, OR INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF. This limitation of the liability of National Instruments will apply regardless of the form of action, whether in contract or tort, including negligence. Any action against National Instruments must be brought within one year after the cause of action accrues. National Instruments shall not be liable for any delay in performance due to causes beyond its reasonable control. The warranty provided herein does not cover damages, defects, malfunctions, or service failures caused by owner's failure to follow the National Instruments installation, operation, or maintenance instructions; owner's modification of the product; owner's abuse, misuse, or negligent acts; and power failure or surges, fire, flood, accident, actions of third parties, or other events outside reasonable control.

## Copyright

Under the copyright laws, this publication may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying, recording, storing in an information retrieval system, or translating, in whole or in part, without the prior written consent of National Instruments Corporation.

## Trademarks

CVI™, LabVIEW™, National Instruments™, ni.com™, and ValueMotion™ are trademarks of National Instruments Corporation. Product and company names mentioned herein are trademarks or trade names of their respective companies.

## WARNING REGARDING USE OF NATIONAL INSTRUMENTS PRODUCTS

(1) NATIONAL INSTRUMENTS PRODUCTS ARE NOT DESIGNED WITH COMPONENTS AND TESTING FOR A LEVEL OF RELIABILITY SUITABLE FOR USE IN OR IN CONNECTION WITH SURGICAL IMPLANTS OR AS CRITICAL COMPONENTS IN ANY LIFE SUPPORT SYSTEMS WHOSE FAILURE TO PERFORM CAN REASONABLY BE EXPECTED TO CAUSE SIGNIFICANT INJURY TO A HUMAN.

(2) IN ANY APPLICATION, INCLUDING THE ABOVE, RELIABILITY OF OPERATION OF THE SOFTWARE PRODUCTS CAN BE IMPAIRED BY ADVERSE FACTORS, INCLUDING BUT NOT LIMITED TO FLUCTUATIONS IN ELECTRICAL POWER SUPPLY, COMPUTER HARDWARE MALFUNCTIONS, COMPUTER OPERATING SYSTEM SOFTWARE FITNESS, FITNESS OF COMPILERS AND DEVELOPMENT SOFTWARE USED TO DEVELOP AN APPLICATION, INSTALLATION ERRORS, SOFTWARE AND HARDWARE COMPATIBILITY PROBLEMS, MALFUNCTIONS OR FAILURES OF ELECTRONIC MONITORING OR CONTROL DEVICES, TRANSIENT FAILURES OF ELECTRONIC SYSTEMS (HARDWARE AND/OR SOFTWARE), UNANTICIPATED USES OR MISUSES, OR ERRORS ON THE PART OF THE USER OR APPLICATIONS DESIGNER (ADVERSE FACTORS SUCH AS THESE ARE HEREAFTER COLLECTIVELY TERMED "SYSTEM FAILURES"). ANY APPLICATION WHERE A SYSTEM FAILURE WOULD CREATE A RISK OF HARM TO PROPERTY OR PERSONS (INCLUDING THE RISK OF BODILY INJURY AND DEATH) SHOULD NOT BE RELIANT SOLELY UPON ONE FORM OF ELECTRONIC SYSTEM DUE TO THE RISK OF SYSTEM FAILURE. TO AVOID DAMAGE, INJURY, OR DEATH, THE USER OR APPLICATION DESIGNER MUST TAKE REASONABLY PRUDENT STEPS TO PROTECT AGAINST SYSTEM FAILURES, INCLUDING BUT NOT LIMITED TO BACK-UP OR SHUT DOWN MECHANISMS. BECAUSE EACH END-USER SYSTEM IS CUSTOMIZED AND DIFFERS FROM NATIONAL INSTRUMENTS' TESTING PLATFORMS AND BECAUSE A USER OR APPLICATION DESIGNER MAY USE NATIONAL INSTRUMENTS PRODUCTS IN COMBINATION WITH OTHER PRODUCTS IN A MANNER NOT EVALUATED OR CONTEMPLATED BY NATIONAL INSTRUMENTS, THE USER OR APPLICATION DESIGNER IS ULTIMATELY RESPONSIBLE FOR VERIFYING AND VALIDATING THE SUITABILITY OF NATIONAL INSTRUMENTS PRODUCTS WHENEVER NATIONAL INSTRUMENTS PRODUCTS ARE INCORPORATED IN A SYSTEM OR APPLICATION, INCLUDING, WITHOUT LIMITATION, THE APPROPRIATE DESIGN, PROCESS AND SAFETY LEVEL OF SUCH SYSTEM OR APPLICATION.

# Compliance

---

## FCC/Canada Radio Frequency Interference Compliance\*

### Determining FCC Class


The Federal Communications Commission (FCC) has rules to protect wireless communications from interference. The FCC places digital electronics into two classes. These classes are known as Class A (for use in industrial-commercial locations only) or Class B (for use in residential or commercial locations). Depending on where it is operated, this product could be subject to restrictions in the FCC rules. (In Canada, the Department of Communications (DOC), of Industry Canada, regulates wireless interference in much the same way.)

Digital electronics emit weak signals during normal operation that can affect radio, television, or other wireless products. By examining the product you purchased, you can determine the FCC Class and therefore which of the two FCC/DOC Warnings apply in the following sections. (Some products may not be labeled at all for FCC; if so, the reader should then assume these are Class A devices.)

FCC Class A products only display a simple warning statement of one paragraph in length regarding interference and undesired operation. Most of our products are FCC Class A. The FCC rules have restrictions regarding the locations where FCC Class A products can be operated.

FCC Class B products display either a FCC ID code, starting with the letters **EXN**, or the FCC Class B compliance mark that appears as shown here on the right.

Consult the FCC web site <http://www.fcc.gov> for more information.



### FCC/DOC Warnings

This equipment generates and uses radio frequency energy and, if not installed and used in strict accordance with the instructions in this manual and the CE Mark Declaration of Conformity\*\*, may cause interference to radio and television reception. Classification requirements are the same for the Federal Communications Commission (FCC) and the Canadian Department of Communications (DOC).

Changes or modifications not expressly approved by National Instruments could void the user's authority to operate the equipment under the FCC Rules.

### Class A

#### Federal Communications Commission

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### Canadian Department of Communications

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

### Class B

#### Federal Communications Commission

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Canadian Department of Communications**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

## **European Union - Compliance to EEC Directives**

Readers in the EU/EEC/EEA must refer to the Manufacturer's Declaration of Conformity (DoC) for information\*\* pertaining to the CE Mark compliance scheme. The Manufacturer includes a DoC for most every hardware product except for those bought for OEMs, if also available from an original manufacturer that also markets in the EU, or where compliance is not required as for electrically benign apparatus or cables.

\* Certain exemptions may apply in the USA, see FCC Rules §15.103 **Exempted devices**, and §15.105(c). Also available in sections of CFR 47.

\*\* The CE Mark Declaration of Conformity will contain important supplementary information and instructions for the user or installer.

# Contents

---

## About This Manual

Conventions .....	xi
Related Documentation.....	xii

## Chapter 1

### Introduction

About the 7324/7314 Controllers .....	1-1
What You Need to Get Started .....	1-1
Software Programming Choices .....	1-2
National Instruments Application Software .....	1-2
Optional Equipment .....	1-3
Motion Signal and Motion I/O Connections.....	1-3

## Chapter 2

### Configuration and Installation

Software Installation .....	2-1
Controller Configuration.....	2-1
Hardware Installation.....	2-2

## Chapter 3

### Hardware Overview

Functional Modes .....	3-2
Trapezoidal Profile Position Control.....	3-2
Velocity Control .....	3-3
Velocity Profiling .....	3-3
Event-Based Motion Profiling.....	3-3
Trajectory Parameters .....	3-4
Position Value Loading .....	3-4
Velocity Value Loading .....	3-5
Acceleration Value Loading.....	3-5

## **Chapter 4**

### **Signal Connections**

Motion I/O Connector .....	4-2
External Connector Wiring Recommendations .....	4-3
Bus Power Signal .....	4-4
Trigger, Breakpoint, and Inhibit Signals.....	4-4
Input Signals .....	4-4
Output Signals .....	4-4
Wiring Concerns .....	4-5
Jumper Configuration .....	4-5
I/O Port Hardware Circuit .....	4-6
Limit and Home Switches .....	4-7
Wiring Concerns .....	4-7
Limit and Home Switch Input Circuit .....	4-8
Encoder Connections (7324 Controllers Only).....	4-8
Wiring Concerns .....	4-9
Encoder Signals .....	4-9
Encoder Index Signal.....	4-9
Encoder Signal Input Circuit .....	4-10
Digital I/O Connector .....	4-10
ADC Inputs.....	4-14

## **Appendix A**

### **Specifications**

## **Appendix B**

### **Cable Connector Descriptions**

## **Appendix C**

### **Differences On Older PXI Controllers**

## **Appendix D**

### **Technical Support Resources**

# Glossary

## Index

## Figures

Figure 3-1.	PCI Controller Parts Locator Diagram .....	3-1
Figure 3-2.	PXI Controller Parts Locator Diagram .....	3-2
Figure 4-1.	68-Pin Stepper Pin Assignment .....	4-2
Figure 4-2.	Trigger and Breakpoint Hardware Circuitry .....	4-6
Figure 4-3.	Inhibit Hardware Circuitry .....	4-6
Figure 4-4.	Limit Switch and Home Switch Input Hardware Circuitry .....	4-8
Figure 4-5.	Quadrature Encoder Phasing Diagram .....	4-8
Figure 4-6.	Encoder Feedback Input Hardware Circuitry .....	4-10
Figure 4-7.	68-Pin Digital I/O Connector .....	4-11
Figure 4-8.	Digital I/O Port Configuration .....	4-12
Figure 4-9.	PCI- and PXI-Step Port C Direction Setting .....	4-13
Figure B-1.	50-Pin Stepper Connector Pin Assignment .....	B-2
Figure C-1.	PXI Controller Parts Locator Diagram for Revision C or Earlier .....	C-1
Figure C-2.	50-Pin Digital I/O Connector for Revision C or Earlier .....	C-2
Figure C-3.	External Pin Assignment for the ADC Connector (Revision C or Earlier) .....	C-3

## Tables

Table 4-1.	Signal Descriptions for I/O Connector Pins .....	4-3
Table 4-2.	Jumper Pin I/O Port Bit Correspondence .....	4-5

# About This Manual

---

This manual describes the electrical and mechanical aspects of each controller in the ValueMotion 7324/7314 family of controllers and contains information concerning their operation and programming. Unless otherwise noted, text applies to all controllers in the ValueMotion 7324/7314 family.

The 7324/7314 family includes the following motion controllers:

- ◆ Stepper (Open-Loop)
  - PCI-7314
  - PXI-7314
- ◆ Stepper (Closed-Loop)
  - PCI-7324
  - PXI-7324

The 7324/7314 stepper controllers are low-cost, high-performance controllers for PCI and PXI bus computers.

## Conventions

---

The following conventions appear in this manual:

<>

Angle brackets that contain numbers separated by an ellipsis represent a range of values associated with a bit or signal name—for example, DBIO<3..0>.

◆

The ◆ symbol indicates that the following text applies only to a specific product, a specific operating system, or a specific software version.



This icon denotes a note, which alerts you to important information.



This icon denotes a caution, which advises you of precautions to take to avoid injury, data loss, or a system crash.



This icon denotes a warning, which advises you of precautions to take to avoid being electrically shocked.

<i>italic</i>	Italic text denotes variables, emphasis, a cross reference, or an introduction to a key concept. This font also denotes text that is a placeholder for a word or value that you must supply.
<u>underline</u>	Indicates a signal is active-low.
7324 controller	Refers to the ValueMotion PCI-7324 and the PXI-7324 closed-loop stepper controllers.
7314 controller	Refers to the ValueMotion PCI-7314 and the PXI-7314 open-loop stepper controllers.
7324/7314 controller	Refers to the ValueMotion PCI-7314, PXI-7314, PCI-7324, and PXI-7324 stepper controllers.
PCI controller	Refers to the PCI-7324 and the PCI-7314 controllers.
PXI controller	Refers to the PXI-7324 and the PXI-7314 controllers.

## Related Documentation

---

The following documents contain information that you might find helpful as you read this manual:

- *ValueMotion Software Reference Manual*
- ValueMotion VI Online Help
- *PCI Local Bus Specification, Revision 2.1*
- Your computer's technical reference manual

---

# Introduction

This chapter describes the ValueMotion 7324/7314 controllers and their operation.

## About the 7324/7314 Controllers

---

Thank you for purchasing a National Instruments 7324/7314 motion controller. The 7324/7314 controllers are stepper motor controllers for PCI and PXI bus computers. These controllers provide fully programmable motion control for up to four independent axes of motors, with additional I/O for limit and home switches as well as other general-purpose functions. You can use these controllers in position or velocity control applications, with support for point-to-point position, velocity profiling, and event-based motion profiling modes.

The 7324 closed-loop controllers control stepper motors and can operate in open or closed-loop mode. They use quadrature encoders for position and velocity feedback, and clockwise (CW)/counter-clockwise (CCW) or step/direction digital outputs for command. The 7314 open-loop stepper controllers do not include the quadrature decoders and can operate only in open-loop mode. All controllers support full, half, and microstepping applications.

## What You Need to Get Started

---

To set up and use your 7324/7314 controller, you will need the following:

- ☐ One of the 7324/7314 controllers
- ☐ *7324/7314 Hardware User Manual*
- ☐ One of the following software packages and documentation:
  - LabVIEW
  - Measurement Studio
  - ValueMotion Software (includes pcRunner)
- ☐ Your computer with an available PCI or PXI slot, as appropriate

# Software Programming Choices

---

You have several options to choose from when programming your National Instruments 7324/7314 controllers. You can use National Instruments application software, ValueMotion VIs for LabVIEW, or ValueMotion software.

Programming the 7324/7314 controller is straightforward using a simple but powerful high-level function set application programming interface (API). All setup and motion control functions are easily executed by calling into either a static or dynamically linked library (DLL). These libraries are callable from C, Visual Basic, and other high-level languages. Full function set implementations are available for LabVIEW, Measurement Studio, and other industry-standard software programs.

## National Instruments Application Software

---

LabVIEW, based on the graphical programming language G, features interactive graphics and a state-of-the-art user interface. In LabVIEW, you can create 32-bit compiled programs and stand-alone executables for custom data acquisition, test, and measurement solutions. National Instruments offers the ValueMotion VI Library, a series of virtual instruments (VIs) for using LabVIEW with National Instruments motion control hardware. This VI library implements the full function set API and a powerful set of demo functions, example programs, and fully operational, high-level application routines.

ANSI C-based LabWindows/CVI also features interactive graphics and a state-of-the-art user interface. Using LabWindows/CVI, you can generate C code for custom data acquisition, test, and measurement solutions. The ValueMotion software kit includes a series of functions for using LabWindows/CVI with National Instruments motion controllers.

## Optional Equipment

---

National Instruments offers a variety of products to use with 7324/7314 controllers, including cables, connector blocks, Universal Motion Interfaces (UMIs), driver amplifier units, and other accessories, as follows:

- Cables and cable assemblies
- Connector blocks, shielded and unshielded 68-pin screw terminals
- UMI connectivity blocks with integrated motion signal conditioning and motion inhibit functionality
- Stepper motor compatible driver amplifier units with integrated power supply and wiring connectivity

For more specific information about these products, refer to your National Instruments catalogue, the motion control product brochure, or call the office nearest you.

## Motion Signal and Motion I/O Connections

---

You access the motion I/O signals through an external 68-position connector on the 7324/7314. The 7324/7314 controllers use a high-density 68-pin female VHDCI connector.

The 24-bit digital I/O port on the 7324/7314 controllers is accessed through an external high-density 68-pin female VHDCI connector.

You can use any compatible mating connector, including insulation displacement ribbon cable connectors and discrete wire mating connectors.



**Note** Refer to Appendix C, *Differences on Older PXI Controllers*, for information of signal connections on versions of the PXI controllers older than revision D.

---

# Configuration and Installation

This chapter describes how to configure and install your 7324/7314 controller.

## Software Installation

---

Install your ValueMotion driver software, along with the VI libraries (if appropriate) before you install the 7324/7314 controller. Refer to the appropriate release notes and your software documentation for specific instructions on the software installation sequence.

## Controller Configuration

---

There are two types of configuration to be performed on the controllers: bus-related and motion I/O-related configuration.

Both the PCI and PXI controllers are fully compatible with the *PCI Local Bus Specification, Revision 2.1*. This compatibility allows the computer to automatically perform all bus-related configuration and requires no user interaction. There are no jumpers to configure for bus-related configuration.

The motion I/O-related configuration includes such settings as limit switch polarity, I/O port direction, motion mechanical system properties, and others. Most of these settings are software configurable, while some require hardware jumpers to be configured properly. Refer to Chapter 4, [Signal Connections](#), for motion I/O-related hardware jumper settings.

# Hardware Installation

---

You can install the 7324/7314 controller in any open +5 V PCI or PXI expansion slot in your computer. The following are general installation instructions, but consult your computer user manual or technical reference manual for specific instructions and warnings.

◆ PCI controllers

1. Turn off and unplug your computer.
2. Remove the top cover or access port to the I/O channel.
3. Remove the expansion slot cover on the back panel of the computer.
4. Insert the 7324/7314 controller into a 5 V PCI slot as appropriate. Gently rock the controller to ease it into place. It may be a tight fit, but *do not force* the controller into place.
5. If required, screw the mounting bracket of the 7324/7314 controller to the back panel rail of the computer.
6. Replace the cover.
7. Plug in and turn on your computer.

Your PCI controller is installed.

◆ PXI controllers


1. Turn off and unplug your chassis.
2. Choose an unused 5 V peripheral slot.
3. Remove the filler panel for the peripheral slot you have chosen.
4. Touch a metal part on your chassis to discharge any static electricity that might be on your clothes or body.
5. Insert the PXI controller into the slot. Use the injector/ejector handle to fully inject the device into place.
6. Screw the front panel of the PXI controller to the front panel mounting rails of the chassis.
7. Visually verify the installation.
8. Plug in and turn on the chassis.

Your PXI controller is installed.

# Hardware Overview

This chapter presents an overview of the hardware functionality of your 7324/7314 controller.

Figures 3-1 and 3-2 show the PCI and PXI parts locator diagrams, respectively.

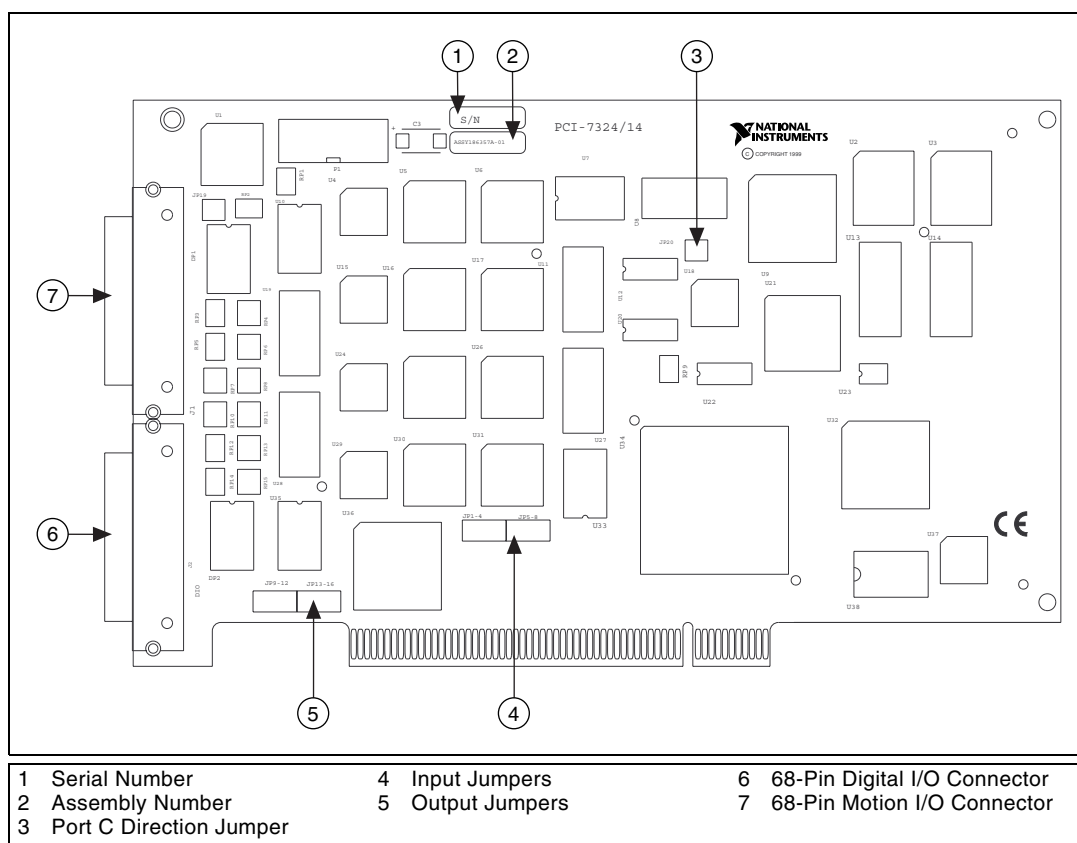

**Figure 3-1.** PCI Controller Parts Locator Diagram

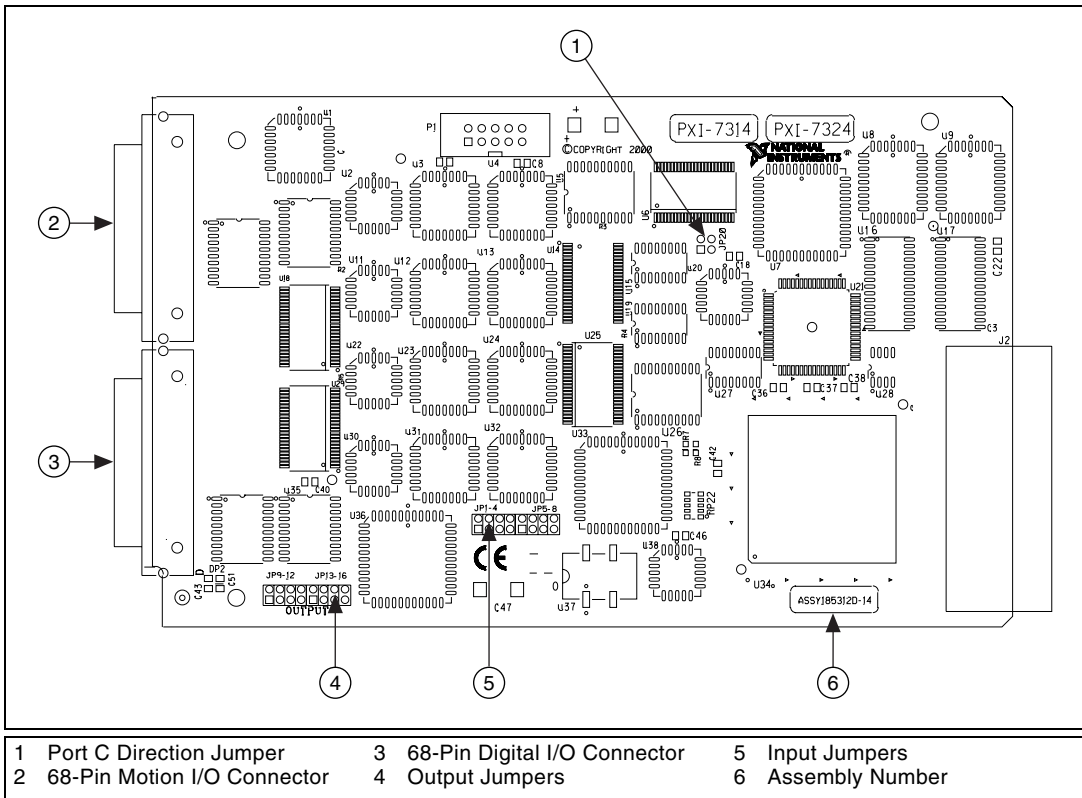


Figure 3-2. PXI Controller Parts Locator Diagram

## Functional Modes

### Trapezoidal Profile Position Control

The 7324/7314 controllers implement trapezoidal profile control. They provide point-to-point motion based on the difference between the current position and the desired target position using preprogrammed acceleration and velocity values. The trapezoidal motion profile is calculated based on the move duration, maximum velocity, and desired acceleration. Motion occurs first with a programmable acceleration, then for a period at a constant velocity (if possible) and finally with a preprogrammed deceleration to the desired target position. You can interrupt motion by halt-stopping via a limit or home switch input or you can execute a stop or kill function. The controllers also have a programmable acceleration factor that boosts the acceleration at low speeds to match the inherent torque versus speed characteristics of stepper motor systems.

The controllers require parameter loading in conjunction with motion trajectory function-level programming. The open-loop stepper controller parameters are expressed primarily in terms of steps, step count, and steps/second. Functions accessing closed-loop functions, which are only available on 7324 controllers, also use steps/revolution, encoder lines/revolution, and quadrature encoder counts. In LabVIEW, you configure parameters in units including revolutions per minute (RPM) and revolutions per second per second (RPSPS).

## Velocity Control

With the velocity control mode, you can continue motion at a preprogrammed velocity until a limit or home switch is encountered or until a stop or kill function is executed.

## Velocity Profiling

With the velocity profiling mode, you can preprogram initial acceleration to a desired velocity that is maintained until a new velocity value is loaded. New velocity values may be loaded at any time. The system executes the most recent function and attains the new programmed velocity. Motion is continuous until a limit or home switch is encountered or until a stop or kill function is executed. This mode is useful for continuous contouring applications.



**Note** Stepper controllers do not use the acceleration value when changing to a new velocity, which can result in an abrupt motion for large velocity changes.

## Event-Based Motion Profiling

7324/7314 controllers offer the advanced feature of event-based motion profiling. Event-based motion profiling involves preloading motion control functions into onboard memory trigger buffers. You can then execute single or multiple move sequences using digital I/O trigger events. Triggers can be external I/O events or manual trigger functions sent by the host computer under function control. You can use the event-based motion profiling mode for semi-autonomous operation or for precise coordination with external events.

# Trajectory Parameters

---

The trajectory parameters the controllers use are expressed in terms of steps for open-loop functions or quadrature counts for closed-loop functions.

The controllers obtain closed-loop position and velocity control by using an incremental quadrature encoder for feedback. All position data is referred to in quadrature counts. You can determine quadrature counts with the following equation:

$$\text{Encoder Lines Per Index Period} \times 4$$

The encoder resolution is the number of encoder lines between consecutive encoder indexes (marker or Z-bit). If the encoder does not have an index output, the resolution is referred to as lines per revolution for rotary encoders and as lines per inch (or millimeters) for linear encoders.

Refer to the *ValueMotion Software Reference Manual* for specific information on loading trajectory parameters to your 7324/7314 controller.

## Position Value Loading

For closed-loop stepper operation, position is specified in quadrature counts as a signed number. The number of quadrature counts per revolution depends upon the incremental encoder used for feedback.

For open-loop stepper operation, position is specified in step counts as a signed number. The number of step counts per revolution depends upon the type of stepper driver and motor being used. For example, a stepper motor with 1.8°/step (200 steps/revolution) used in conjunction with a  $\times 10$  microstep driver would have an effective resolution of 2,000 steps per revolution. 7324/7314 controllers support all full, half, and microstep applications.

## Velocity Value Loading

Velocity is expressed as the change in position divided by time. For closed-loop stepper operation, position is specified in quadrature counts. For open-loop stepper operation, position is specified in step counts. You can use the following formulas to convert revolutions per minute (RPM) to quadrature or step counts per second:

- Quadrature counts per second:

$$\text{Velocity} = (\text{Velocity in RPM}) \times (\text{Encoder Lines}) \times (4) \times (1/60)$$

- Step counts per second:

$$\text{Velocity} = (\text{Velocity in RPM}) \times (\text{Driver Steps/Motor Step}) \times (\text{Motor Steps/Rev}) \times (1/60)$$

To determine the driver steps/motor step, configure the stepper driver. The driver steps/motor steps ratio is 1 for full step, 1/2 for half step, and 1/*n* for microstep where *n* is the microstep value.

## Acceleration Value Loading

Acceleration is expressed as the change in velocity divided by time, which is equivalent to change in position divided by time divided by time. For closed-loop stepper operation, position is specified in quadrature counts. For open-loop stepper operation, position is specified in step counts. Use the following formulas to convert revolutions per second per second (RPSPS) to quadrature or step counts per second per second:

- Quadrature counts per second per second:

$$\text{Acceleration} = (\text{Acceleration in RPSPS}) \times (\text{Encoder Lines}) \times (4)$$

- Step counts per second per second:

$$\text{Acceleration} = (\text{Acceleration in RPSPS}) \times (\text{Driver Steps/Motor Step}) \times (\text{Motor steps/Rev})$$

To determine the driver steps/motor step, configure the stepper driver. The driver steps/motor steps ratio is 1 for full step, 1/2 for half step, and 1/*n* for microstep where *n* is the microstep value.

---

# Signal Connections

This chapter describes how to make input and output signal connections to the 7324/7314 controllers.



**Note** Throughout this document, a line above a signal name indicates that the signal is active-low.



**Warning** Do not rely on any general purpose digital line states during power-up or power-down of the system.

# Motion I/O Connector

Figure 4-1 shows the pin assignments for the 68-pin motion I/O connector on the 7324/7314 controllers.

Axis 1 Dir (CCW)	1	35	Axis 1 Step (CW)
Digital Ground	2	36	Axis 1 Encoder Phase A
Digital Ground	3	37	Axis 1 Encoder Phase B
Axis 1 Home Switch	4	38	Axis 1 Encoder Index
Trigger 1	5	39	Axis 1 Forward Limit Switch
Axis 1 Inhibit	6	40	Axis 1 Reverse Limit Switch
Axis 2 Dir (CCW)	7	41	Axis 2 Step (CW)
Digital Ground	8	42	Axis 2 Encoder Phase A
Digital Ground	9	43	Axis 2 Encoder Phase B
Axis 2 Home Switch	10	44	Axis 2 Encoder Index
Trigger 2	11	45	Axis 2 Forward Limit Switch
Axis 2 Inhibit	12	46	Axis 2 Reverse Limit Switch
Axis 3 Dir (CCW)	13	47	Axis 3 Step (CW)
Digital Ground	14	48	Axis 3 Encoder Phase A
Digital Ground	15	49	Axis 3 Encoder Phase B
Axis 3 Home Switch	16	50	Axis 3 Encoder Index
Trigger 3	17	51	Axis 3 Forward Limit Switch
Axis 3 Inhibit	18	52	Axis 3 Reverse Limit Switch
Axis 4 Dir (CCW)	19	53	Axis 4 Step (CW)
Digital Ground	20	54	Axis 4 Encoder Phase A
Digital Ground	21	55	Axis 4 Encoder Phase B
Axis 4 Home Switch	22	56	Axis 4 Encoder Index
Trigger 4	23	57	Axis 4 Forward Limit Switch
Axis 4 Inhibit	24	58	Axis 4 Reverse Limit Switch
Digital Ground	25	59	Host +5 V
Breakpoint 1	26	60	Breakpoint 2
Breakpoint 3	27	61	Breakpoint 4
Reserved	28	62	Reserved
Reserved	29	63	Reserved
Reserved	30	64	Reserved
Reserved	31	65	Reserved
Analog Input 1 <sup>1</sup>	32	66	Analog Input 2 <sup>1</sup>
Analog Input 3 <sup>1</sup>	33	67	Analog Input 4 <sup>1</sup>
Analog Reference (Output) <sup>1</sup>	34	68	Analog Input Ground <sup>1</sup>

<sup>1</sup>Not connected on 7314 controllers

**Figure 4-1.** 68-Pin Stepper Pin Assignment

Table 4-1 describes the signals on the I/O connectors.

**Table 4-1.** Signal Descriptions for I/O Connector Pins

Signal Name	Reference	Direction	Description
Axis <1..4> Dir (CCW)	Digital Ground	Output	Motor direction or counter-clockwise control
Axis <1..4> Step (CW)	Digital Ground	Output	Motor step or clockwise control
Axis <1..4> Encoder Phase A	Digital Ground	Input	Closed-loop only—phase A encoder input
Axis <1..4> Encoder Phase B	Digital Ground	Input	Closed-loop only—phase B encoder input
Axis <1..4> Encoder Index	Digital Ground	Input	Closed-loop only—index encoder input
Axis <1..4> Home Switch	Digital Ground	Input	Home switch
Axis <1..4> Forward Limit Switch	Digital Ground	Input	Forward/clockwise limit switch
Axis <1..4> Reverse Limit Switch	Digital Ground	Input	Reverse/counter-clockwise limit switch
Axis <1..4> Inhibit	Digital Ground	Output	Drive inhibit
Trigger <1..4>	Digital Ground	Input	Input bit <1..4>
Breakpoint <1..4>	Digital Ground	Output	Output bit <1..4>
Host +5 V	Digital Ground	Output	+5 V—host bus interlock
Analog Input Ground	—	—	Reference for analog inputs
Analog Input <1..4>	Analog Input Ground	Input	8-bit analog input
Analog Reference (output)	Analog Input Ground	Output	+5 V—analog reference level
Digital Ground	—	—	Reference for digital I/O

## External Connector Wiring Recommendations

The external connectors are divided into five separate sections for the purpose of wiring descriptions. Four of the sections are identical in pinout, format, and connector configuration. Each of these four identical sections corresponds to an individual axis controller circuit. The fifth section is the bus power interlock section.

Each per-axis motion I/O connector subsection consists of four functional areas:

- Motor drive outputs
- Encoder feedback inputs
- Limit and home switch inputs
- Related motion I/O port bits



**Caution** You must wire these four function groups separately from each other to prevent noise or signal crosstalk from affecting adjacent signal groups. Failure to take these simple precautions may cause faulty operation.

It is important to note that the 7324/7314 I/O connector provides numerous ground connections. Proper use of these ground connections will help to prevent unwanted signal disturbance and noise. Use these ground connections as ground current return paths or as shield connections for proper signal grounding.

## Bus Power Signal

The bus power +5 V signal is available for bus monitoring and interlock purposes. It is not intended to power external circuitry or components. Current draw should not exceed 100 mA.

## Trigger, Breakpoint, and Inhibit Signals

The following sections describe hardware jumper selection and the specifications for trigger, breakpoint, and inhibit signal interconnection. For correct operation, you must execute motion system setup, including I/O port software initialization, using the ValueMotion functions before you can use the trigger, breakpoint, and inhibit signals.

The controllers create the trigger, breakpoint, and inhibit signals from a single 8-bit bidirectional port. I/O port bits <1..4> are used for the trigger and breakpoint signals. When configured as an input, the I/O port bit can be used as a trigger or general-purpose input. When configured as an output, the I/O port bit can be used as either a breakpoint or general-purpose output. I/O port bits <5..8> are used for the inhibit signals. When configured as an output, the I/O port bit is the axis inhibit output. When configured as an input, the I/O port bit is a general-purpose input.

## Input Signals

Input signals to the I/O port may be active-high or active-low. Proper operation depends upon correct setup and programming of I/O polarity and direction. Improper setup and programming may cause faulty operation.

## Output Signals

I/O port signals configured as outputs are single-ended TTL with internally pulled-up open-collector buffers. Pull-up resistors are 3.3 k $\Omega$  to +5 V. These buffers can sink 64 mA.



**Note** The PXI controllers prior to revision D do not include pull-up resistors on the breakpoint outputs. You must connect external pull-up resistors for proper operation of the breakpoint outputs when interfacing to TTL inputs that do not include built-in pull-up resistors.

## Wiring Concerns



**Caution** Keep I/O port signals and I/O port grounds wired separately from the motor drive signals. Wiring these signals near each other can cause faulty operation. Be sure to use adequate ground signal connections in conjunction with I/O port bit signal connections.

## Jumper Configuration

Two hardware jumper locations are available for each I/O port bit on the 7324/7314 controller. One of these locations is for input signal configuration and the other is for output signal configuration. The jumpers are used in conjunction with I/O port configuration and polarity programming to properly set up the I/O port function. The jumpers must be properly installed and must correspond to the direction programmed to ensure correct operation of the I/O port bits.

Table 4-2 shows the I/O port bit assignments and the corresponding hardware jumpers.

**Table 4-2.** Jumper Pin I/O Port Bit Correspondence

I/O Port Bit Number	Input Jumper Number	Output Jumper Number
1	JP1	JP9
2	JP2	JP10
3	JP3	JP11
4	JP4	JP12
5	JP5	JP13
6	JP6	JP14
7	JP7	JP15
8	JP8	JP16




**Caution** Never install both input and output jumpers for the same I/O port bit locations; for example, 1 and 9, 2 and 10, 3 and 11, and so on.


The 7324/7314 controllers have eight removable jumpers, located on input pins JP1 through JP4 and output pins JP13 through JP16 by default. Refer to Figures 3-1 and 3-2 in Chapter 3, [Hardware Overview](#), for input/output jumper locations.

## I/O Port Hardware Circuit

Figures 4-2 and 4-3 show simplified schematic diagrams of the hardware circuitry used by the I/O ports for input signal buffering and output signal drive, as well as the jumper locations.

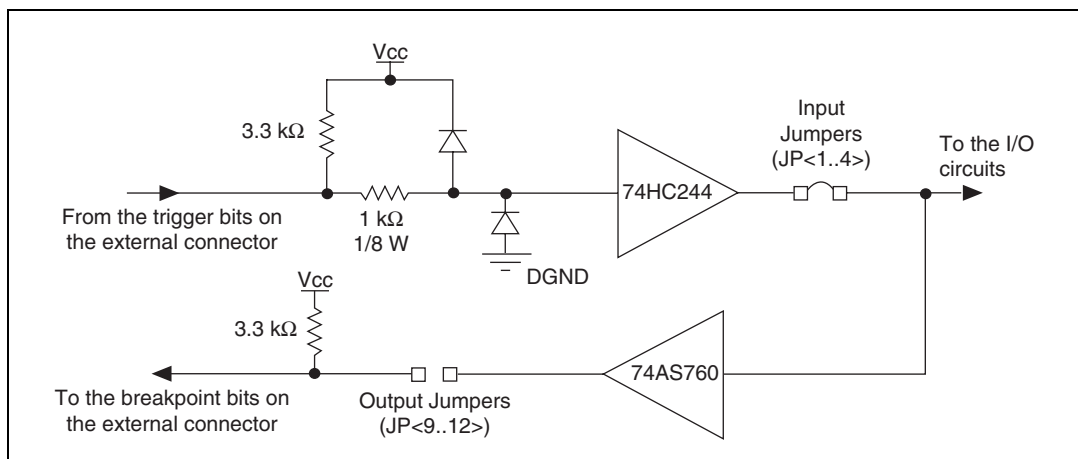

**Figure 4-2.** Trigger and Breakpoint Hardware Circuitry

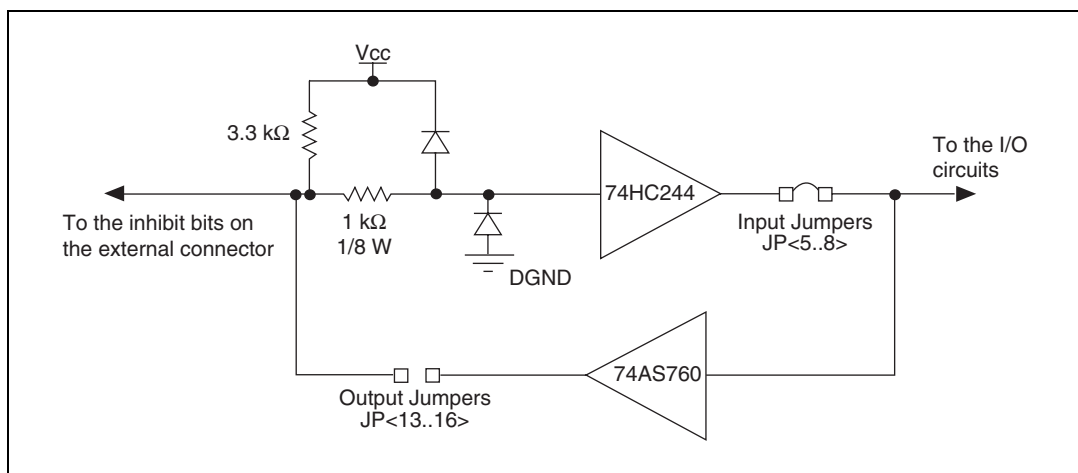

**Figure 4-3.** Inhibit Hardware Circuitry

The 7324/7314 controller protects input signals from over-voltage and misconnection of the I/O port bits. However, you must take care when making these and any other hardware wiring connections. 12 V input signals can be interfaced directly, but higher voltages should be avoided. With the 3.3 k $\Omega$  pull-up resistor, you can directly interface to open-collector signals.



**Caution** Excessive input voltages may cause component failure.

## Limit and Home Switches

Limit and home switch inputs can be software configured as active-high or active-low enabled single-ended signals. Limit and home switch inputs may be enabled and disabled through software. Unused limit inputs may be directly used as nondedicated, general-purpose digital input channels.

An active input signal on an enabled limit or home switch input causes motion to immediately decelerate or halt stop on the corresponding axis. Limit and home switch input signals perform special motion control functions during the Find Home function.



**Note** While limit switch transitions are edge-detected and stop motion, active inputs should remain active to prevent motion from proceeding further into the limit or in the limit direction. Pulsed signals cause motion to stop, but they do not prevent further motion profiles that are restarted beyond an active limit position.

Limit switch inputs are a per-axis, system-level enhancement on the 7324/7314 controllers and are not required for basic motion control. These inputs are part of a system solution for complete motion control. All motion control functions can be operated without limit switches except the Find Home function, which requires enabled limit inputs for operations.


## Wiring Concerns



**Caution** Keep limit and home switch signals and their ground connections wired separately from the motor driver/amplifier signal connections. Wiring these signals near each other can cause faulty operation.

## Limit and Home Switch Input Circuit

Figure 4-4 shows a simplified schematic diagram of the circuit configuration used by the limit and home switch inputs for input signal buffering and detection.

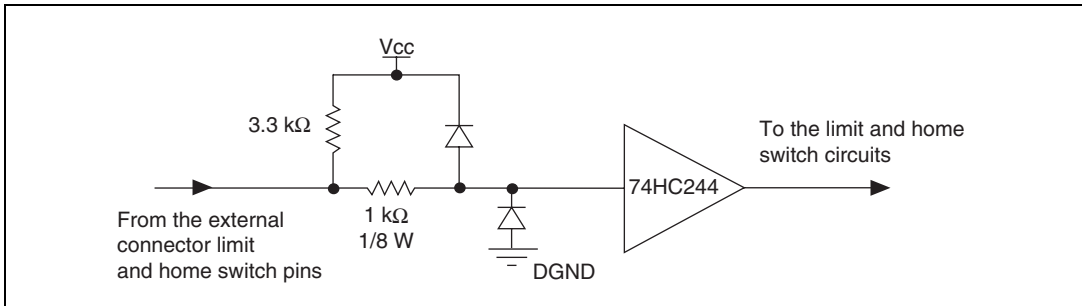

**Figure 4-4.** Limit Switch and Home Switch Input Hardware Circuitry


The 7324/7314 controller provides protection for over-voltage inputs on the limit and home switch input signal. However, take care when making these and any other hardware wiring connections. 12 V input signals can be interfaced directly, but higher voltages must be avoided. The 3.3 kΩ pull-up resistor allows you to interface to open-collector signals.



**Caution** Excessive input voltages can cause erroneous operation and/or component failure.

## Encoder Connections (7324 Controllers Only)

Encoder signal inputs are single-ended TTL signals. Take care to observe the phasing of the Phase A and Phase B encoder quadrature signals to ensure that the direction of motor motion and encoder feedback signals are coincident and correctly related. For more information, see Figure 4-5.

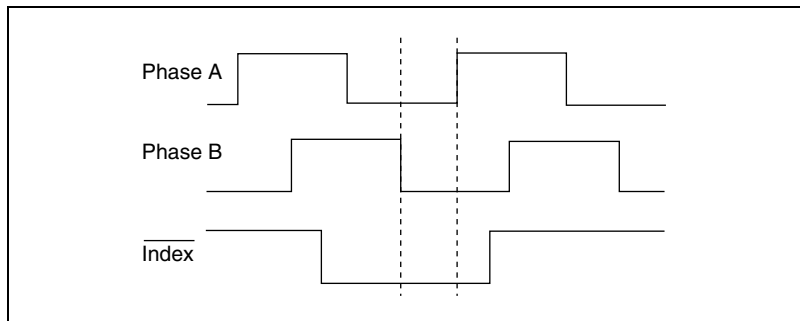

**Figure 4-5.** Quadrature Encoder Phasing Diagram

## Wiring Concerns

The encoder inputs are connected to quadrature decoder/counter circuits. You must minimize noise at this interface. Excessive noise on these input signals may result in loss of counts or extra counts and erroneous closed-loop motion operation. Verify the encoder connections before powering up the system.



**Caution** Wire encoder signals and their ground connections separately from the motor driver signal connections. Wiring these signals near each other causes mispositioning and faulty operation.

## Encoder Signals

7324 controllers expect quadrature encoder input feedback signals 90° out of phase from each other. Any deviation from this signal type, or excessive noise on the encoder signals, causes faulty operation and lost quadrature counts.




**Note** Determine quadrature counts by multiplying the encoder resolution in encoder lines by 4. The encoder resolution is the number of encoder lines between consecutive encoder indexes (marker or Z-bit). If the encoder does not have an index output, the resolution would be referred to as lines per revolution, or lines per unit of measure (in., cm, mm, and so on).

## Encoder Index Signal

You can use the 7324 controllers with an active-low index (marker or Z-bit) input. This signal must be single-ended, TTL compatible, and properly phased in both polarity and sequence with respect to the Phase A and Phase B input signals. See Figure 4-5 for more information about the quadrature encoder phasing. The index state is defined when all three signals, Phase A, Phase B, and Index, are low. To avoid redundancy, the Index signal must be less than 360° of a full quadrature period. Improper Index signal connection and configuration may cause faulty operation during the Find Index function. If this function is not working properly, check the encoder index signal connection, polarity, and sequence.

## Encoder Signal Input Circuit

Figure 4-6 shows a simplified schematic diagram of the hardware circuit used by the encoder inputs for input signal buffering.

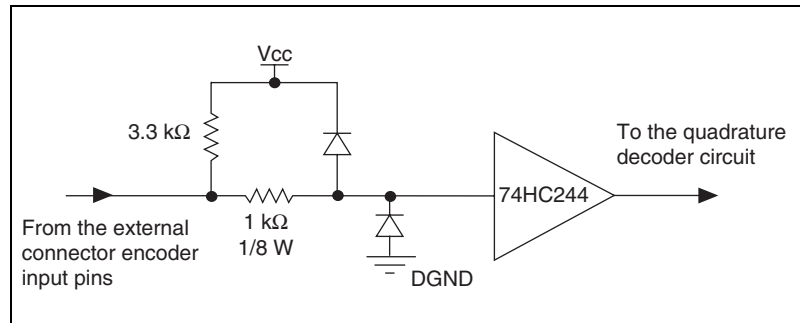

**Figure 4-6.** Encoder Feedback Input Hardware Circuitry

The 7324 controller provides protection for over-voltage inputs and misconnection of the Encoder Input signals. However, take care when making these and any other hardware wiring connections. The 3.3 kΩ pull-up resistor allows you to connect to open-collector signals.



**Caution** Excessive input voltages can cause component failure.

## Digital I/O Connector

You can program the digital I/O port for general-purpose digital I/O functionality. The 24-bit digital I/O port is configured in hardware as three 8-bit digital I/O ports. The three byte wide 8-bit ports are referred to as ports A, B, and C. The auxiliary 24-bit digital I/O on the controllers is accessed from a 68-pin connector as shown in Figure 4-7.




**Note** Refer to Appendix C, *Differences on Older PXI Controllers*, for connectivity information for versions of PXI controllers previous to revision D.

+5 V	1	35	Digital Ground
Reserved	2	36	Digital Ground
Reserved	3	37	Digital Ground
Reserved	4	38	Reserved
Reserved	5	39	Digital Ground
Reserved	6	40	Reserved
Reserved	7	41	Digital Ground
Reserved	8	42	Digital Ground
Reserved	9	43	Digital Ground
Digital I/O 1	10	44	Digital I/O 2
Digital Ground	11	45	Digital I/O 3
Digital I/O 4	12	46	Digital Ground
Digital I/O 5	13	47	Digital I/O 6
Digital Ground	14	48	Digital I/O 7
Digital I/O 8	15	49	Digital Ground
Digital I/O 9	16	50	Digital Ground
Digital I/O 10	17	51	Digital I/O 11
Digital Ground	18	52	Digital I/O 12
Digital Ground	19	53	Digital I/O 13
Digital Ground	20	54	Digital I/O 14
Digital I/O 15	21	55	Digital Ground
Digital I/O 16	22	56	Digital Ground
Digital I/O 17	23	57	Digital I/O 18
Digital Ground	24	58	Digital I/O 19
Digital I/O 20	25	59	Digital Ground
Digital I/O 21	26	60	Digital I/O 22
Digital Ground	27	61	Digital I/O 23
Digital I/O 24	28	62	Digital Ground
Reserved	29	63	Reserved
Digital Ground	30	64	Reserved
Reserved	31	65	Digital Ground
Reserved	32	66	Reserved
Digital Ground	33	67	Reserved
Reserved	34	68	Digital Ground

**Figure 4-7.** 68-Pin Digital I/O Connector

Port A consists of digital I/O bits 1 through 8 available on the digital I/O connector. Always configure these bits as inputs. The data read from the Port A bits will always reflect the actual input bit levels. If Port A is configured for output bits, writing output data to Port A does nothing. For more information, see Figure 4-8.

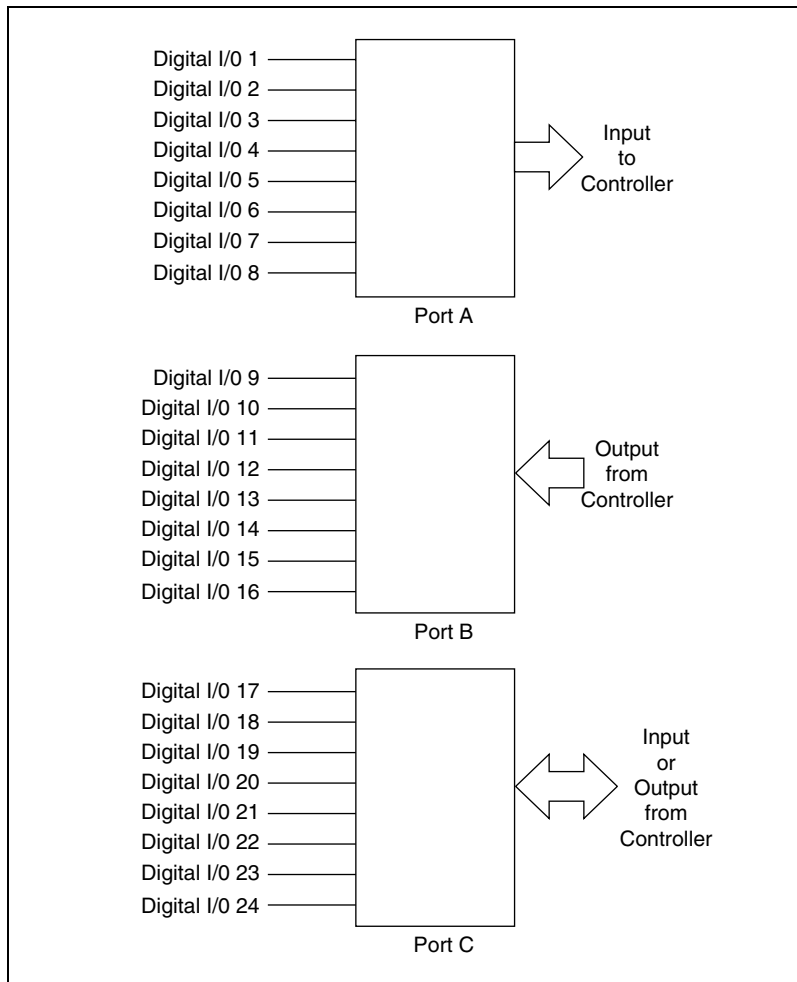

**Figure 4-8.** Digital I/O Port Configuration

Port B consists of digital I/O bits 9 through 16 available on the digital I/O connector. Always configure these bits as outputs. The data written to the Port B bits reflects the actual output bit levels. Port B cannot be configured for input bits. Reading input data from Port B returns the programmed output values. See Figure 4-8 for more information.


Readback of the Port B bit data can be very useful in programming these bits. By reading back the present output bit settings and then using logical binary functions, you can directly mask and set output data values for this port. If the output data is independent of the present value of output Port B,

it is also simple to write the new desired bit levels to the port directly overriding the previous values.

Port C consists of digital I/O bits 17 through 24 available on the digital I/O connector. You can configure these bits as a byte wide input or output port. You can configure Port C direction as all output bits or all input bits by using two required configuration settings.

Complete the following steps to set the Port C direction:

1. Set the jumper (item 3 in Figure 3-1, *PCI Controller Parts Locator Diagram*, for PCI, item 2 in Figure 3-2, *PXI Controller Parts Locator Diagram*, for PXI) to input or output to select the hardware direction configuration for Port C. Refer to Figure 4-9 for more information on jumper configuration.
2. Use the Set Aux. I/O Port Output function to set up the desired Port C direction of the Port C data byte. Refer to your *ValueMotion Software Reference Manual* for more information on software functions.

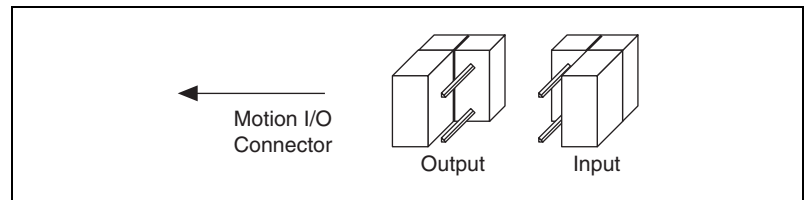

**Figure 4-9.** PCI- and PXI-Step Port C Direction Setting

Data can be written to the Port C bits when they are configured as output bits, and the outputs will reflect the desired output bit levels set. Reading data from Port C returns the actual data input or user-programmed output values for the bits depending on Port C direction selected.

Readback of the Port C bit data can be very useful in programming these bits. By reading back the present output bit settings and then using logical binary functions, you can directly mask and set output data values for this port. If the output data is independent of the present value of the output Port C, it is also simple to write the new desired bit levels to the port directly.

## ADC Inputs

---

The 7324 controllers contain a multi-channel analog-to-digital converter (ADC) for basic analog input operations. Both the PCI and PXI controllers provide four analog input channels on the external 68-pin motion connector.



**Note** Older PXI controllers (revision C and earlier) include an additional four channels. Refer to [ADC Inputs](#) in Appendix C, [Differences on Older PXI Controllers](#), for more information.

You can configure the multi-channel ADC on the controller for simple A/D conversion or motion integrated functionality. The ADC is a 0 and 5 V range 8-bit converter. You can use the A/D input channels independently as analog inputs.

You can read back the analog voltage input digital representation on any of the controller's eight ADC channels by using the Read A/D function. The values read back will be in the following range:

$$0 \leq \text{Analog Input Number Readback Value} \leq 255$$

You can read any channel by indicating the desired channel number when using the A/D readback function.

# Specifications

This appendix lists the specifications of your 7324/7314 controller. These specifications are typical at 25 °C unless otherwise noted.



**Note** For older PXI controllers (revision C and earlier), refer to *Physical Specifications* in Appendix C, [Differences On Older PXI Controllers](#).

## Stepper Performance

Max step frequency ..... 750,000 steps/s

Absolute position range .....  $\pm 2^{31}$  steps

Max relative move size .....  $\pm 2^{21}$  steps

Max encoder frequency ..... 1 MHz

## Motion Digital I/O

### Input Circuits (Including Encoder Feedback, Limit Switches, and Trigger Inputs)

Input voltage range ..... 0 to 12 V

Input low voltage ..... 0.8 V

Input high voltage ..... 2 V

### Output Circuits (Including Step, Direction, and Breakpoint Outputs)

Output voltage range ..... 0 to 5 V

Output low voltage ..... < 0.6 V at 64 mA

Output high voltage ..... 3.3 k pull-up to +5 V  
(open collector)



**Note** Pull-ups are not provided on breakpoint outputs on versions of PXI controllers prior to revision D.

## 24-Bit Digital I/O

Input voltage range .....	0 to 5 V
Input low voltage .....	0.8 V
Input high voltage .....	2 V
Output voltage range .....	0 to 5 V
Output low voltage .....	< 0.5 V at 24 mA
Output high voltage .....	> 2.4 V at 3 mA

## Analog Input (7324 Only)

Input voltage range .....	0 to $V_{cc}$ ( $V_{cc} = +5\text{ V} \pm 3\%$ )
Resolution .....	8 bits

## Power Requirements (Max)

+5 ( $\pm 3\%$ ) .....	1.2 A
+12 V ( $\pm 3\%$ ) .....	0 A
–12 V ( $\pm 3\%$ ) .....	0 A
Power consumption .....	6 W

## Physical

### Dimensions (Not Including Connectors)

PCI controllers .....	17.5 by 9.9 cm (6.9 by 3.9 in.)
PXI controllers .....	16 by 10 cm (6.3 by 3.9 in.)

### Motion I/O Connector

Both controllers .....	68-pin female VHDCI type
------------------------	--------------------------

## Digital I/O Connector

Both controllers ..... 68-pin female VHDCI type

## Environment

Operating temperature..... 0 to 55 °C

Storage temperature .....–20 to 70 °C

Relative humidity range .....10 to 90% (noncondensing)

---

## Cable Connector Descriptions

This appendix describes the connectors on the optional cables for your 7324/7314 controller. Figure B-1 shows the pin assignments for the 50-pin motion connector. This connector is available when you use the SH68-C68-S shielded cable assembly and the 68M-50F Step Bulkhead Cable Adapter with the 7324/7314 controllers. The 50-pin motion connector would be useful when you are connecting to a legacy ValueMotion, nuDrive, or UMI-4A motor drive.




**Note** On PXI controllers that precede revision D, the 50-pin motion connector is available when you use the SH68-68-S shielded cable assembly and the 68M-50F Step Bulkhead Cable Adapter.

Axis 1 Dir (CCW)	1	2	Axis 1 Step (CW)
Digital Ground	3	4	Axis 1 Encoder Phase A
Digital Ground	5	6	Axis 1 Encoder Phase B
Axis 1 Home Switch	7	8	Axis 1 Encoder Index
Trigger/Breakpoint 1	9	10	Axis 1 Forward Limit Switch
Axis 1 Inhibit	11	12	Axis 1 Reverse Limit Switch
Axis 2 Dir (CCW)	13	14	Axis 2 Step (CW)
Digital Ground	15	16	Axis 2 Encoder Phase A
Digital Ground	17	18	Axis 2 Encoder Phase B
Axis 2 Home Switch	19	20	Axis 2 Encoder Index
Trigger/Breakpoint 2	21	22	Axis 2 Forward Limit Switch
Axis 2 Inhibit	23	24	Axis 2 Reverse Limit Switch
Axis 3 Dir (CCW)	25	26	Axis 3 Step (CW)
Digital Ground	27	28	Axis 3 Encoder Phase A
Digital Ground	29	30	Axis 3 Encoder Phase B
Axis 3 Home Switch	31	32	Axis 3 Encoder Index
Trigger/Breakpoint 3	33	34	Axis 3 Forward Limit Switch
Axis 3 Inhibit	35	36	Axis 3 Reverse Limit Switch
Axis 4 Dir (CCW)	37	38	Axis 4 Step (CW)
Digital Ground	39	40	Axis 4 Encoder Phase A
Digital Ground	41	42	Axis 4 Encoder Phase B
Axis 4 Home Switch	43	44	Axis 4 Encoder Index
Trigger/Breakpoint 4	45	46	Axis 4 Forward Limit Switch
Axis 4 Inhibit	47	48	Axis 4 Reverse Limit Switch
Digital Ground	49	50	Host +5 V

**Figure B-1.** 50-Pin Stepper Connector Pin Assignment

# Differences on Older PXI Controllers

This appendix provides reference information for PXI 7324/7314 controllers labelled as revision C or earlier. *These specifications do not apply to new controllers.*

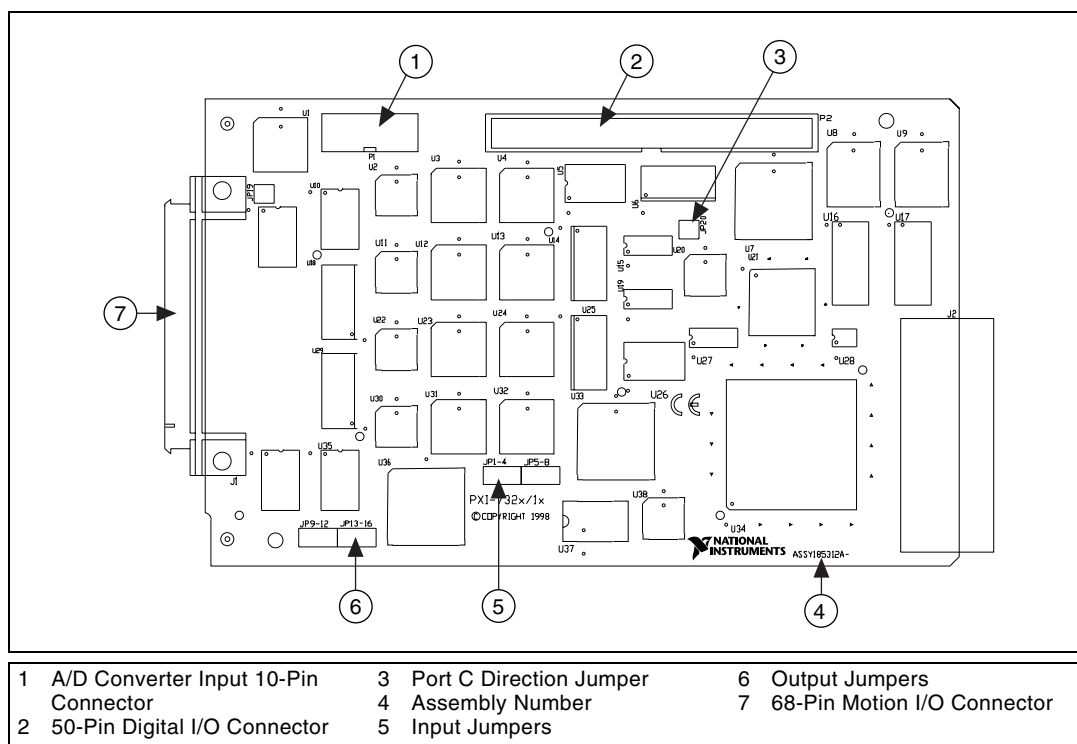

**Figure C-1.** PXI Controller Parts Locator Diagram for Revision C or Earlier

## Digital I/O Connector

The digital I/O on the PXI controllers is accessed from a 50-pin connector as shown in Figure C-2.

Digital I/O 24	1	2	Digital Ground
Digital I/O 23	3	4	Digital Ground
Digital I/O 22	5	6	Digital Ground
Digital I/O 21	7	8	Digital Ground
Digital I/O 20	9	10	Digital Ground
Digital I/O 19	11	12	Digital Ground
Digital I/O 18	13	14	Digital Ground
Digital I/O 17	15	16	Digital Ground
Digital I/O 16	17	18	Digital Ground
Digital I/O 15	19	20	Digital Ground
Digital I/O 14	21	22	Digital Ground
Digital I/O 13	23	24	Digital Ground
Digital I/O 12	25	26	Digital Ground
Digital I/O 11	27	28	Digital Ground
Digital I/O 10	29	30	Digital Ground
Digital I/O 9	31	32	Digital Ground
Digital I/O 8	33	34	Digital Ground
Digital I/O 7	35	36	Digital Ground
Digital I/O 6	37	38	Digital Ground
Digital I/O 5	39	40	Digital Ground
Digital I/O 4	41	42	Digital Ground
Digital I/O 3	43	44	Digital Ground
Digital I/O 2	45	46	Digital Ground
Digital I/O 1	47	48	Digital Ground
+5 V	49	50	Digital Ground

**Figure C-2.** 50-Pin Digital I/O Connector for Revision C or Earlier

# ADC Inputs

Older PXI controllers (revision C and earlier) include an additional four channels, all eight of which are available on an internal 10-pin connector as shown in Figure C-3.

Analog Input 1	1	2	Analog Input 2
Analog Input 3	3	4	Analog Input 4
Analog Input 5	5	6	Analog Input 6
Analog Input 7	7	8	Analog Input 8
Analog Reference (output)	9	10	Analog Input Ground

**Figure C-3.** External Pin Assignment for the ADC Connector (Revision C or Earlier)

# Physical Specifications

This section lists differing physical specifications on PXI version C or earlier.

## Motion I/O Connector

PXI controllers ..... 68-pin male SCSI-II type

## Digital I/O Connector

PXI controllers ..... 50-pin male box-header

---

# Technical Support Resources

## Web Support

---

National Instruments Web support is your first stop for help in solving installation, configuration, and application problems and questions. Online problem-solving and diagnostic resources include frequently asked questions, knowledge bases, product-specific troubleshooting wizards, manuals, drivers, software updates, and more. Web support is available through the Technical Support section of [ni.com](http://ni.com)

## NI Developer Zone

---

The NI Developer Zone at [ni.com/zone](http://ni.com/zone) is the essential resource for building measurement and automation systems. At the NI Developer Zone, you can easily access the latest example programs, system configurators, tutorials, technical news, as well as a community of developers ready to share their own techniques.

## Customer Education

---

National Instruments provides a number of alternatives to satisfy your training needs, from self-paced tutorials, videos, and interactive CDs to instructor-led hands-on courses at locations around the world. Visit the Customer Education section of [ni.com](http://ni.com) for online course schedules, syllabi, training centers, and class registration.

## System Integration

---

If you have time constraints, limited in-house technical resources, or other dilemmas, you may prefer to employ consulting or system integration services. You can rely on the expertise available through our worldwide network of Alliance Program members. To find out more about our Alliance system integration solutions, visit the System Integration section of [ni.com](http://ni.com)

## Worldwide Support

---

National Instruments has offices located around the world to help address your support needs. You can access our branch office Web sites from the Worldwide Offices section of [ni.com](http://ni.com). Branch office Web sites provide up-to-date contact information, support phone numbers, e-mail addresses, and current events.

If you have searched the technical support resources on our Web site and still cannot find the answers you need, contact your local office or National Instruments corporate. Phone numbers for our worldwide offices are listed at the front of this manual.

# Glossary

---

Prefix	Meanings	Value
μ-	micro-	$10^{-6}$
m-	milli-	$10^{-3}$
c-	centi-	$10^{-2}$
k-	kilo-	$10^3$
M-	mega-	$10^6$

## Numbers/Symbols

°	degrees
%	percent
±	plus or minus
+	positive of, or plus
–	negative of, or minus
/	per
Ω	ohm
+5 V	+5 VDC source signal

## A

A	amperes
absolute mode	treat the target position loaded as position relative to zero while making a move
absolute position	signal position relative to zero
active-high	a signal is active when its value goes high (1)
active-low	a signal is active when its value goes low (0)

A/D	analog-to-digital
address	character code that identifies a specific location (or series of locations) in memory
amplifier	the drive that delivers power to operate the motor in response to low level control signals. In general, the amplifier is designed to operate with a particular motor type—you cannot use a stepper drive to operate a DC brush motor, for instance
anticipation time breakpoint	used to pre-load a desired anticipation time relative to the end of a programmed motion trajectory—when the position corresponding to the desired anticipation time is reached, an external breakpoint signal transitions on a dedicated I/O port output line for the selected axis. The anticipation breakpoint function is similar to, and shares the same resources as, the position breakpoint function.
API	application programming interface
axis	unit that controls a motor or any similar device
axis <1..4> Dir (CCW)	stepper—axis 1 through 4 motor direction or counter-clockwise control
Axis <1..4> Encoder Phase A	closed-loop—axis 1 through 4 phase A encoder input
Axis <1..4> Encoder Phase B	closed-loop—axis 1 through 4 phase B encoder input
Axis <1..4> Forward Limit	axis 1 through 4 forward/clockwise limit switch
Axis <1..4> Home Switch	axis 1 through 4 home switch
Axis <1..4> $\overline{\text{Inhibit}}$	stepper—axis 1 through 4 drive inhibit
Axis <1..4> Reverse Limit	axis 1 through 4 reverse/counter-clockwise limit switch
Axis <1..4> Step (CW)	stepper—axis 1 through 4 motor step or clockwise control

**B**

b	bit—one binary digit, either 0 or 1
base address	memory address that serves as the starting address for programmable registers. All other addresses are located by adding to the base address.
binary	a number system with a base of 2
buffer	temporary storage for acquired or generated data (software)
bus	the group of conductors that interconnect individual circuitry in a computer. Typically, a bus is the expansion vehicle to which I/O or other devices are connected.
byte	eight related bits of data, an eight-bit binary number. Also used to denote the amount of memory required to store one byte of data.

**C**

CCW	counter-clockwise—implies direction of rotation of the motor
CL	closed-loop—a broadly applied term relating to any system where output is measured and compared to input. The output is then adjusted to reach the desired condition. In motion control this term applies to a system using an encoder or any feedback device.
common	reference signal for digital I/O
CPU	central processing unit
crosstalk	an unwanted signal on one channel due to an input on a different channel
CW	clockwise—implies direction of motor rotation

**D**

DC	direct current
dedicated	assigned to a particular function
DGND	digital ground signal

digital I/O port	a group of digital input/output signals
DIP	dual inline package
DLL	dynamic link library—provides the API for the controllers
drivers	software that controls a specific controller

## **E**

encoder	device that translates mechanical motion into electrical signals; used for monitoring position or velocity
encoder resolution	the number of encoder lines between consecutive encoder indexes (marker or Z-bit). If the encoder does not have an index output the encoder resolution can be referred to as lines per revolution.

## **F**

filtering	a type of signal conditioning that filters unwanted signals from the signal being measured
filter parameters	indicates the control loop parameter gains (PID gains) for a given axis
following error trip point	the difference between the instantaneous function trajectory position and the feedback position
freewheel	the condition of a motor when power is de-energized and the motor shaft is free to turn
full-step	full-step mode of a stepper motor—for a two phase motor this is done by energizing both windings or phases simultaneously

## **G**

Gnd	ground
GND	ground

## H

half-step	mode of a stepper motor—for a two phase motor this is done by alternately energizing two windings and then only one. In half step mode, alternate steps are strong and weak but there is significant improvement in low-speed smoothness over the full-step mode.
hex	hexadecimal
home switch (input)	a reference position in a motion control system derived from a mechanical datum or switch. Often designated as the zero position.
host computer	computer into which the motion controller is plugged

## I

ID	identification
in.	inches
index	marker between consecutive encoder revolutions
I/O	input/output—the transfer of data to and from a computer system involving communications channels, operator interface devices, and/or motion control interfaces
interlock	5 V bus voltage monitoring circuitry present on accessories
inverting	the polarity of a switch (limit switch, home switch, etc.) in <i>active</i> state. If these switches are active-low they are said to have inverting polarity.
IRQ	interrupt request

## K

k	kilo—the standard metric prefix for 1,000, or $10^3$ , used with units of measure such as volts, hertz, and meters
K	kilo—the prefix for 1,024, or $2^{10}$ , used with B in quantifying data or computer memory

## L

latching	a signal that maintains its value while in a given state, as opposed to a signal that momentarily pulses when entering or exiting a state
limit switch (input)	sensors that alert the control electronics that physical end of travel is being approached and that the motion should stop

## M

m	meters
microstep	mode of a stepper motor—subdividing the basic motor step by proportioning the current in the windings. In this way the step size is reduced and low speed smoothness is dramatically improved
modulo position	treat the target position as within the range of total quadrature counts per revolution for an axis

## N

noise	an undesirable electrical signal—noise comes from external sources such as the AC power line, motors, generators, transformers, fluorescent lights, soldering irons, CRT displays, computers, electrical storms, welders, radio transmitters, and internal sources such as semiconductors, resistors, and capacitors. Noise corrupts signals you are trying to send or receive.
noninverting	the polarity of a switch (limit switch, home switch, etc.) in <i>active</i> state. If these switches are active-high, they are said to have non-inverting polarity.

## O

OL	open-loop—refers to a motion control system where no external sensors (feedback devices) are used to provide position or velocity correction signals
----	--

## P

PID	proportional-integral-derivative control loop
port	(1) a communications connection on a computer or a remote controller (2) a digital port, consisting eight lines of digital input and/or output
position breakpoint	position breakpoint for an encoder can be set in absolute or relative quadrature counts. When the encoder reaches a position breakpoint, the associated breakpoint output immediately transitions.
power cycling	turning the host computer off and then back on, which resets the controller
prestore	trigger buffer function storage, which stores a series of functions in a buffer.
pull-in move	when stepper motors are run in closed-loop mode, the encoder feedback is used to verify the position of an axis when the motion ends. The motion controller then functions the axis to do a final move so that it is at the desired target position.
PWM	Pulse Width Modulation—a method of controlling the average current in a motors phase windings by varying the on-time (duty cycle) of transistor switches

## Q

quadrature counts	the encoder line resolution times four
-------------------	--

## R

RAM	random-access memory
relative breakpoint	sets the position breakpoint for an encoder in relative quadrature counts
relative mode	treat the target position loaded as position relative to current position while making a move
relative position	position relative to current position
ribbon cable	a flat cable in which the conductors are side by side

rotary axis                      an axis for which rotary counts are loaded. The axis moves to the target position by taking the shortest path, either forward or backwards, while remaining within the one revolution defined by the loaded rotary counts.

RPM                              revolutions per minute—units for velocity.

RPSPS or RPS/S              revolutions per second squared—units for acceleration and deceleration.

## **S**

s                                  seconds

stepper                         specifies an axis that controls a stepper motor

## **T**

toggle                         changing state from high to low, back to high, and so on

torque                         force tending to produce rotation

trapezoidal profile           a typical motion trajectory, where a motor accelerates up to the programmed velocity using the programmed acceleration, traverses at the programmed velocity, then decelerates at the programmed acceleration to the target position

trigger                         any event that causes or starts some form of data capture

TTL                             transistor-transistor logic

## **V**

V                                volts

V<sub>CC</sub>                            positive voltage supply

velocity mode                move the axis continuously at the specified velocity

**W**

watchdog                      a timer task that shuts down (resets) the controller if any serious error occurs

word                          the standard number of bits that a processor or memory manipulates at one time, typically 8-, 16-, or 32-bit

**Z**

Z-bit                          marker between consecutive encoder revolutions

# Index

---

## Numbers

- +5 V signal
  - bus power signal, 4-4
  - description (table), 4-3
- 24-bit digital I/O connector. *See* digital I/O connector.
- 7324/7314 controllers. *See also* hardware overview.
  - motion signal and motion I/O connections, 1-3
  - National Instruments application software, 1-2
  - optional equipment, 1-3
  - overview, 1-1
  - requirements for getting started, 1-1
  - software programming choices, 1-2

## A

- acceleration value loading, 3-5
- ADC inputs
  - ADC overview, 4-15
  - external pin assignments (figure), 4-15
- Analog Input Ground (table), 4-3
- analog input specifications, A-2
- Analog Input<1..4> signal (table), 4-3
- Analog Reference (output) signal (table), 4-3
- Axis<1..4> Dir (CCW) signal (table), 4-3
- Axis<1..4> Encoder Index signal (table), 4-3
- Axis<1..4> Encoder Phase A signal (table), 4-3
- Axis<1..4> Encoder Phase B signal (table), 4-3
- Axis<1..4> Forward Limit Switch signal (table), 4-3
- Axis<1..4> Home Switch signal (table), 4-3
- Axis<1..4> Inhibit signal (table), 4-3

- Axis<1..4> Reverse Limit Switch signal (table), 4-3
- Axis<1..4> Step (CW) signal (table), 4-3

## B

- Breakpoint<1..4> signal (table), 4-3. *See also* trigger, breakpoint, and inhibit signals.
- BridgeVIEW software, 1-2
- bus power signal, 4-4

## C

- configuration, 2-1
- connectors
  - digital I/O connector, 4-10 to 4-14
    - 50-pin connector pin assignments (figure), 4-12
    - 68-pin connector pin assignments, 4-11
    - port configuration, 4-12 to 4-14
    - specifications, A-2
  - external connector
    - preventing noise or crosstalk (caution), 4-3
    - wiring recommendations, 4-3 to 4-4
  - motion I/O connector pin assignments (figure), 4-2
  - optional cable connector pin assignments (figure), B-1
  - signal descriptions (table), 4-3

## D

- diagnostic resources, online, C-1
- Digital Ground (table), 4-3

digital I/O connector, 4-10 to 4-14  
     50-pin connector pin assignments  
         (figure), 4-12  
     68-pin connector pin assignments, 4-11  
     port configuration, 4-12 to 4-14  
     specifications, A-2

documentation  
     about this manual, *xi*  
     conventions used in manual, *xi-xii*  
     related documentation, *xii*

**E**

encoder connections (7324 controllers only),  
     4-8 to 4-10  
     determining quadrature counts (note), 4-9  
     encoder index signal, 4-9  
     encoder signal input circuit, 4-10  
     encoder signals, 4-9  
     excessive input voltages (caution), 4-10  
     quadrature encoder phasing diagram, 4-8  
     wiring concerns, 4-9

environment specifications, A-3

equipment, optional, 1-3

event-based motion profiling, 3-3

external connector  
     preventing noise or crosstalk  
         (caution), 4-3  
     wiring recommendations, 4-3 to 4-4

## F

functional modes, 3-2 to 3-3  
     event-based motion profiling, 3-3  
     trapezoidal profile position control,  
         3-2 to 3-3  
     velocity control, 3-3  
     velocity profiling, 3-3

## H

hardware installation, 2-2

hardware overview, 3-1 to 3-5  
     functional modes, 3-2 to 3-3  
         event-based motion profiling, 3-3  
         trapezoidal profile position control,  
             3-2 to 3-3  
         velocity control, 3-3  
         velocity profiling, 3-3  
     parts locator diagrams  
         PCI controller, 3-1  
         PXI controller, 3-2  
     trajectory parameters, 3-4 to 3-5  
         acceleration value loading, 3-5  
         position value loading, 3-4  
         velocity value loading, 3-4 to 3-5

home switches. *See* limit and home switches.

Host +5 V signal (table), 4-3

## I

inhibit signals. *See* trigger, breakpoint, and  
     inhibit signals.

installation  
     hardware, 2-2  
     software, 2-1

I/O connectors. *See* connectors.

I/O port hardware circuit, 4-6 to 4-7

## J

jumpers  
     configuration for trigger, breakpoint, and  
         inhibit signals, 4-5  
     jumper pin I/O port correspondence  
         (table), 4-5

**L**

LabVIEW software, 1-2  
 LabWindows/CVI software, 1-2  
 limit and home switches, 4-7 to 4-8  
     excessive input voltages (caution), 4-8  
     input circuit, 4-8  
     wiring concerns (caution), 4-7

**M**

manual. *See* documentation.  
 motion digital I/O specifications, A-1  
     input circuits, A-1  
     output circuits, A-1

**N**

National Instruments application software, 1-2  
 National Instruments Web support, C-1 to C-2

**O**

online problem-solving and diagnostic  
     resources, C-1  
 optional cable connector pin assignments  
     (figure), B-1  
 optional equipment, 1-3

**P**

parts locator diagrams  
     PCI controller, 3-1  
     PXI controller, 3-2  
 physical specifications, A-2  
 ports. *See also* digital I/O connector.  
     Port A, 4-13  
     Port B, 4-13 to 4-14  
     Port C direction setting, 4-14  
 position value loading, 3-4  
 power requirement specifications, A-2

problem-solving and diagnostic resources,  
     online, C-1  
 profiling  
     event-based motion profiling, 3-3  
     velocity profiling, 3-3

**R**

requirements for getting started, 1-1

**S**

signal connections, 4-1 to 4-15  
     ADC inputs, 4-15  
     bus power signal, 4-4  
     digital I/O connector, 4-10 to 4-14  
         50-pin connector pin assignments  
             (figure), 4-12  
         68-pin connector pin  
             assignments, 4-11  
         port configuration, 4-12 to 4-14  
     encoder connections (7324 controllers  
         only), 4-8 to 4-10  
         determining quadrature counts  
             (note), 4-9  
         encoder index signal, 4-9  
         encoder signal input circuit, 4-10  
         encoder signals, 4-9  
         excessive input voltages  
             (caution), 4-10  
         quadrature encoder phasing  
             diagram, 4-8  
         wiring concerns, 4-9  
     external connector wiring  
         recommendations, 4-3 to 4-4  
     jumper configuration, 4-5  
     limit and home switches, 4-7 to 4-8  
         input circuit, 4-8  
         wiring concerns, 4-7  
     motion I/O connector pin assignments  
         (figure), 4-2

- overview, 1-3
- signal descriptions (table), 4-3
- trigger, breakpoint, and inhibit signals, 4-4 to 4-5
  - input signals, 4-4
  - I/O port hardware circuit, 4-6 to 4-7
  - jumper configuration, 4-5
  - output signals, 4-6
  - wiring concerns, 4-5
- software
  - installation, 2-1
  - National Instruments software, 1-2
  - programming choices, 1-2
- software-related resources, C-2
- specifications, A-1 to A-3
  - 24-bit digital I/O, A-2
  - analog input, A-2
  - digital I/O connector, A-3
  - environment, A-3
  - motion digital I/O
    - input circuits, A-1
    - output circuits, A-1
  - physical, A-2
  - power requirements, A-2
  - stepper performance, A-1
- stepper performance specifications, A-1

## T

- technical support resources, C-1 to C-2
- trajectory parameters, 3-4 to 3-5
  - acceleration value loading, 3-5
  - position value loading, 3-4
  - velocity value loading, 3-4 to 3-5
- trapezoidal profile position control, 3-2 to 3-3
- trigger, breakpoint, and inhibit signals, 4-4 to 4-5
  - excessive input voltages (caution), 4-7
  - input signals, 4-4

- I/O port hardware circuit, 4-6 to 4-7
  - inhibit hardware circuitry (figure), 4-6
  - trigger and breakpoint hardware circuitry (figure), 4-6
- jumper configuration, 4-5
- motion digital I/O specifications, A-1
- output signals, 4-4
- wiring concerns, 4-5
- Trigger<1..4> signal (table), 4-3

## V

- ValueMotion software, 1-2
- velocity control, 3-3
- velocity profiling, 3-3
- velocity value loading, 3-4 to 3-5

## W

- Web support from National Instruments, C-1 to C-2
  - online problem-solving and diagnostic resources, C-1
  - software-related resources, C-2
- wiring recommendations for external connector, 4-3 to 4-4
- Worldwide technical support, C-2