#### **COMPREHENSIVE SERVICES**

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

#### **SELL YOUR SURPLUS**

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

Sell For Cash Get Credit Receive a Trade-In Deal

## **OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP**

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.



**Bridging the gap** between the manufacturer and your legacy test system.

0

1-800-915-6216



www.apexwaves.com

sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote



SCXI-1180



# SCXI-1348 DIO-32F Cable Assembly Installation Guide

Part Number 320620-01

This guide describes how to install the SCXI-1348 cable assembly between an SCXI module and an AT-DIO-32F, MC-DIO-32F, or NB-DIO-32F data acquisition board. In addition to the SCXI-1348 kit contents, you will also need an SCXI chassis, an SCXI module, a computer, a DIO-32F data acquisition board, and a small flathead screwdriver.

### Introduction

With the SCXI-1348 cable assembly, you can connect a digital I/O SCXI module to your DIO-32F data acquisition board. The DIO-32F works with the SCXI-1160, SCXI-1161, SCXI-1162, and SCXI-1163 modules.

If you have a newly released module or a data acquisition board other than a DIO-32F, contact National Instruments for information on your cable needs.

The SCXI-1348 cable assembly consists of an adapter board and an NB4 50-conductor shielded ribbon cable that connects the adapter board to a DIO-32F data acquisition board. The adapter board converts the signals from the DIO-32F I/O connector to the pinout that a digital SCXI module rear signal connector uses. To extend the unconverted signals of the DIO-32F to another module or to an SCXI-1180 feedthrough panel, you can use the male breakout connector that is on the center of the adapter board.

# What Your Kit Should Contain

The contents of the SCXI-1348 cable assembly kit are as follows:

Kit Name and Part Number	Component	Component Part Number
SCXI-1348 Cable Assembly (776574-48)	Cable adapter Two small screws 1 m NB4 shielded 50-pin ribbon cable SCXI-1348 DIO-32F Cable Assembly Installation Guide	182252-01 742413-01 180554-10 320620-01

If your kit is missing any of the components, contact National Instruments.

### **Installation Procedure**

Figure 1 illustrates the components of your SCXI system.

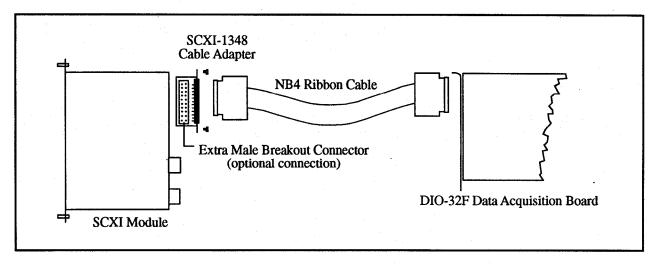


Figure 1. Connecting the SCXI-1348 to Your DIO-32F Data Acquisition Board and SCXI Module

Perform the following steps to install the SCXI-1348 cable adapter:

- 1. Turn off the power to your computer and the SCXI chassis.
- 2. Install your SCXI module in the SCXI chassis, following the instructions in your module user manual.
- 3. Plug the front connector of the SCXI-1348 into the rear signal connector of the SCXI module. A corner of the adapter board will enter the upper board guide of the chassis.
- 4. Secure the SCXI-1348 adapter board by screwing the two screws through the rear panel of the adapter board and into the threaded strips in the rear of the SCXI chassis.
- 5. Connect one end of the 50-pin shielded ribbon cable to the adapter board rear connector.
- 6. Install your data acquisition board in a slot in your computer, following the instructions in your data acquisition board user manual.
- 7. Connect the loose end of the shielded ribbon cable to the I/O connector on the data acquisition board as shown in Figure 2.

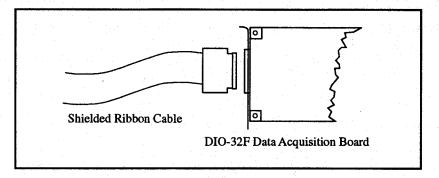


Figure 2. Cable to I/O Connector Connection

The finished installation should look like Figure 3.

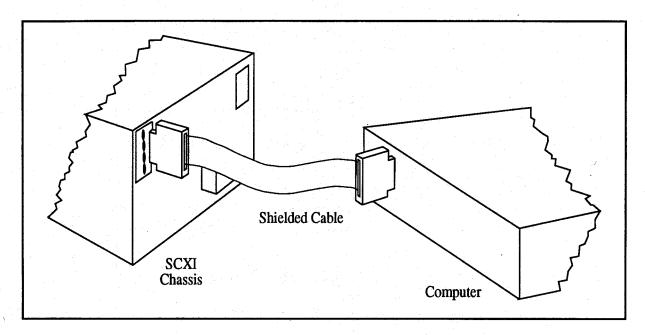


Figure 3. Installed Cable

The following table lists the way that the SCXI-1348 translates pins from a DIO-32F board to the SCXI module.

**SCXI-1348** Pin Translations

DIO-32F Rear	DIO-32F Signal	Module
Connector Pin	Name	Connector Pin
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17, 19* 21, 23* 25, 26* 28, 30* 32, 34* 18 20 22 24 27 29 31 33 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50	DIOD1 DIOD4 DIOD3 DIOD0 DIOD6 DIOD7 DIOD2 DIOD5 DIOC5 DIOC7 DIOC3 DIOC1 DIOC2 DIOC6 DIOC6 DIOC6 DIOC6 DIOGND DIGGND DIGGND DIGGND DIGGND DIGGND ACK2 IN2 OUT2 REQ2 ACK1 IN1 OUT1 REQ1 DIOA4 DIOA6 DIOA6 DIOA6 DIOA0 DIOA2 DIOA1 DIOA3 DIOA7 DIOA5 DIOA5 DIOB5 DIOB5 DIOB5 DIOB7 DIOB6 DIOB0 DIOB3 DIOB4 DIOB1	46 40 42 48 36 34 44 38 5 1 9 13 11 15 3 7 2, 4* 6, 8* 10, 12* 14, 16* 50* 26 28 30 32 18 20 22 24 39 35 47 43 45 41 33 37 21 27 17 19 31 25 23 29

<sup>\*</sup>All DIG GND pins are connected to each other on the SCXI-1348 adapter board.