

COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

 Sell For Cash  Get Credit  Receive a Trade-In Deal

OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock **New**, **New Surplus**, **Refurbished**, and **Reconditioned** NI Hardware.



Bridging the gap between the manufacturer and your legacy test system.

 1-800-915-6216

 www.apexwaves.com

 sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote

 **CLICK HERE**

FP-AI-110



NATIONAL INSTRUMENTS™

FieldPoint™

FP-1600 FieldPoint Quick Start Guide

What You Need to Get Set Up


- Network Module
- Mounting Hardware (DIN rail or panel mount accessory)
- Terminal Base(s)
- I/O Module(s)
- Power Supply
- FieldPoint Software CD
- Accessories: Ethernet cable, screwdriver



Install the Network Module


DIN Rail Mount

A. Unlock rail clip.

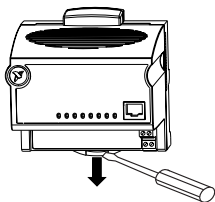

Panel Mount

A. Unlock rail clip.

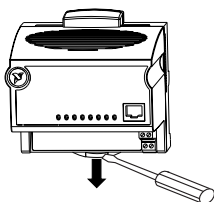


DIN Rail Mount




NOTE: Do not use spliced DIN rails. Use only a single DIN rail.

- B. Hook lip on back of module onto top of DIN rail, press down, and snap into place.

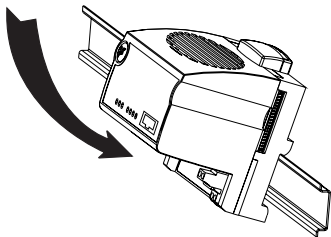


- C. Slide module into position and lock rail clip.

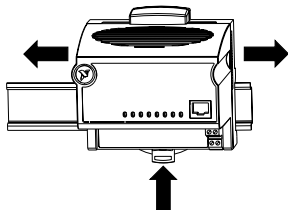


Panel Mount


- B. Snap panel mount accessory (which you can order separately) onto module.

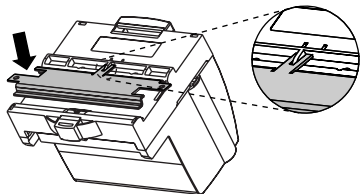

- C. Lock rail clip.

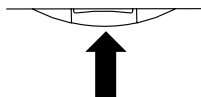

- D. Use template that came with your accessory to drill pilot holes and mount module onto panel using accessory.

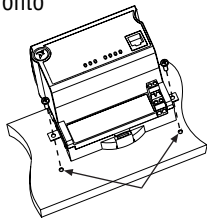


2 Install the Terminal Base(s)




CAUTION: Terminal bases must be connected to the network module before applying power to the module. Do *not* connect or disconnect terminal bases while power is applied to the network module.

DIN Rail Mount

- A. Unlock rail clip.

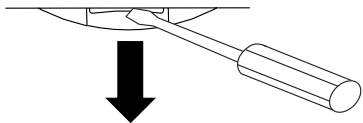


- B. Press base onto rail.

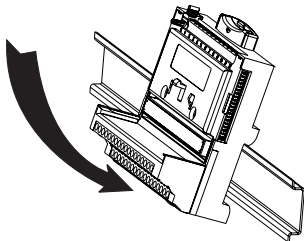


Panel Mount

- A. Use template that came with your accessory to drill pilot holes.
- B. Connect terminal base to network module connector, being careful not to bend any connector pins.
- C. Fasten terminal base to panel.

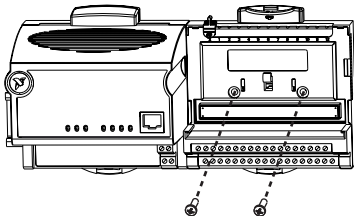


DIN Rail Mount

- C. Slide into position and lock the rail clip. Be careful not to bend any pins.

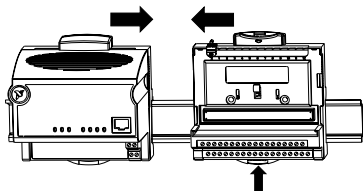

- D. Repeat for each terminal base, up to nine for each network module in most cases. You can use one or two extender cables (which you can order separately) if your FieldPoint bank is too long for your available space.


- E. Place protective cover on last base, and install rail locks at each end.

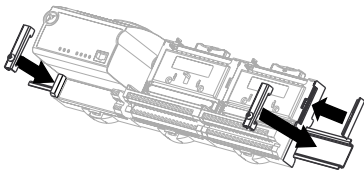

Panel Mount

- D. Repeat for each terminal base, up to nine for each network module in most cases. You can use one or two extender cables (which you can order separately) if your FieldPoint bank is too long for your available space.

- E. Place protective cover on last base.

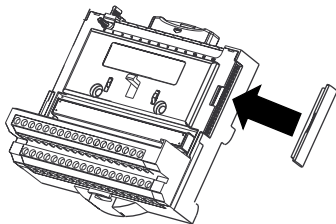


3 *Install the I/O Module(s)*

It does not matter where you install each I/O module, except for these types of situations:

- If you plan to cascade power between any I/O modules using the V and C terminals, those modules should be grouped together.
- For more accurate measurements, you might want to locate any thermocouple modules away from heat sources, including network modules or relay modules, unless you are mounting them on an FP-TB-3.


A. Align slots on module with guide rails on base, and press onto base until terminal base's latch locks the module in place.

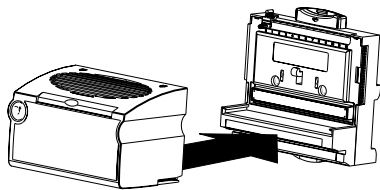


B. Repeat for each I/O module.

4 *Connect the Network Cables*

Connect the FP-1600 to an Ethernet network by connecting the RJ-45 Ethernet port of the FP-1600 to an Ethernet hub using a standard Category 5 Ethernet cable.

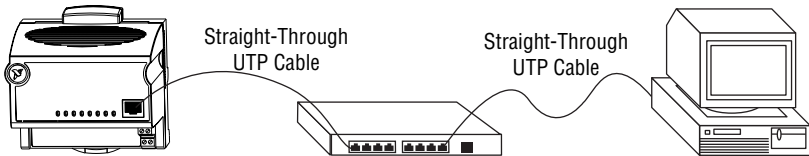

Optionally, you can connect an FP-1600 directly to a computer using an Ethernet crossover cable.

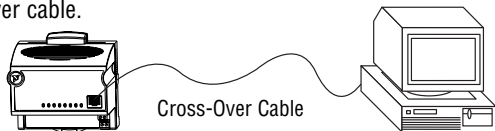

Do not use a cable longer than 100 m. If you are using a 100 Mbps Ethernet, National Instruments recommends using a Category 5 shielded twisted-pair Ethernet. If you need to build your own cable, refer to the FP-1600 User Manual for cabling details.

5


Wire Power to Your FieldPoint System

- A. Connect 11-30 VDC power supply leads to V and C terminals of the network module. If you want to verify that your power supply is sufficient for your modules and devices, refer to your FieldPoint hardware documents for instructions on calculating power requirements.

- B. Connect power to the FieldPoint modules that require external power for outputs (output modules, counter modules, PWM, PG, QUAD). Refer to the I/O module's operating instructions for power requirement details. You can power a module by connecting the V and C inputs on its terminal base to a separate power supply, connecting the V and C outputs of a neighboring terminal base or network module, or using a combination of both methods. If you want to power field I/O devices from a terminal base, supply power to the terminal base, and then connect the terminal base V and C output terminals to the field device.



CAUTION: Cascading power from neighboring bases or network modules defeats isolation between cascaded modules.

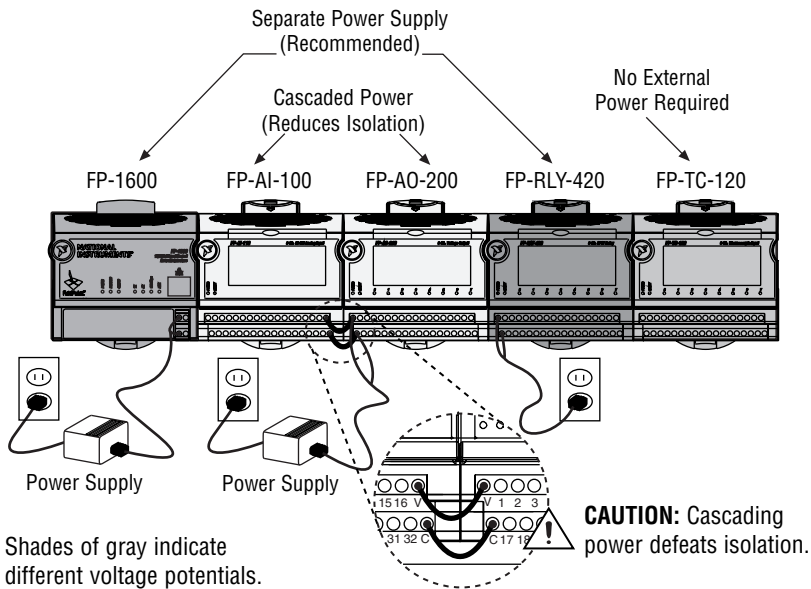

6

Connect to Field Devices

Use each I/O module's operating instructions, or the diagram under its removable label, to help you connect your field devices.

FP-AI-110
8 Channel, 16-Bit Analog Input Module

Highlights



- Eight channel voltage or current input channels
- 12 input ranges: ±0.5V, ±1.5V, ±3V, ±5V, ±10V, ±15V, ±100mV, ±100μV, ±100nV, ±100pV, ±100mV, ±100μV, ±100nV, ±100pV
- Three filter settings: 0.1Hz, 0.5Hz, and 100Hz
- 16-bit resolution
- 1000V input in voltage mode
- Shunt overload for 200V AC in shunt mode
- -80V to +70V operation

Overview

The FP-AI-110 is a 16-bit resolution analog input module with eight analog input channels. The FP-AI-110 can be used with voltage or current input signals. The FP-AI-110 is ideal for both frequency signals and low frequency signals. Filter settings are 0.1 Hz, 0.5 Hz, and 100 Hz. Filter settings, safety isolation, and full 11 span range across the selected input measurement are available from all channels.

These operating instructions describe the model label, features, and characteristics of the FP-AI-110. For details on configuration and accuracy, the FP-AI-110 user manual, refer to the user manual for the FP-AI-110. For details on the module, refer to the FP-AI-110.

Author: [unreadable] Date: [unreadable]

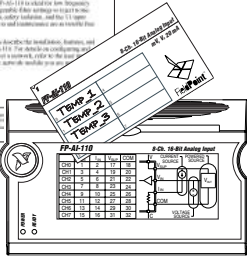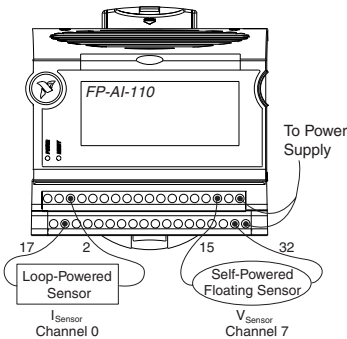

NOTE: Either the self-powered sensor or power supply should be floating (not tied to earth ground).


7

Power Up Your FieldPoint System



CAUTION: Terminal bases must be connected to the FP-1600 before power is applied to the FP-1600.

Plug in each power supply to your FieldPoint bank. You should see all except the **STATUS** and **PROCESS** LEDs flash once, and the **POWER** LED come on and stay on. After a few seconds, the **POWER** and **READY** LEDs should be lit on each I/O module. If this is not the case, refer to your FP-1600 user manual for troubleshooting instructions.

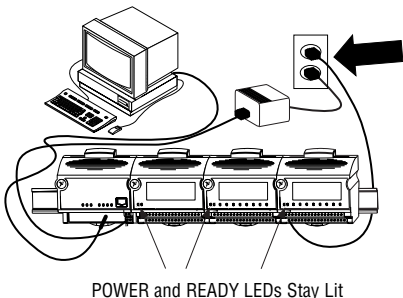


The **READY** LEDs will not light until an IP address is assigned. Likewise, the **STATUS** LED will stay lit until an IP address is assigned.

After the hardware is installed, you should verify communication, configure the modules, configure your power-up states and watchdog settings. If you are using National Instruments FieldPoint software for these tasks, continue to the following section.

8

Install the FieldPoint Software

- A. Close all other applications. If you plan to install National Instruments development software such as Lookout, LabVIEW, or Measurement Studio, install them before you install the FieldPoint software.

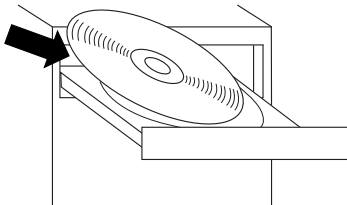


- B. Insert the FieldPoint software CD and follow the onscreen instructions.


9

Verify the Installation


- A. Select **Start»Programs»National Instruments FieldPoint»FieldPoint Explorer**.
- B. Right-click on the FieldPoint icon and select **Add a comm resource to this server**.

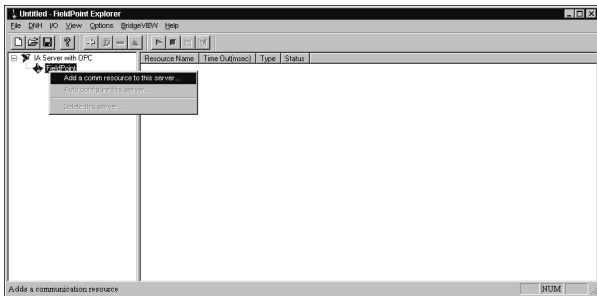

- C. In the Comm Resource Configuration dialog box, select **Ethernet** as the **Type**.

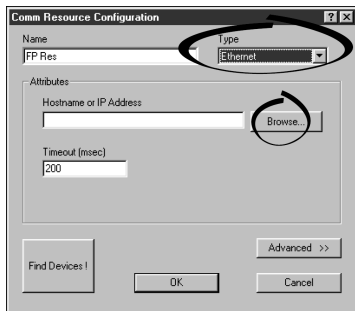


- D. Click **Browse**, select the FP-1600, and click the **Device Properties** button.

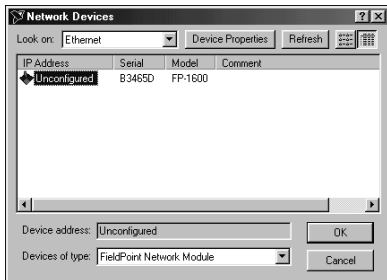

E. In the FP-1600 Properties box, enter values for the **IP address**, **Subnet mask**, and **Time server IP**. You might also want to enter a comment to help you identify the FP-1600 module.

- **IP address** is the address of the FP-1600 on the network.
- **Subnet mask** is the mask that is applied to the IP address that the device uses to find other devices on the Ethernet network (255.255.255.0 is the most common).
- **Time server IP** is the address of the host computer that the FP-1600 will synchronize its clock to. The computer must have the Lookout Time Synch service (installed with Lookout 4.x or FieldPoint 2.x).

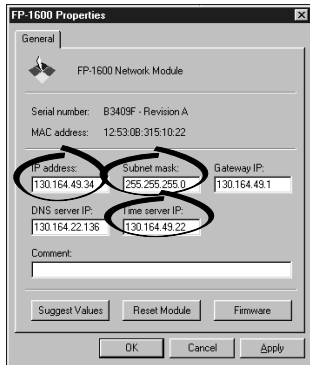


F. Click on **Apply**, then **OK** twice to return to the **Comm Resource Configuration** dialog box.



G. Click on **Find Devices**.




H. Expand the +FP Res item on the left side of the Explorer window to see the devices found on the network.

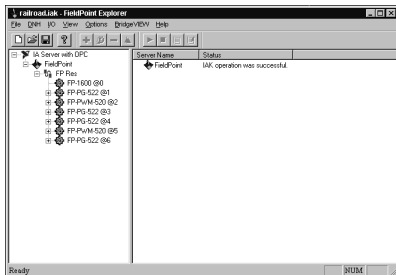If your modules are not listed, check the cable and connections and make sure the modules are all powered on. If you still have problems, refer to your FP-1600 user manual for troubleshooting information.



- I. Select an input module and click on the start monitoring button  to view live data.
- J. Select an output channel and click on the write button  to change outputs.
- K. Select **File»Save**.

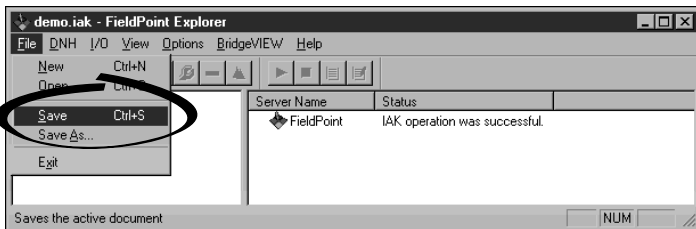

10 Configure I/O Modules

- A. Right-click on the device name in FieldPoint Explorer and select **Edit this Device** from the pop-up menu.
- B. Click on the **Channel Configuration** button to bring up the **Channel Configuration** dialog box.
- C. Select the type of channel to show, then select the channel(s) that you want to change. To select more than one channel, uncheck the **One channel at a time** box.

Channel Configuration

Channels

Type 1: Analog input

Channel 0 Channel 1 Channel 2 Channel 3 Channel 4 Channel 5 Channel 6 Channel 7 Channel 8 Channel 9 Channel 10 Channel 11 Channel 12 Channel 13 Channel 14 Channel 15

All

One channel at a time

Data Configuration

Range: -0.02 to 0.08 Volts

Watchdog Value: Enable

Powerup Output Value:

Channel Attributes

Attribute: Thermocouple type Value: J

Create Item

Channel Commands

Command: None Text:


Create Item Send

OK Cancel Apply



NOTE: Configuration options are module-dependent. The options listed here might not be available for your particular module. Refer to your I/O module operating instructions for details on configuration options.

- D. Set the range and output values of the selected channel(s).
- E. Set the attributes for the selected channel(s) by selecting the attribute and entering the desired value.
- F. Send commands to the selected channel(s) by choosing a command and value and clicking on **Send**.
- G. Repeat this procedure for each channel you want to configure.
- H. Click on the **OK** button when you are finished, or click on the **Apply** button to save the changes and continue to configure channels. When you click on **OK** or **Apply**, the changes are immediately sent to the device.
- I. Select **File»Save** when you are done.

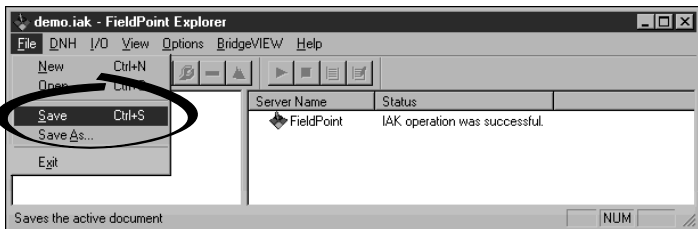

11 *Where to Go from Here*

After you get your hardware up and running, you might want to implement features such as power-up defaults or network watchdog settings. Refer to your FP-1600 user manual or online help for information about features, configuration, application development, and troubleshooting.

FP-1600 Specifications

Network interface	10BaseT and 100BaseTX Ethernet
Compatibility	IEEE 802.3
Communications rate	10 Mbps, 100 Mbps, autonegotiated
Cabling distance	100 m
Power supply range	11 to 30 VDC
Power consumption	7 W + 1.15 Σ * (I/O module power requirements)
Maximum terminal bases per bank	9
Maximum number of banks	determined by network topology
Operating temperature	-20 to +55 °C
Storage temperature	-55 to +85 °C
Relative humidity	5% to 90% non-condensing
Weight	280 g (9.9 oz.)

Compliance

Electrical safety	designed to meet IEC 1010
EMI emissions/immunity	CISPR 11

CE Mark Compliance



This product meets applicable EU directive(s) as follows:

EMC directive

Immunity	EN 50082-1:1994
Emissions	EN 55011:1991 Group I Class A at 10 meters

Mechanical Dimensions

Dimensions are given in inches [millimeters].

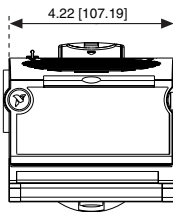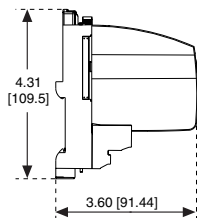



ni.com/support

ni.com/ask

United States 512 795-8248

Australia 03 9879 5166, Austria 0662 45 79 90 0, Belgium 02 757 00 20,

Brazil 011 284 5011, Canada (Calgary) 403 274 9391,

Canada (Ontario) 905 785 0085, Canada (Québec) 514 694 8521,

China 0755 3904939, Denmark 45 76 26 00, Finland 09 725 725 11,

France 01 48 14 24 24, Germany 089 741 31 30, Greece 30 1 42 96 427,

Hong Kong 2645 3186, India 91805275406, Israel 03 6120092, Italy 02 413091,

Japan 03 5472 2970, Korea 02 596 7456, Mexico (D.F.) 5 280 7625,

Mexico (Monterrey) 8 357 7695, Netherlands 0348 433466, Norway 32 27 73 00,

Singapore 2265886, Spain (Barcelona) 93 582 0251, Spain (Madrid) 91 640

0085, Sweden 08 587 895 00, Switzerland 056 200 51 51, Taiwan 02 2377 1200,

United Kingdom 01635 523545

© Copyright 1999, 2000 National Instruments Corporation.

All rights reserved. CVI™, FieldPoint™, LabVIEW™, Lookout™, Measurement Studio™, and ni.com™ are trademarks of National Instruments Corporation. Product and company names mentioned herein are trademarks or trade names of their respective companies.



322796A-01

Oct00