

## COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

## SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

 Sell For Cash    Get Credit    Receive a Trade-In Deal

## OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock **New**, **New Surplus**, **Refurbished**, and **Reconditioned** NI Hardware.



*Bridging the gap between the manufacturer and your legacy test system.*

 1-800-915-6216

 [www.apexwaves.com](http://www.apexwaves.com)

 [sales@apexwaves.com](mailto:sales@apexwaves.com)

All trademarks, brands, and brand names are the property of their respective owners.

**Request a Quote**

 **CLICK HERE**

**SCXI-1121**

This guide describes how to connect a multichassis SCXI system using the SCXI-1350 multichassis adapter. In addition to the SCXI-1350 kits, you will need SCXI chassis, SCXI modules, a computer, a data acquisition board, cables, and a small flathead screwdriver.

## Introduction

With the SCXI-1350 multichassis adapter and ribbon cables, you can connect a multichassis SCXI system to your data acquisition board. The following table shows which SCXI modules and data acquisition boards can be connected with the SCXI-1350 multichassis adapter.

| Module    | Data Aquisition Board |            |              |            |              |           |           |           |           |           |            |           |           |
|-----------|-----------------------|------------|--------------|------------|--------------|-----------|-----------|-----------|-----------|-----------|------------|-----------|-----------|
|           | AT-MIO-16             | AT-MIO-16D | AT-MIO-16F-5 | AT-MIO-16X | AT-MIO-64F-5 | MC-DIO-24 | MC-MIO-16 | NB-DIO-24 | NB-DIO-96 | NB-MIO-16 | NB-MIO-16X | PC-DIO-24 | PC-DIO-96 |
| SCXI-1100 | ✓                     | ✓          | ✓            | ✓          | ✓            |           | ✓         |           |           | ✓         | ✓          |           |           |
| SCXI-1120 | ✓                     | ✓          | ✓            | ✓          | ✓            |           | ✓         |           |           | ✓         | ✓          |           |           |
| SCXI-1121 | ✓                     | ✓          | ✓            | ✓          | ✓            |           | ✓         |           |           | ✓         | ✓          |           |           |
| SCXI-1140 | ✓                     | ✓          | ✓            | ✓          | ✓            |           | ✓         |           |           | ✓         | ✓          |           |           |
| SCXI-1160 | ✓                     | ✓          | ✓            | ✓          | ✓            | ✓         | ✓         | ✓         | ✓         | ✓         | ✓          | ✓         | ✓         |
| SCXI-1161 | ✓                     | ✓          | ✓            | ✓          | ✓            | ✓         | ✓         | ✓         | ✓         | ✓         | ✓          | ✓         | ✓         |
| SCXI-1162 | ✓                     | ✓          | ✓            | ✓          | ✓            | ✓         | ✓         | ✓         | ✓         | ✓         | ✓          | ✓         | ✓         |
| SCXI-1163 | ✓                     | ✓          | ✓            | ✓          | ✓            | ✓         | ✓         | ✓         | ✓         | ✓         | ✓          | ✓         | ✓         |

You can connect the SCXI-1181 breadboard module and the SCXI-1180 feedthrough panel to any data acquisition board with a 50-pin or 100-pin ribbon cable.

The SCXI-1350 multichassis adapter consists of a male rear connector, a female module connector, and a male chassis extender connector. You use a ribbon cable to connect the rear connector to the data acquisition board or a preceding chassis. The module connector plugs into the rear signal connector of an SCXI module. Another ribbon cable connects the chassis extender connector to the multichassis adapter in the next chassis.

## What Your Kit Should Contain

The contents of the SCXI-1350 multichassis adapter kit are as follows:

| Kit Name and Part Number | Component  | Part Number |
|--------------------------|--|-------------|
| SCXI-1350 (776575-50)    | Multichassis adapter                               | 181750-01   |
|                          | Two small screws                                   | 742413-01   |
|                          | <i>SCXI-1350 Cable Assembly Installation Guide</i> | 320615-01   |


If your kit is missing any of the components, contact National Instruments.

## Installation Procedure

To cable a multichassis SCXI system to a data acquisition board, you need a 0.5 m NB1 ribbon cable between each SCXI chassis, and a 0.5 m or 1 m ribbon cable to connect the data acquisition board to the first chassis. The following table shows which cable you can use with which data acquisition board:

| Data Acquisition Board | Cable |
|------------------------|-------|
| AT-MIO-16              | NB1   |
| AT-MIO-16D             | NB5   |
| AT-MIO-16F-5           | NB1   |
| AT-MIO-16X             | NB1   |
| AT-MIO-64F-5           | NB5   |
| MC-DIO-24              | NB1   |
| MC-MIO-16              | NB1   |
| NB-DIO-24              | NB1   |
| NB-DIO-96              | NB6   |
| NB-MIO-16              | NB1   |
| NB-MIO-16X             | NB1   |
| PC-DIO-24              | NB1   |
| PC-DIO-96              | NB5   |

For example, to connect a three-chassis system with an AT-MIO-16 data acquisition board, you need three NB1 cables and three SCXI-1350 multichassis adapters. The finished installation of this system would look like the following figure.

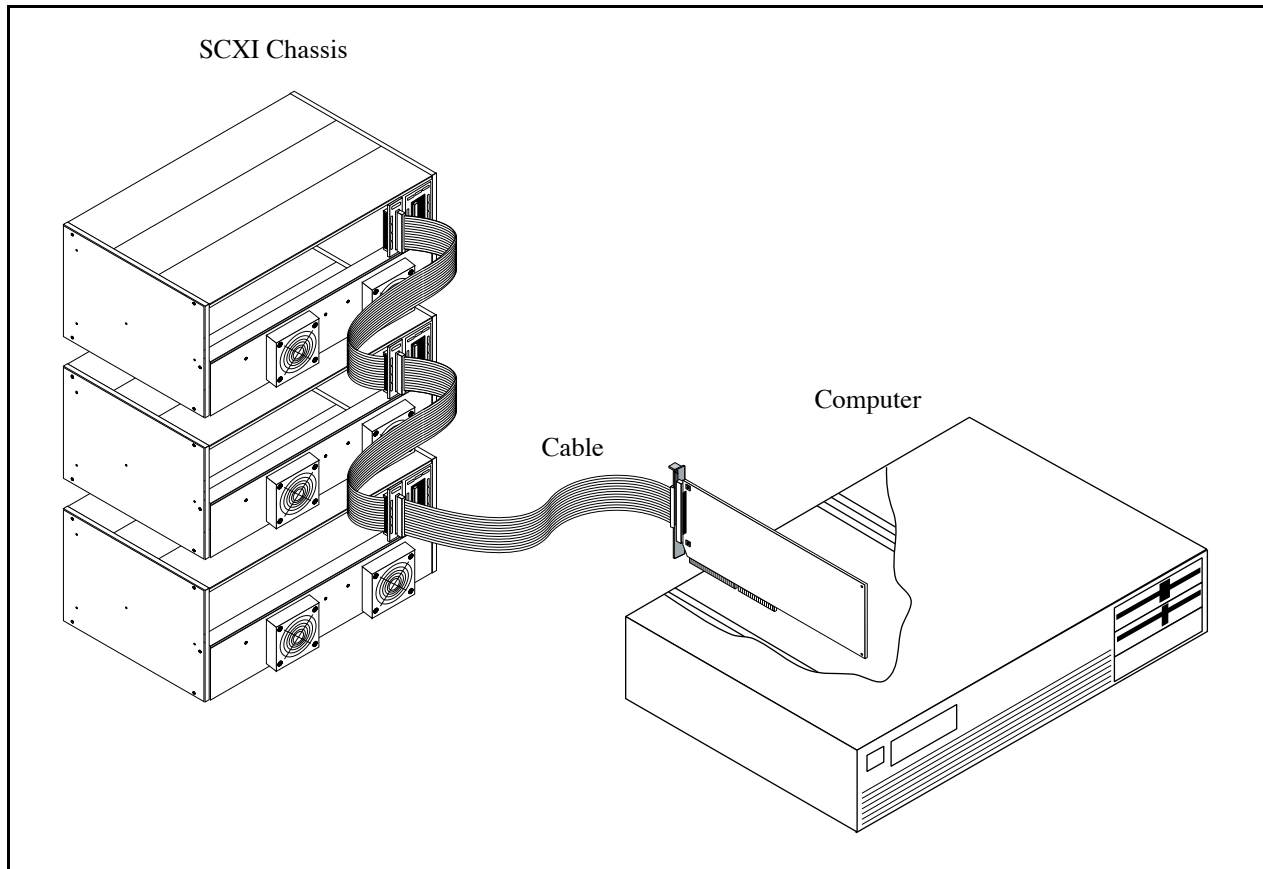

Completed Cable Installation

Perform the following steps to install the SCXI-1350 cable:

1. Turn off the power to your computer and the SCXI chassis.
2. Install your SCXI modules in the SCXI chassis according to the instructions in your module user manual.

**Note:** You cannot use SCXI-1000 chassis in a multichassis system.

3. Install your data acquisition board in a slot in your computer according to the instructions in your data acquisition board user manual.
4. If you are connecting an NB5 or NB6 cable, connect the 100-pin connector of the cable to the I/O connector of your data acquisition board. If you are connecting an NB1 cable, connect one end of the cable to the I/O connector of your data acquisition board.
5. Plug the unattached end of the cable or the 50-pin connector that contains positions 1 through 50 of the NB5 or NB6 cable into the connector with the latches at the rear of the SCXI-1350 multichassis adapter, as shown in the previous illustration.
6. Connect another NB1 ribbon cable to the chassis extender connector that is in the middle of the SCXI-1350.

7. Plug the SCXI-1350 into the back of one of the SCXI modules in the first chassis so that the connector at the rear of the module mates with the front connector on the SCXI-1350 multichassis adapter.
8. Screw the rear panel to the threaded strips in the rear of the chassis.
9. Connect the other end of the NB1 cable to the rear connector of the next SCXI-1350 multichassis adapter.
10. Repeat steps 6 through 9 until you have connected all the chassis. You do not need to connect anything to the middle connector of the SCXI-1350 multichassis adapter in the last chassis.

## SCXI-1350 Multichassis Pin Translations

The following table lists the pin connections that the SCXI-1350 multichassis adapter makes.

**Notes:** When you are cabling a system that has an MIO data acquisition board, the multichassis adapters connect analog channel 0 of the MIO board to the analog output of the first chassis. Analog channel 1 of the MIO board is connected to the analog output of the second chassis, analog channel 2 is connected to the analog output of the third chassis, and so on.

When you are cabling a system that has a DIO data acquisition board, the DIO board can control all of the chassis, but some of the extra DIO board lines will be scrambled according to the pin translation table.

# SCXI-1350 Multichassis Pin Translations

| AT-MIO-16  | DIO-24 | DIO-96 | Rear Connector | Module Connector | Extender Connector |
|------------|--------|--------|----------------|------------------|--------------------|
| AIGND      | PC7    | APC7   | 1              | 1                | 1                  |
| AIGND      | GND    | BPC7   | 2              | 2                | 2                  |
| ACH0       | PC6    | APC6   | 3              | 3                | 3                  |
| ACH8       | GND    | BPC6   | 4              | 4                | 4                  |
| ACH1       | PC5    | APC5   | 5              | 5                | 5                  |
| ACH9       | GND    | BPC5   | 6              | 6                | 6                  |
| ACH2       | PC4    | APC4   | 7              | 7                | 7                  |
| ACH10      | GND    | BPC4   | 8              | 8                | 8                  |
| ACH3       | PC3    | APC3   | 9              | 9                | 9                  |
| ACH11      | GND    | BPC3   | 10             | 10               | 10                 |
| ACH4       | PC2    | APC2   | 11             | 11               | 11                 |
| ACH12      | GND    | BPC2   | 12             | 12               | 12                 |
| ACH5       | PC1    | APC1   | 13             | 13               | 13                 |
| ACH13      | GND    | BPC1   | 14             | 14               | 14                 |
| ACH6       | PC0    | APC0   | 15             | 15               | 15                 |
| ACH14      | GND    | BPC0   | 16             | 16               | 16                 |
| ACH7       | PB7    | APB7   | 17             | 17               | 17                 |
| ACH15      | GND    | BPB7   | 18             | 18               | 18                 |
| AISENSE    | PB6    | APB6   | 19             | 19               | 19                 |
| DAC0OUT    | GND    | BPB6   | 20             | 20               | 20                 |
| DAC1OUT    | PB5    | APB5   | 21             | 21               | 21                 |
| EXTREF     | GND    | BPB5   | 22             | 22               | 22                 |
| AOGND      | PB4    | APB4   | 23             | 23               | 23                 |
| DIGGND     | GND    | BPB4   | 24             | 24               | 24                 |
| ADIO0      | PB3    | APB3   | 25             | 25               | 25                 |
| BDIO0      | GND    | BPB3   | 26             | 26               | 26                 |
| ADIO1      | PB2    | APB2   | 27             | 27               | 27                 |
| BDIO1      | GND    | BPB2   | 28             | 28               | 28                 |
| ADIO2      | PB1    | APB1   | 29             | 29               | 29                 |
| BDIO2      | GND    | BPB1   | 30             | 30               | 30                 |
| ADIO3      | PB0    | APB0   | 31             | 31               | 31                 |
| BDIO3      | GND    | BPB0   | 32             | 32               | 32                 |
| DIGGND     | PA7    | APA7   | 33             | 33               | 33                 |
| +5 V       | GND    | BPA7   | 34             | 34               | 34                 |
| +5 V       | PA6    | APA6   | 35             | 35               | 35                 |
| SCANCLK    | GND    | BPA6   | 36             | 36               | 36                 |
| EXTSTROBE* | PA5    | APA5   | 37             | 37               | 37                 |
| STARTTRIG* | GND    | BPA5   | 38             | 38               | 38                 |
| STOPTRIG   | PA4    | APA4   | 39             | 39               | 39                 |
| EXTCONV*   | GND    | BPA4   | 40             | 40               | 40                 |
| SOURCE1    | PA3    | APA3   | 41             | 41               | 41                 |
| GATE1      | GND    | BPA3   | 42             | 42               | 42                 |
| OUT1       | PA2    | APA2   | 43             | 43               | 43                 |
| SOURCE2    | GND    | BPA2   | 44             | 44               | 44                 |
| GATE2      | PA1    | APA1   | 45             | 45               | 45                 |
| OUT2       | GND    | BPA1   | 46             | 46               | 46                 |
| SOURCE5    | PA0    | APA0   | 47             | 47               | 47                 |
| GATE5      | GND    | BPA0   | 48             | 48               | 48                 |
| OUT5       | +5 V   | +5 V   | 49             | 49               | 49                 |
| FOUT       | GND    | GND    | 50             | 50               | 50                 |

**Note:** Several of the pins on other MIO boards may have slightly different names.