

COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

SELL YOUR SURPLUS

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

 Sell For Cash  Get Credit  Receive a Trade-In Deal

OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock **New**, **New Surplus**, **Refurbished**, and **Reconditioned** NI Hardware.



Bridging the gap between the manufacturer and your legacy test system.

 1-800-915-6216

 www.apexwaves.com

 sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote

 **CLICK HERE**

SCXI-1333

INSTALLATION INSTRUCTIONS

NI SCXI™-1333

Terminal Block for the NI SCXI-1129

このドキュメントには、日本語ページも含まれています。

This guide describes how to install and connect signals to the National Instruments SCXI-1333 terminal block to configure the SCXI-1129 switch module as a quad 4×16 matrix.

You can use the SCXI-1333 with the SCXI-1129 to create four, 4×16 matrices. The SCXI-1333 is a general-purpose terminal block that gives you access to all row and column connections. Because of the general-purpose nature of this terminal block, you can combine the rows and/or columns to create many different matrix configurations.

Spring terminals on the SCXI-1333 allow you to access each 4×16 matrix. The SCXI-1333 provides terminals for scanner advanced output and external input trigger signals and contains two 128-pin DIN connectors for connecting columns between modules.

Refer to the *NI Switches Getting Started Guide* to determine when to install the terminal block. Visit ni.com/switches for information on other switching solutions.

Conventions

The following conventions are used in this guide:

»

The » symbol leads you through nested menu items and dialog box options to a final action. The sequence **File»Page Setup»Options** directs you to pull down the **File** menu, select the **Page Setup** item, and select **Options** from the last dialog box.



This icon denotes a note, which alerts you to important information.



This icon denotes a caution, which advises you of precautions to take to avoid injury, data loss, or a system crash. When this symbol is marked on a product, refer to the *Read Me First: Safety and Radio-Frequency Interference* document for information about precautions to take.

bold

Bold text denotes items that you must select or click in the software, such as menu items and dialog box options. Bold text also denotes parameter names.

italic

Italic text denotes variables, emphasis, a cross-reference, or an introduction to a key concept. Italic text also denotes text that is a placeholder for a word or value that you must supply.

`monospace`

Text in this font denotes text or characters that you should enter from the keyboard, sections of code, programming examples, and syntax examples. This font is also used for the proper names of disk drives, paths, directories, programs, subprograms, subroutines, device names, functions, operations, variables, filenames and extensions, and code excerpts.

1. Unpack the Terminal Block

To avoid damage in handling the terminal block, take the following precautions:



Caution *Never* touch the exposed pins of connectors.

- Ground yourself using a grounding strap or by touching a grounded object.
- Touch the antistatic package to a metal part of your computer chassis before removing the terminal block from the package.

Remove the terminal block from the package and inspect the terminal block for loose components or any sign of damage. Notify NI if the terminal block appears damaged in any way. Do *not* install a damaged terminal block into your system.

Store the SCXI-1333 in the antistatic envelope when not in use.

2. Verify the Components

Make sure that you have the following items:

- ☐ SCXI-1333 terminal block
- ☐ SCXI chassis
- ☐ SCXI-1129 switch module
- ☐ 1/8 in. flathead screwdriver
- ☐ Numbers 1 and 2 Phillips screwdrivers
- ☐ Long-nose pliers
- ☐ Wire cutter
- ☐ Wire insulation stripper
- ☐ Matrix expansion plug (to expand the number of rows of a matrix)

3. Connect Signals

To connect the signal(s) to the terminal block, refer to Figures 1 and 2 while completing the following steps:



Caution This module is rated for Measurement Category I and intended to carry signal voltages no greater than 150 V. This module can withstand up to 800 V impulse voltage. Do not use this module for connection to signals or for measurements within Categories II, III, or IV. Do not connect to MAINS supply circuits (for example, wall outlets) of 115 or 230 VAC. Refer to the *NI Switches Getting Started Guide* for more information on measurement categories.

When hazardous voltages ($>42.4 \text{ V}_{pk}/60 \text{ VDC}$) are present on any relay terminal, safety low-voltage ($\leq 42.4 \text{ V}_{pk}/60 \text{ VDC}$) cannot be connected to any other relay terminal.

1. Prepare the signal wire by stripping the insulation no more than 7 mm from the end of the wire.
2. Remove the top cover screw.
3. Unsnap and remove the top cover.
4. Loosen the two strain-relief screws on the strain-relief bar.
5. Run the signal wires through the strain-relief opening.

6. Use a flathead screwdriver to press the spring tab of a spring terminal. Insert the stripped end of the wire fully into the spring terminal. Release the spring tab to secure the wire. No bare wire should extend past the spring terminal. Exposed wire increases the risk of a short-circuit causing a failure.
7. Connect the safety earth ground to the safety ground lug.
8. Tighten the two screws on the strain-relief assembly to secure the cables.
9. Reinstall the top cover.
10. Replace the top cover screw.

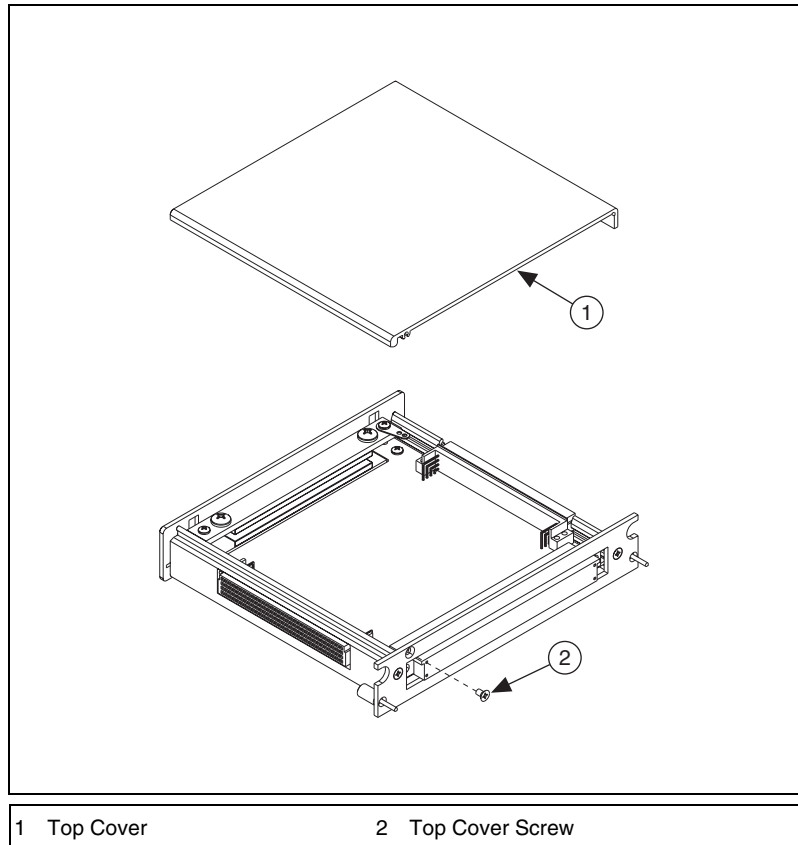


Figure 1. SCXI-1333 Top Cover Diagram

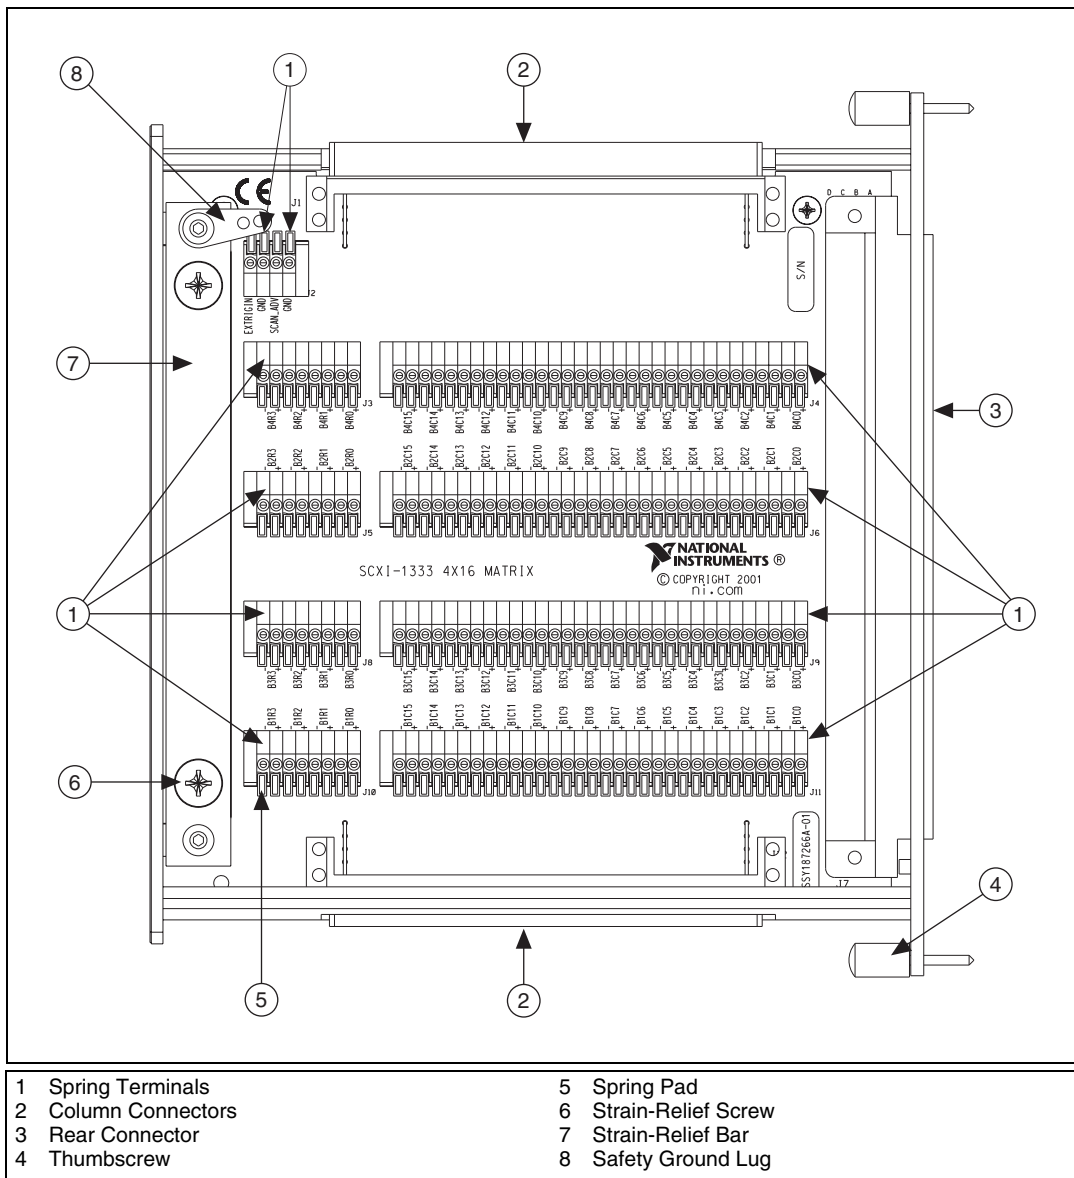


Figure 2. SCXI-1333 Parts Locator Diagram

4. Install the Terminal Block

To connect the SCXI-1333 to the SCXI-1129 front panel, refer to Figure 3 and complete the following steps:



Note Install the SCXI-1129 if you have not already done so. Refer to the *NI Switches Getting Started Guide* for more information.

1. Plug the SCXI-1333 onto the front connector of the SCXI-1129.
2. Tighten the top and bottom thumbscrews on the terminal block rear panel to hold it securely in place.

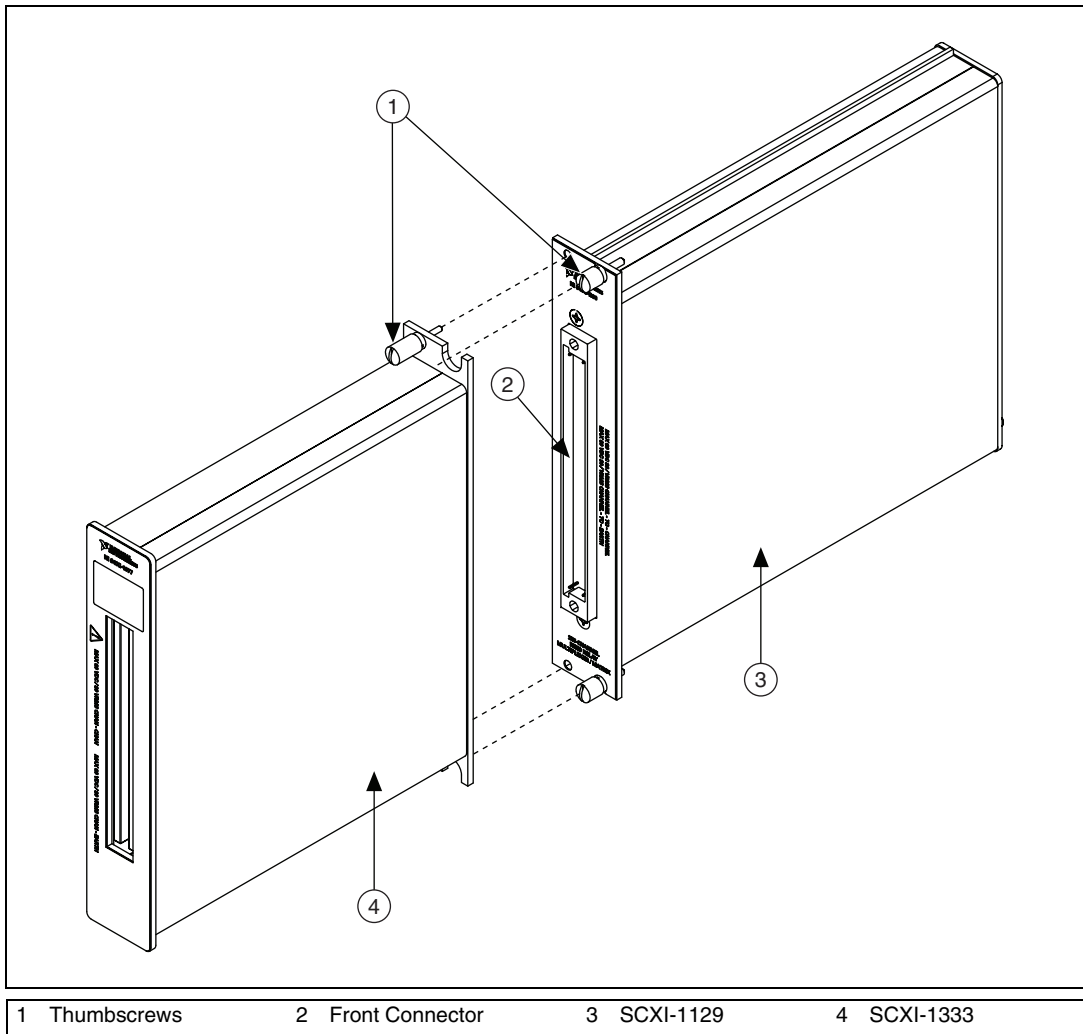


Figure 3. Installing the SCXI-1333 Terminal Block

5. Expand the Number of Rows

The SCXI-1333 offers convenient methods for expanding the number of rows of a matrix using two or more SCXI-1333 terminal blocks.



Caution When using matrix expansion plugs, only connect terminal blocks of the same type. Connecting different types of terminal blocks can damage the module or the equipment connected to the module. For example, you can connect two or more SCXI-1333 terminal blocks; however, do *not* connect the SCXI-1333 with any other type of terminal block.

Figure 4 shows how to use a matrix expansion plug with SCXI terminal blocks to expand the number of rows of a 4×32 matrix, as an example. The matrix expansion plug connects columns to expand the number of rows. To expand the number of rows of a matrix, connect a matrix expansion plug to the top or bottom column connectors of the two terminal blocks.

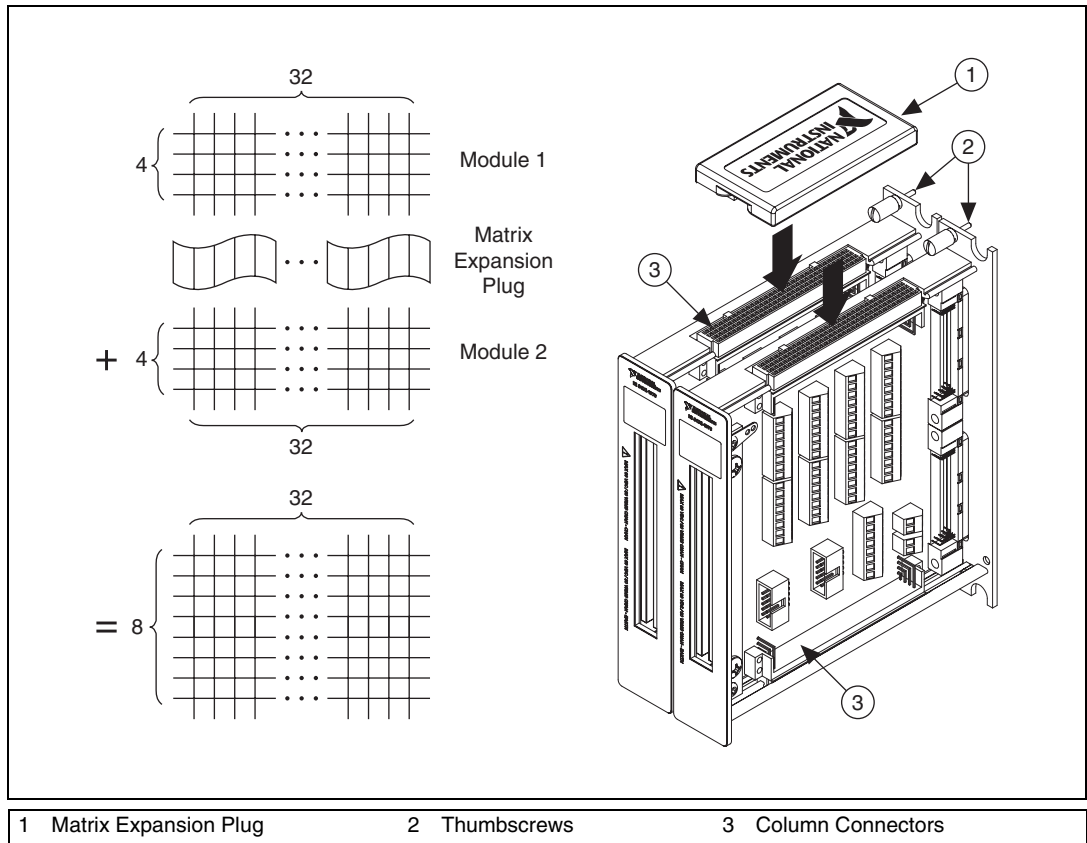


Figure 4. Expanding the Number of Rows with the Matrix Expansion Plug

The SCXI-1333 configures the SCXI-1129 as four separate 4×16 matrices. Connecting two SCXI-1333 terminal blocks as described above creates four separate 8×16 matrices.

Specifications

Maximum Working Voltage

Maximum working voltage refers to the signal voltage plus the common-mode voltage.

Channel-to-earth 150 V, Installation Category I

Channel-to-channel..... 150 V

Maximum Current

Maximum current
(per channel) 2 ADC, 2 AAC

Environmental

Operating temperature 0 to 50 °C

Storage temperature -20 to 70 °C

Humidity 10 to 90% RH, noncondensing

Pollution Degree 2

Approved at altitudes up to 2,000 m

Indoor use only

Safety

This product is designed to meet the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use:

- IEC 61010-1, EN 61010-1
- UL 3111-1, CSA 61010-1



Note For UL and other safety certifications, refer to the product label, or visit ni.com/certification, search by model number or product line, and click the appropriate link in the Certification column.

Electromagnetic Compatibility

This product is designed to meet the requirements of the following standards of EMC for electrical equipment for measurement, control, and laboratory use:

- EN 61326 EMC requirements; Minimum Immunity
- EN 55011 Emissions; Group 1, Class A
- CE, C-Tick, ICES, and FCC Part 15 Emissions; Class A



Note For EMC compliance, operate this device with shielded cables.

CE Compliance

This product meets the essential requirements of applicable European Directives, as amended for CE marking, as follows:

- 2006/95/EC; Low-Voltage Directive (safety)
- 2004/108/EC; Electromagnetic Compatibility Directive (EMC)



Note Refer to the Declaration of Conformity (DoC) for this product for any additional regulatory compliance information. To obtain the DoC for this product, visit ni.com/certification, search by model number or product line, and click the appropriate link in the Certification column.

Environmental Management

National Instruments is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial not only to the environment but also to NI customers.

For additional environmental information, refer to the *NI and the Environment* Web page at ni.com/environment. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document.

Waste Electrical and Electronic Equipment (WEEE)



EU Customers At the end of their life cycle, all products *must* be sent to a WEEE recycling center. For more information about WEEE recycling centers and National Instruments WEEE initiatives, visit ni.com/environment/wEEE.htm.

电子信息产品污染控制管理办法（中国 RoHS）



中国客户 National Instruments 符合中国电子信息产品中限制使用某些有害物质指令 (RoHS)。关于 National Instruments 中国 RoHS 合规性信息, 请登录 ni.com/environment/rohs_china。(For information about China RoHS compliance, go to ni.com/environment/rohs_china.)

National Instruments, NI, ni.com, and LabVIEW are trademarks of National Instruments Corporation. Refer to the *Terms of Use* section on ni.com/legal for more information about National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products, refer to the appropriate location: **Help»Patents** in your software, the `patents.txt` file on your CD, or ni.com/patents.