#### **COMPREHENSIVE SERVICES**

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

#### **SELL YOUR SURPLUS**

We buy new, used, decommissioned, and surplus parts from every NI series. We work out the best solution to suit your individual needs.

Sell For Cash Get Credit Receive a Trade-In Deal

# **OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP**

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.



**Bridging the gap** between the manufacturer and your legacy test system.

0

1-800-915-6216



www.apexwaves.com

sales@apexwaves.com

All trademarks, brands, and brand names are the property of their respective owners.

Request a Quote




sbRIO-9870

# OPERATING INSTRUCTIONS AND SPECIFICATIONS

# NI 9870E

4-Port, RS232 Serial Module

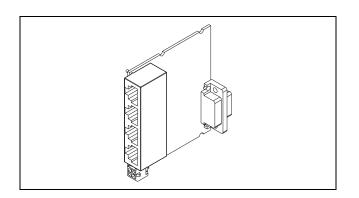



This document describes how to use the National Instruments 9870E and includes dimensions, pin assignments, and specifications for the NI 9870E. Visit ni.com/info and enter rdsoftwareversion to determine which software you need for the modules you are using. For information about installing, configuring, and programming the system, refer to the system documentation. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.



**Caution** National Instruments makes no electromagnetic compatibility (EMC) or CE marking compliance claims for the NI 9870E. The end-product supplier is responsible for conformity to any and all compliance requirements.



**Caution** The NI 9870E must be installed inside a suitable enclosure prior to use. Hazardous voltages may be present.

#### NI 9870E Hardware Overview

The NI 9870E has four full-featured, independent RS232 DTE ports that are isolated from the other modules in the system. Each port is fully compatible with the ANSI/EIA/TIA-232 standard.

#### NI 9870E Dimensions

The following figure shows the dimensions of the NI 9870E.

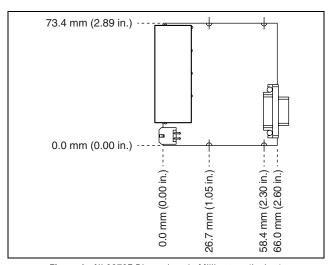


Figure 1. NI 9870E Dimensions in Millimeters (Inches)

# Connecting the NI 9870E

The NI 9870E has four RJ-50 receptacles that provide connections for four RS232 devices.

Table 1. NI 9870E Pin Assignments

Connector	RJ-50 Pin	Signal Name*
RJ50 Jack  1 NC 2 RI 3 CTS 4 RTS 5 DSR 6 COM 7 DTR 8 TXD 9 RXD 10 DCD	1	No Connect
	2	RI
	3	CTS
	4	RTS
	5	DSR
	6	COM
	7	DTR
	8	TXD
	9	RXD
	10	DCD

Some kits contain a cable that converts the RJ-50 pinout to the standard NI pinout on a DB-9 male connector, as shown in Table 2.

Table 2. Pin Assignments for RS232 DB-9 Male Connector

Connector	Pin	Signal
	1	DCD
	2	RXD
0	3	TXD
6 0 1	4	DTR
6   0 0   1 7   0 0   2 8   0 0   4 9   0 0   5	5	COM
9 0 5	6	DSR
0	7	RTS
	8	CTS
	9	RI

You must connect an external power supply to the NI 9870E. This power supply provides the power for the RS232 transceivers on the module. Use the included female four-position pigtail to connect to an external voltage source. Figure 2 lists the connections between an external voltage source (of +8 V to +28 V) and the NI 9870E.

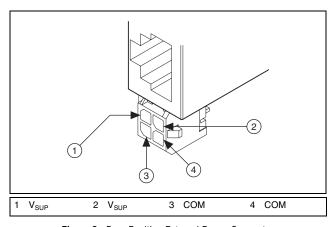


Figure 2. Four-Position External Power Connector

Figure 3 shows the method of power connection to the NI 9870E module. Attach an isolated power supply to the  $V_{sup}$  and COM terminals using the included pigtail.

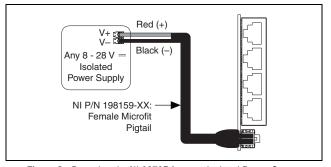


Figure 3. Powering the NI 9870E from an Isolated Power Source

Figure 4 shows how to use the optional y-adapter (available at ni.com/serial) to connect power to more than one module using the same power source. One y-adapter is needed for each additional module. Ensure that the power supply can handle maximum power requirements for all modules connected.



# **Caution** All connections must be made before power is applied.

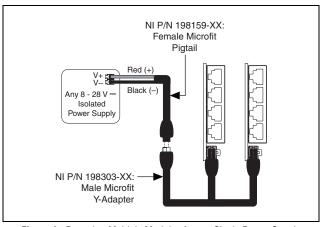


Figure 4. Powering Multiple Modules from a Single Power Supply

### Sleep Mode

This module supports a low-power sleep mode. Support for sleep mode at the system level depends on the chassis that the module is plugged into. Refer to the chassis manual for information about support for sleep mode. If the chassis supports sleep mode, refer to the software help for information about enabling sleep mode. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.

Typically, when a system is in sleep mode, you cannot communicate with the modules. In sleep mode, the system consumes minimal power and may dissipate less heat than it does in normal mode. Refer to the *Specifications* section for more information about power consumption and thermal dissipation.

## **Specifications**

The following specifications are typical for the range -40 to  $85\,^{\circ}\mathrm{C}$  internal to any enclosures unless otherwise noted.

### Input/Output Characteristics

Maximum baud rate	921.6 kbps
Maximum cable length	250 pF equivalent



**Note** Cable capacitance greater than 250 pF may adversely affect the maximum baud rate and thermal dissipation.

Maximum RS232 Receive signal (RXD, CTS, DSR, DCD, RI)
Continuous Voltage......±8 V



**Note** Continuous RS232 input voltages in excess of ±8 V may cause excessive thermal dissipation.

Data line ESD protection (human body model).....±15 kV



**Note** Contact NI for Bellcore MTBF specifications at other temperatures or for MIL-HDBK-217F specifications.

#### **Power Requirements**

Power consumption from chassis		
Active mode	0.5 W max	
Sleep mode	.50 μW max	
Thermal dissipation (at 70 °C)		
Active mode	1.5 W max	
Sleep mode	0.5 W max	
Required external supply voltage range (V <sub>SUP</sub> )	+8 to +28 VDC	
Power supply consumption from external supply $V_{SUP}$		
Typical	0.5 W	
Maximum	2 W	

#### **Physical Characteristics**

Use a dry, low-velocity stream of air to clean the module. If needed, use a soft-bristle brush for cleaning around components.

Weight......Approx. 55 g (1.9 oz)

#### Safety

#### Maximum Voltage<sup>1</sup>

Connect only voltages that are within the following limits.

RS232 Receive Signal-to-COM

(RXD, CTS, DSR, DCD, RI).....±25 V max,

Measurement Category I

RS232 Transmit Signal-to-COM

(TX, RTS, DTR) .....±13.2 V max,

Measurement Category I

V<sub>SUP</sub>-to-COM .....±28 V max,

Measurement Category I

<sup>&</sup>lt;sup>1</sup> The maximum voltage that can be applied or output without creating a safety hazard.

#### Isolation

Port-to-earth ground

Continuous ......60 VDC,

Measurement Category I

(Double Insulation)

Measurement Category I is for measurements performed on circuits not directly connected to the electrical distribution system referred to as *MAINS* voltage. MAINS is a hazardous live electrical supply system that powers equipment. This category is for measurements of voltages from specially protected secondary circuits. Such voltage measurements include signal levels, special equipment, limited-energy parts of equipment, circuits powered by regulated low-voltage sources, and electronics.



**Caution** Do not connect to signals or use for measurements within Measurement Categories II, III, or IV.

#### Safety Standards

The NI 9870E is designed to meet the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use when installed in a suitable enclosure:

- IEC 61010-1, EN 61010-1
- UL 61010-1, CSA 61010-1



**Note** For UL and other safety certifications, refer to the product label or the *Online Product Certification* section.

#### **Online Product Certification**

Refer to the product Declaration of Conformity (DoC) for additional regulatory compliance information. To obtain product certifications and the DoC for this product, visit ni.com/certification, search by module number or product line, and click the appropriate link in the Certification column.

#### **Environmental**

National Instruments C Series modules are intended for indoor use only but may be used outdoors if installed in a suitable enclosure. Refer to the manual for the chassis you are using for more information about meeting these specifications.

Operating temperature (IEC 60068-2-1, IEC 60068-2-2) $-40$ to $85$ °C
Storage temperature (IEC 60068-2-1, IEC 60068-2-2) –40 to 85 $^{\circ}\text{C}$
Operating humidity (IEC 60068-2-56)10 to 90% RH, noncondensing
Storage humidity
(IEC 60068-2-56)5 to 95% RH, noncondensing
Maximum altitude2,000 m
Pollution Degree (IEC 60664)2

#### **Environmental Management**

NI is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial to the environment and to NI customers.

For additional environmental information, refer to the *NI* and the *Environment* Web page at ni.com/environment. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document

#### Waste Electrical and Electronic Equipment (WEEE)



**EU Customers** At the end of the life cycle, all products must be sent to a WEEE recycling center. For more information about WEEE recycling centers and National Instruments WEEE initiatives, visit ni.com/ environment/weee.

#### 电子信息产品污染控制管理办法 (中国 RoHS)



P 中国客户 National Instruments 符合中国电子信息 产品中限制使用某些有害物质指令 (RoHS)。关于 National Instruments 中国 RoHS 合规性信息, 请登录 ni.com/environment/rohs china。 (For information about China RoHS compliance, go to ni.com/ environment/rohs\_china.)

### Where to Go for Support

The National Instruments Web site is your complete resource for technical support. At ni.com/support you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

National Instruments corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. National Instruments also has offices located around the world to help address your support needs. For telephone support in the United States, create your service request at ni.com/support and follow the calling instructions or dial 512 795 8248. For telephone support outside the United States, contact your local branch office:

Australia 1800 300 800, Austria 43 662 457990-0, Belgium 32 (0) 2 757 0020, Brazil 55 11 3262 3599, Canada 800 433 3488, China 86 21 5050 9800, Czech Republic 420 224 235 774, Denmark 45 45 76 26 00, Finland 358 (0) 9 725 72511, France 01 57 66 24 24, Germany 49 89 7413130, India 91 80 41190000, Israel 972 3 6393737, Italy 39 02 41309277, Japan 0120-527196,

Korea 82 02 3451 3400, Lebanon 961 (0) 1 33 28 28, Malaysia 1800 887710, Mexico 01 800 010 0793, Netherlands 31 (0) 348 433 466, New Zealand 0800 553 322, Norway 47 (0) 66 90 76 60, Poland 48 22 328 90 10, Portugal 351 210 311 210, Russia 7 495 783 6851, Singapore 1800 226 5886, Slovenia 386 3 425 42 00, South Africa 27 0 11 805 8197, Spain 34 91 640 0085, Sweden 46 (0) 8 587 895 00, Switzerland 41 56 2005151, Taiwan 886 02 2377 2222, Thailand 662 278 6777, Turkey 90 212 279 3031, United Kingdom 44 (0) 1635 523545

National Instruments, NI, ni.com, and LabVIEW are trademarks of National Instruments Corporation. Refer to the Terms of Use section on ni.com/legal for more information about National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: Help-Patents in your software, the patents.txt file on your media, or the National Instruments Patent Notice at ni.com/oatents.

© 2008 National Instruments Corp. All rights reserved.